

XLR8RemoteControl App User Guide




The App connects your phone to the bot via your phone's Bluetooth.


Install the apk, and search for this above icon to open the app.

Check this link if you don't know how to install apk files :


<http://www.tech-recipes.com/rx/22616/android-allow-installation-of-non-market-apps/>

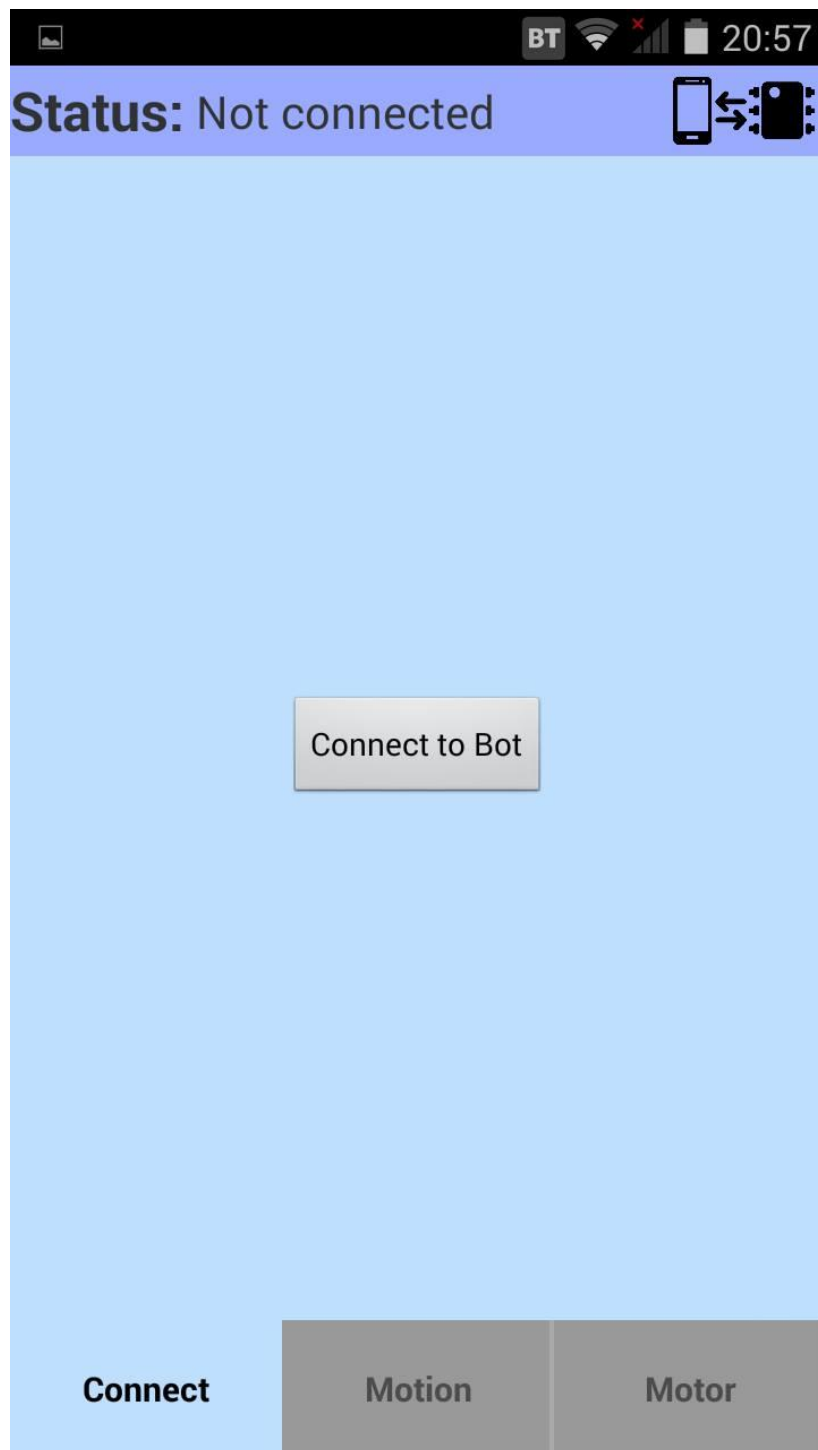

Connect to the bot first, either by clicking the button at centre of the page or the icon in top-right corner

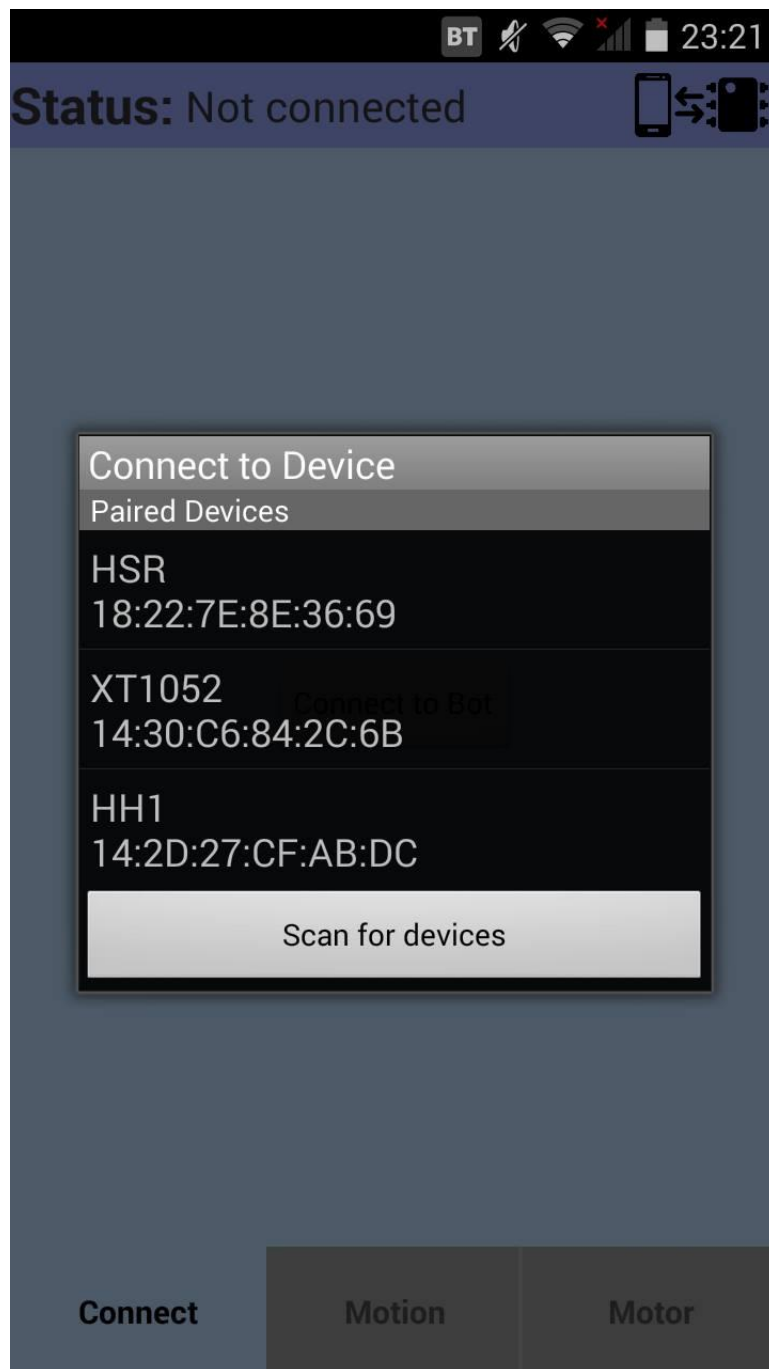


You will need to pair first. Click on “Scan for devices”

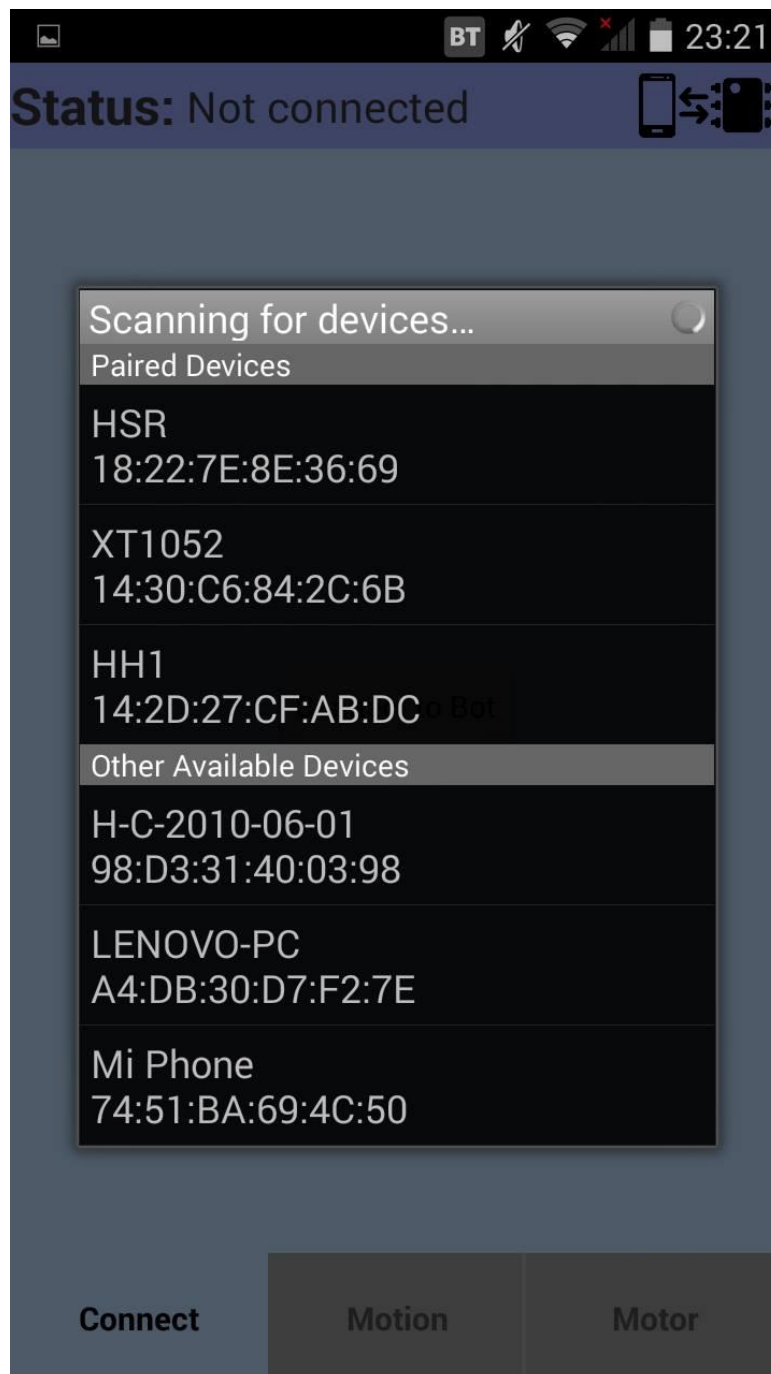

Select a device named “H-C-<random-string-of-numbers>” from the list of Other Available Devices

Note: If you see more than one “H-C...” devices, you might be in range of more than one bots. Go to an isolated area with your bot and then pair. If you connect with the wrong bot, it will be a problem

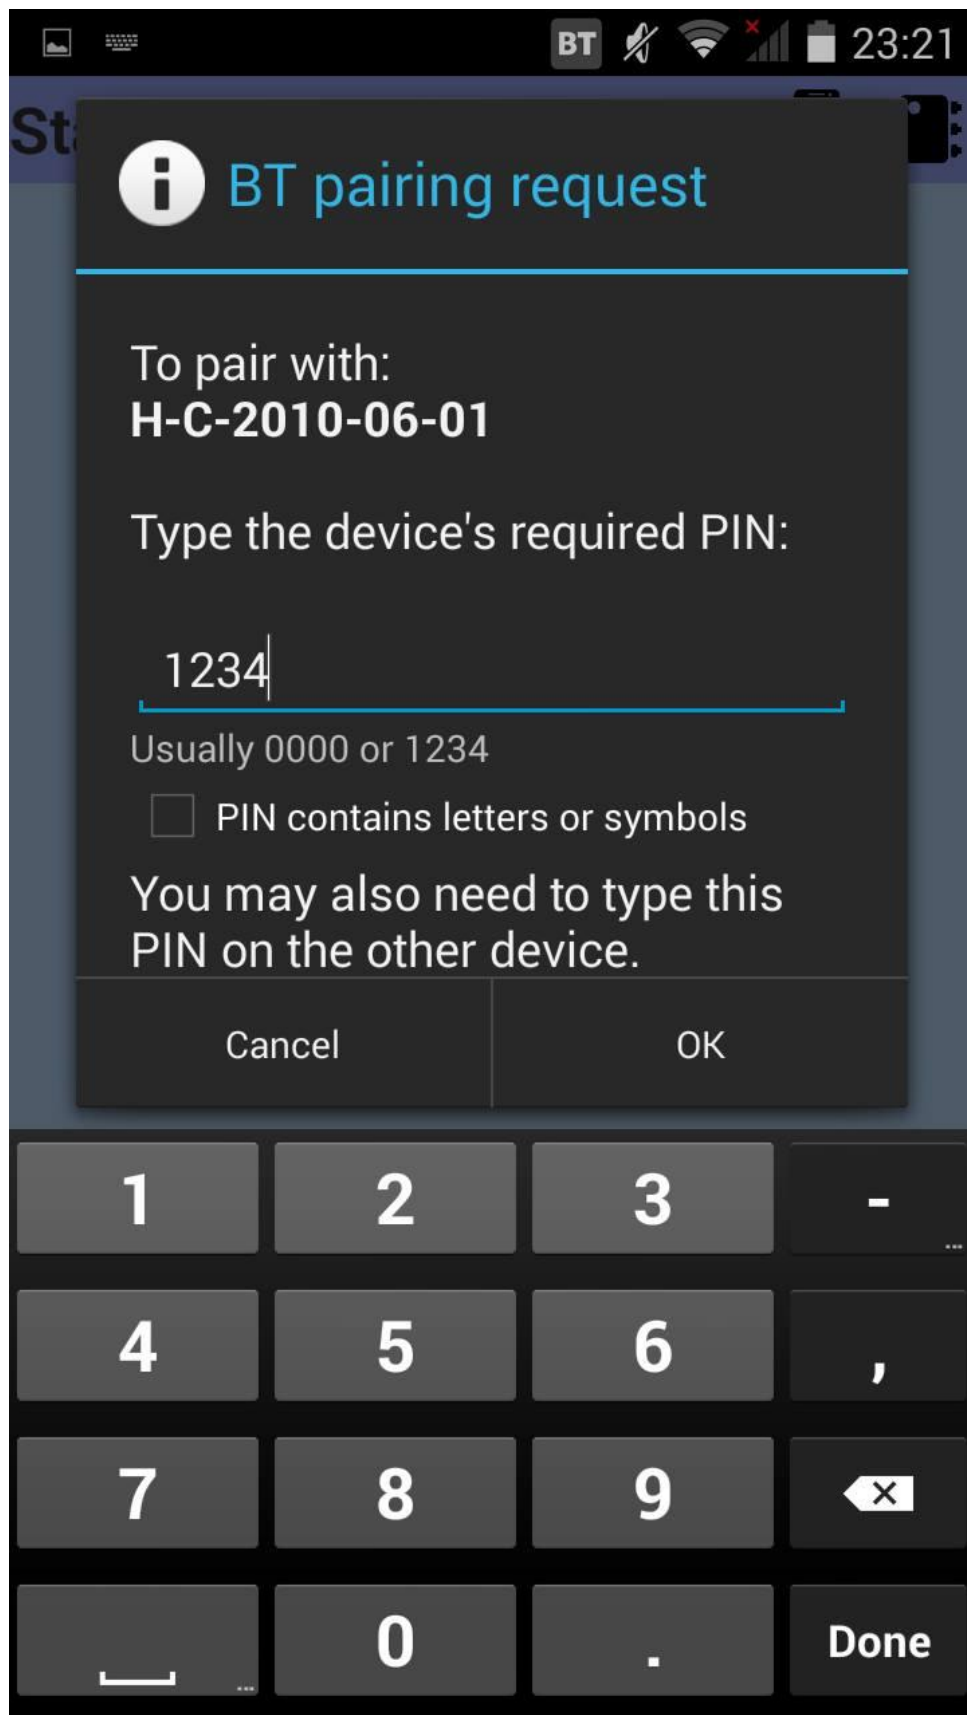


Enter PIN as “1234”. It is the default.

**You have now paired successfully, “Connect to bot”
again to start rolling!**




**Choose the device with which you paired earlier. It
will appear in the list of Paired Devices and name will
be same “H-C...”**

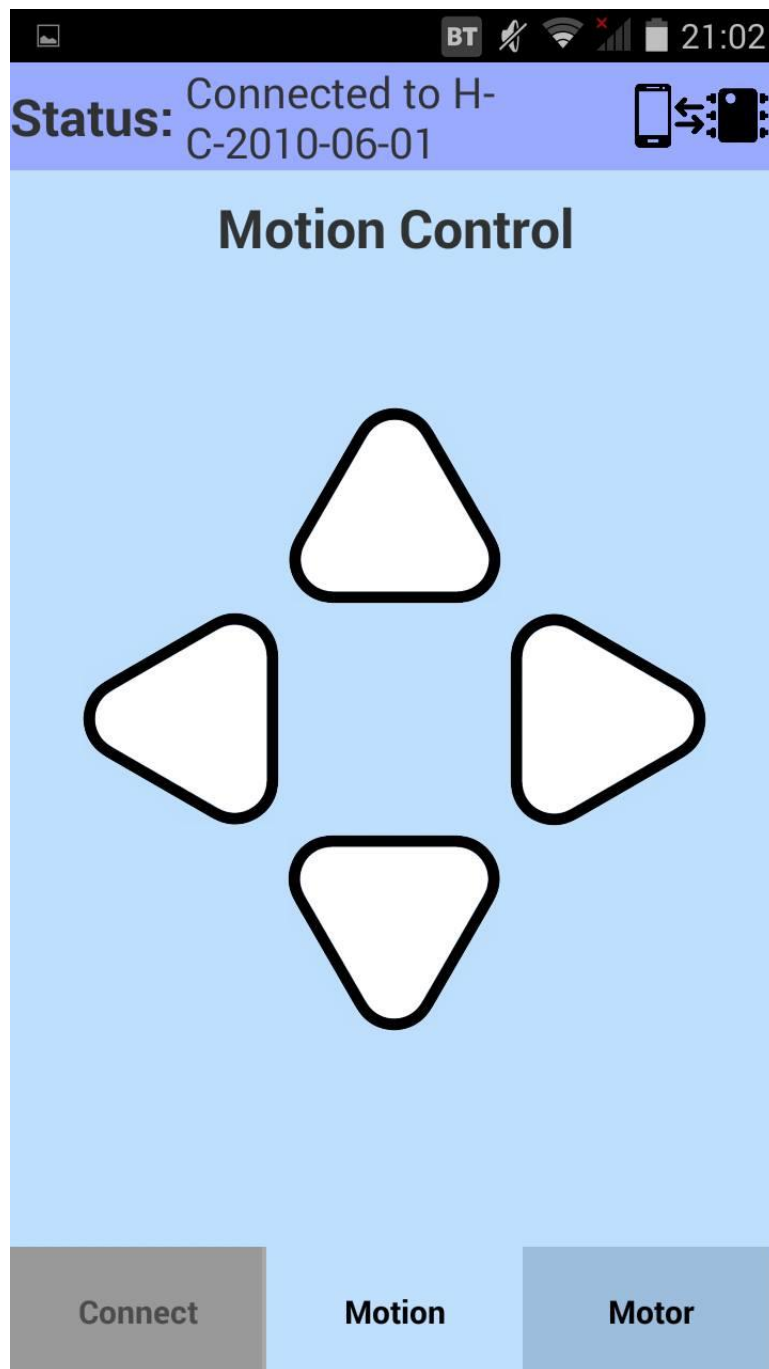

This is “Motion Control” mode. It is a basic mode with which you can move your bot forward, backward and turn it left and right with the respective buttons.

Note: This will only work with differential mechanism

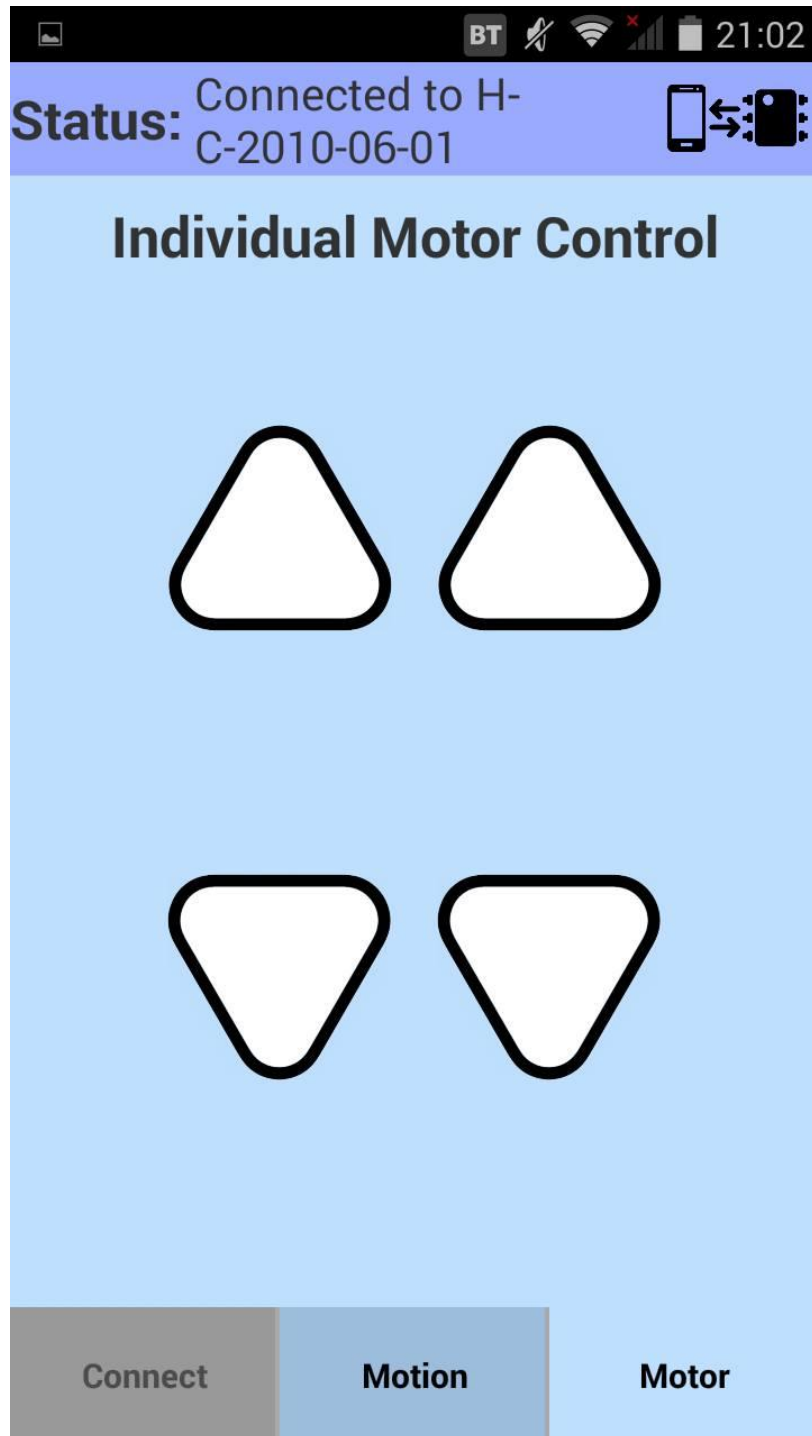

This is “Individual Motor Control” mode. You can control left and right motors individually by pressing the buttons simultaneously. Each motor can be moved forward or backward.