


Connectors documentation:

Signals


FMC_GP_D_N7	PWM4
FMC_GP_D_P7	PWM3
FMC_GP_D_N6	PWM2
FMC_GP_D_P6	PWM1
FMC_GP_D_N5	PWM5
FMC_GP_D_P5	PWM6
FMC_GP_D_N4	PWM7
FMC_GP_D_P4	PWM8

J2_1

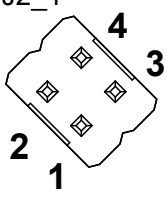


1	PWM_MOT
2	PWM1
3	PWM5
4	PWM_MOT

Motor connector (J1_1)

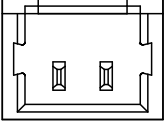


1	BAT+
2	SW1

J2_2

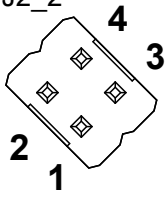


1	PWM_MOT
2	PWM2
3	PWM6
4	PWM_MOT

Motor connector (J1_2)

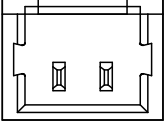


1	BAT+
2	SW2

J2_3

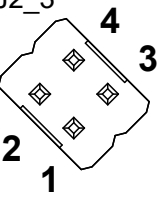


1	PWM_MOT
2	PWM3
3	PWM7
4	PWM_MOT

Motor connector (J1_3)

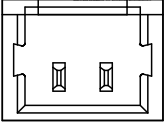


1	BAT+
2	SW3

J2_4

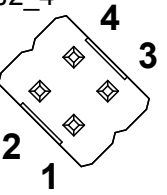

1	PWM_MOT
2	PWM4
3	PWM8
4	PWM_MOT

Motor connector (J1_4)

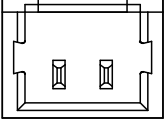

1	BAT+
2	SW4


Power supply connector (J9)

1	BAT+
2	BAT-

Battery connector (J10)

1	BAT-
2	BAT+

View from Top side (Scale 1:1)

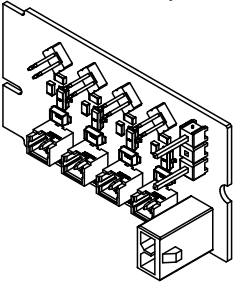

View from Top side (Scale 4:1)

