

IP Based Surveillance Camera



Fixed Network
Camera



Fixed Dome IP
Camera



Dome PTZ
Camera



Non-
Mechanical PTZ




PTZ Dome IP
Camera



Day & Night IP
Camera

Connecting to the IPCAM: 1. Connect the IP camera to your router via standard RJ45 network cable, and plug it into the mains supply. Your computer should already be connected to the router. Or If you have a laptop, you can connect the IP camera to the network port of your laptop using the same standard RJ45 network cable.

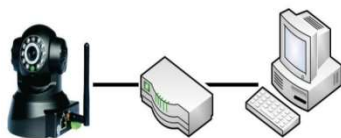

2. The “Inner access” address can be used to access your IP camera on the local network, via a Web browser. Make a note of this address. It is called the default IP address which is assigned to the IP camera by its manufacturer. It will be in a format similar to this: <http://192.168.1.126:81>. Enter Username and Password given by manufacturer, select device and set IP address.