

USART - BootLoader

SOLUTION TO THE PROBLEM
AN EXAMPLE PROGRAM

Ataberk ÖKLÜ
STG STAJYER

İçindekiler

The bootloader on USART / UART interface.....	2
How to enter the bootloader process.....	2
Where is this Boot0 Pin?.....	3
Boot0 pin problem?.....	4
First Step: UART RX Interrupt.....	4
Reset2BootLoader Function Definition.....	4
Flash Write Function Definition.....	4
Second Step: Soft-Reset Handling.....	5
Memory Mapping.....	6
How to Connect Devices.....	7
Which Port the device is using.....	7
What Happens in Bootloader Process.....	8
How can we order a command.....	11
Communication Safety.....	11
Receiving Information via Bootloader.....	12
How to Write our code - Write Memory command.....	13
Where to write our code.....	14
Some constraints we need to obey.....	14
Example Code to be Written.....	15
An Example Program – STM32 Flasher.....	16
Connection Properties.....	16
Read or Write Protection.....	17
GET Information from the device via bootloader.....	18
WRITE CMD.....	19

The bootloader via USART / UART interface

How to enter the bootloader process

The STM32L47xxx/48xxx bootloader is activated by applying Pattern 7.

Pattern	Condition
Pattern 1	Boot0(pin) = 1 and Boot1(pin) = 0
Pattern 2	Boot0(pin) = 1 and nBoot1(bit) = 1
Pattern 3	Boot0(pin) = 1, Boot1(pin) = 0 and BFB2(bit) = 1
	Boot0(pin) = 0, BFB2(bit) = 0 and both banks do not contain valid code
	Boot0(pin) = 1, Boot1(pin) = 0, BFB2(bit) = 0 and both banks do not contain valid code
Pattern 4	Boot0(pin) = 1, Boot1(pin) = 0 and BFB2(bit) = 1
	Boot0(pin) = 0, BFB2(bit) = 0 and both banks do not contain valid code
	Boot0(pin) = 1, Boot1(pin) = 0 and BFB2(bit) = 0
Pattern 5	Boot0(pin) = 1, Boot1(pin) = 0 and BFB2(bit) = 0
	Boot0(pin) = 0, BFB2(bit) = 1 and both banks do not contain valid code
	Boot0(pin) = 1, Boot1(pin) = 0 and BFB2 (bit) = 1
Pattern 6	Boot0(pin) = 1, nBoot1(bit) = 1 and nBoot0_SW(bit) = 1
	nBoot0(bit) = 0, nBoot1(bit) = 1 and nBoot0_SW(bit) = 0
	Boot0(pin) = 0, nBoot0_SW(bit) = 1 and main Flash memory empty
	nBoot0(bit) = 1, nBoot0_SW(bit)=0 and main Flash memory empty
Pattern 7	Boot0(pin) = 1, nBoot1(bit) = 1 and BFB2(bit) = 0
	Boot0(pin) = 0, BFB2(bit) = 1 and both banks do not contain valid code
	Boot0(pin) = 1, nBoot1(bit) = 1 and BFB2(bit) = 1
Pattern 8	Boot(pin) = 0 and BOOT_ADD0(optionbyte) = 0x0040
	Boot(pin) = 1 and BOOT_ADD1(optionbyte) = 0x0040

Figure 1 - BootLoader Activation Patterns - [Source](#)


Boot mode selection		Boot mode
nBOOT1 (option bit)	BOOT0 (pin)	
X	0	User Flash memory
1	1	System memory (bootloader)
0	1	SRAM1

← **DEFAULT**

← **DEBUG**

Figure 2 - Boot Modes - [Source](#)

Where is this Boot0 Pin?

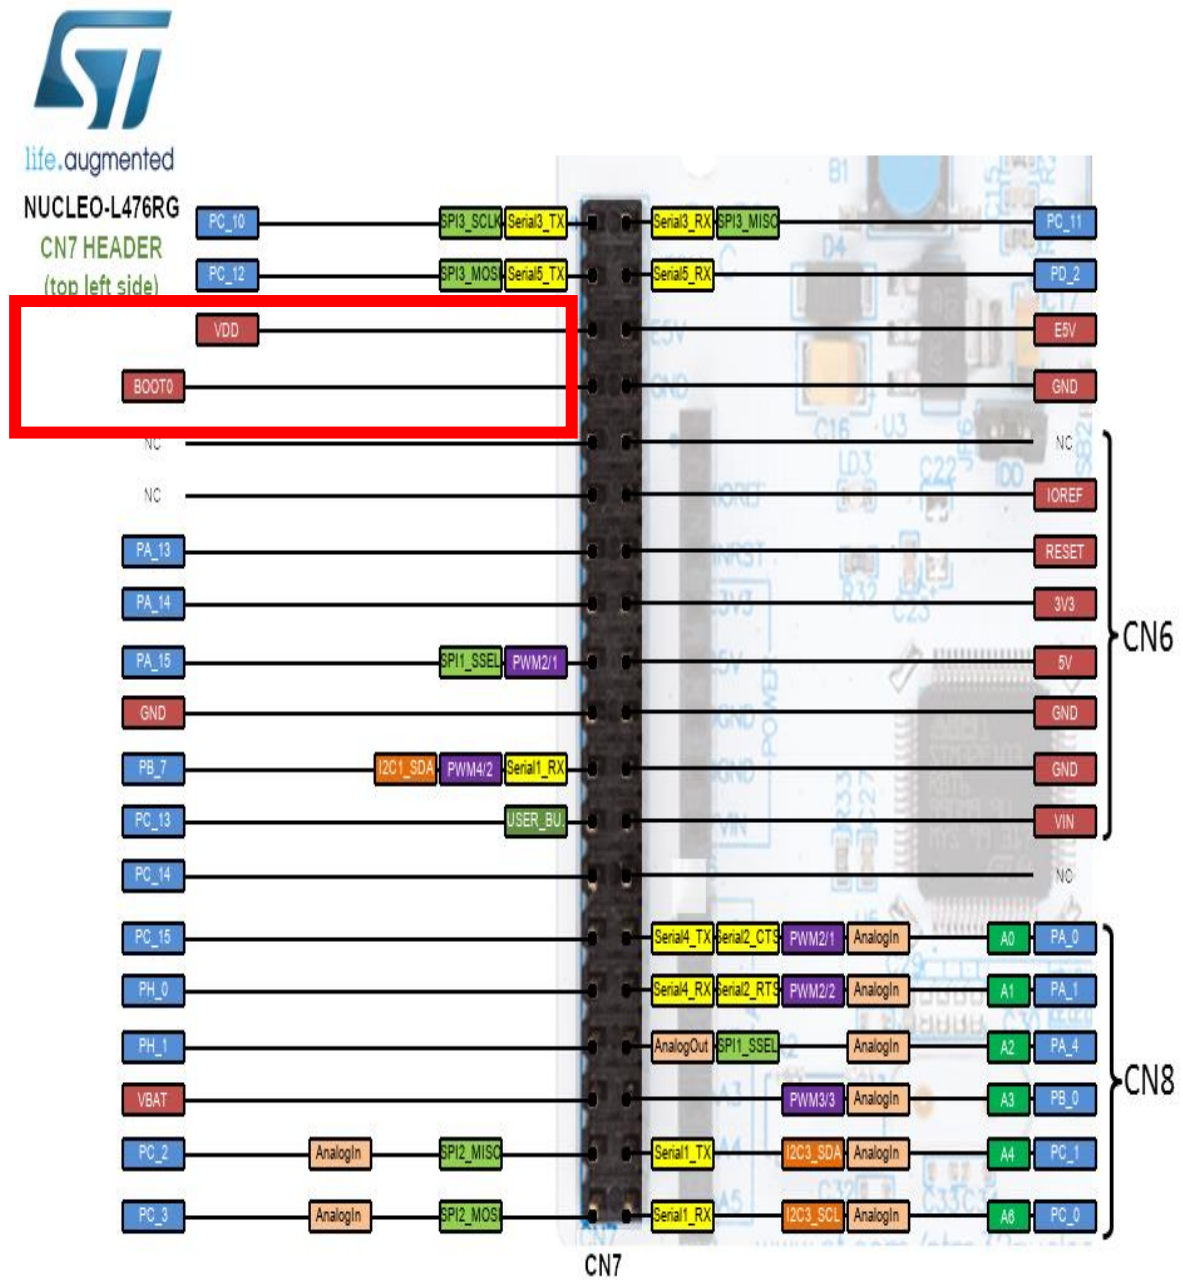

For convention, pushing Boot0 pin to HIGH, then resetting results in BootLoader Mode.

Boot0 pin problem?

Since Boot0 pin should be pushed HIGH by physically, it requires at least one more pin accessed from outside world other than GND, RX, and TX, reserved UART pins. We needed to bypass this requirement to achieve jump to BootLoader @ System Memory (0x1FFF0000).

The constructed bypasser is using the method of "Cipher Check." The method is merely checking the value at the predefined memory location, whether it is the predetermined cipher, triggering the jump to BootLoader @ System Memory (0x1FFF0000) (See [Memory Mapping](#)). If it is not the case, Reset_Handler @ startup.s file initiates the main program as default. However, when cipher is caught at the predefined memory location, then Reset_Handler, mention above, executes the Reboot_Loader routine in the startup.s file. And, the only way the cipher to be written to the specified location is triggering the RX Interrupt of reserved UART pins. Moreover, the following executions guarantee that cipher is invalidated to prevent repetitive executions of Reboot_Loader, mentioned above. Let us examine the method elaborately.

First Step: UART RX Interrupt

When RX of the reserved accessible UART interface is triggered, it calls USARTx_IRQHandler, which is executing the Reset2BootLoader function defined in main.c file:

Reset2BootLoader Function Definition

```
void Reset2BootLoader(void)
{
    FlashWrite(CIPHER_ADDR , MAGIC_CIPHER);           // Write Special Code
    "ATABERK" to End of the SRAM2 0x2000 0000
    HAL_NVIC_ClearPendingIRQ(USART1_IRQn);           // USART1 Pending Bit RESET
    __DSB();                                           // Blocking The Program
    until every memory instructions are done.
    NVIC_SystemReset();                               // Soft-RESET -> startup.s
    file -> RESET_HANDLER + REBOOT_LOADER
}
```

Flash Write Function Definition

```
void FlashWrite(uint32_t address, uint32_t data){
// WHEN ADDR IS @ SRAM1, IT IS SUFFICIENT
*((volatile uint32_t*)(address)) = data;

// IF FLASH IS SELECTED, THE CODE BELOW
/*      FLASH WRITER START
uint32_t PAGEError = 0;
FLASH_EraseInitTypeDef EraseInitStruct;
EraseInitStruct.TypeErase = FLASH_TYPEERASE_PAGES;
EraseInitStruct.Page = 255;
EraseInitStruct.NbPages = 1;
EraseInitStruct.Banks    = FLASH_BANK_1;

HAL_FLASH_Unlock();
__HAL_FLASH_CLEAR_FLAG(FLASH_FLAG_EOP | FLASH_FLAG_OPERR |
FLASH_FLAG_WRPERR | FLASH_FLAG_PGAERR | FLASH_FLAG_PGSERR );

if (HAL_FLASHEx_Erase(&EraseInitStruct, &PAGEError) != HAL_OK)
    HAL_FLASH_GetError();

HAL_FLASH_Program(FLASH_TYPEPROGRAM_DOUBLEWORD, address, data);
HAL_FLASH_Lock();
FLASH WRITER END      */
}
```

Second Step: Soft-Reset Handling

When the device is reset, Reset_Handler @ startup.s file runs:

```
; Reset_Handler
Reset_Handler    PROC
                   EXPORT Reset_Handler            [WEAK]
                   IMPORT SystemInit
                   IMPORT __main

                   LDR     R0, =0x2000FFF0 ; CIPHER_ADDR @ END_OF_SRAM1
                   LDR     R1, =0xA7ABE12C ; ATABE R K - The MAGIC_CIPHER
                   LDR     R2, [R0]        ; Take the value CIPHER_ADDR
                   STR     R0, [R0]        ; Write itself onto itself
                   CMP     R2, R1          ; CHECKING PROCCES
                   BEQ     Reboot_Loader   ; IF true: Execute Reboot_Loader

                   LDR     R0, =SystemInit
                   BLX     R0
                   LDR     R0, =__main
                   BX      R0
                   ENDP

; Reboot_Loader
Reboot_Loader    PROC
                   EXPORT Reboot_Loader

                   LDR     R0, =0x40021060 ; RCC_APB2ENR
                   LDR     R1, =0x00000001 ; ENABLE SYSCFG CLOCK
                   STR     R1, [R0]

                   LDR     R0, =0x40010000 ; SYSCFG_MEMRMP
                   LDR     R1, =0x00000001 ; MAP ROM AT ZERO
                   STR     R1, [R0]
                   LDR     R0, =0x1FFF0000 ; SYSTEM_MEMORY_STARTING_ADDR
                   LDR     SP, [R0, #0]    ; SP @ +0
                   LDR     R0, [R0, #4]    ; PC @ +4 - RESET VECTOR
                   BX      R0

                   ENDP
```

Firstly, the cipher and the address are 0xA7ABE12C and 0x2000FFF0, respectively. The memory address is selected to be at the end of the SRAM1 portion of the STM32L476 MCU so that we can safely overwrite even there is a variable using this address. (See [Memory Mapping](#)).

In Reset_Handler routine, we check if this address holds any but the cipher. In the case of the cipher existence, indicating that UART RX Interrupt has occurred, Reset_Handler executes the Reboot_Loader routine. In the Reboot_Loader, we first enable RCC, Clock, and Memory Initiations then jump to 0x1FFF0000 address holding the BootLoader @ System Memory (See [Memory Mapping](#)), and goes its Reset_Vector lying 4 bytes offset from the SP. Moreover, writing the cipher address into itself performs invalidation of the cipher at each reset, avoiding recursive occurrence.

On the other hand, not founding the cipher in the address means no UART RX Interrupt triggered, therefore, no need to jump to BootLoader. Then, hence the condition is not satisfied; Reset_Handler continues with loading SystemInit and jumps to the __main vector – the main program vector.

Memory Mapping

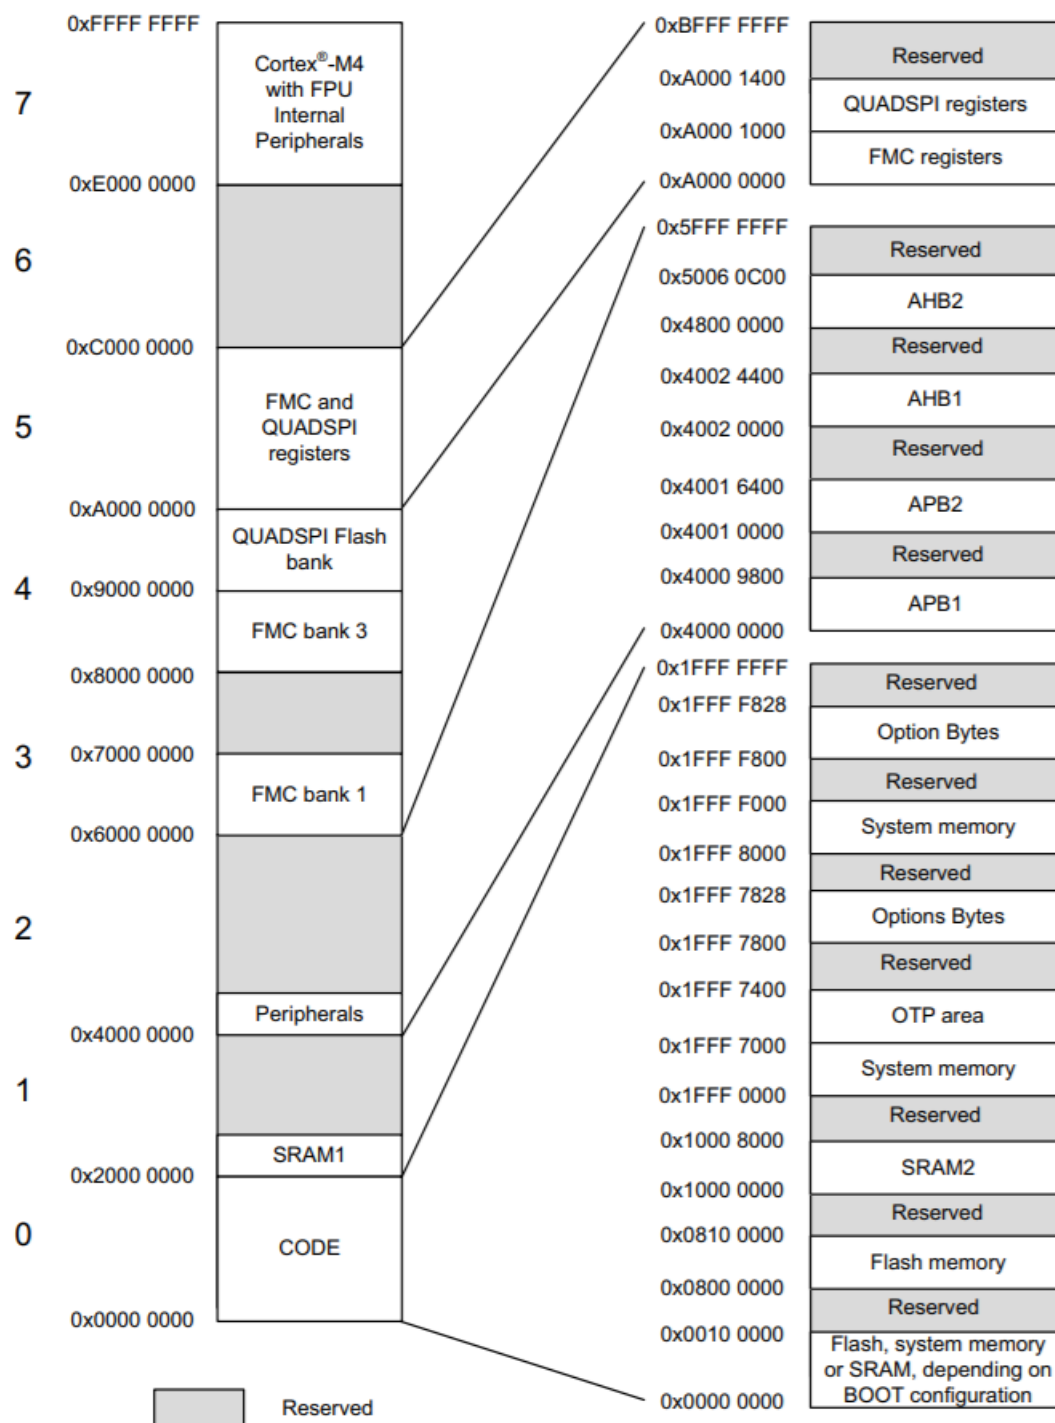


Figure 3 - Memory Map - [Source](#)

Addresses	Boot/remap in main Flash memory	Boot/remap in embedded SRAM 1	Boot/remap in system memory	Remap in FSMC	Remap in QUADSPI
0x2000 0000 - 0x2001 7FFF	SRAM1	SRAM1	SRAM1	SRAM1	SRAM1

Figure 4 - SRAM1 Memory Addresses in different boots - [Source 1](#) – [Source 2](#)

Figure 1. USART connection



Which Port the device is using

If you are using your PC to connect to the device, by using either USB TTL converter or direct USB connection, the Port likely to be in the form of “COMx”. To check to port COM number, you can use “Device Manager” on WindowsOS. Under “Connection Ports”, you can see your device and port number listed here. If not the case, you may need to install the device driver. Here is the driver for the [PL2303 USB TTL converter](#).

What Happens in Bootloader Process

When we jump to BootLoader via our Reboot_Loader routine, the device is searching all receiver channels to catch a communication request. The protocol list is given below:


Protocol	I/Os and Comments	Comments
USART	USART1 on pins PA9/PA10 USART2 on pins PA2/PA3 USART3 on pins PC10/PC11	
USB	USB DFU interface on pins PA11/PA12	Bootloader checks if HSE present : USB clock is HSE If no Bootloader checks if LSE present : USB clock is MSI auto-trimmed with LSE
CAN	CAN1 on pins PB8/PB9	
SPI	SPI1 on pins PA4/PA5/PA6/PA7 SPI2 on pins PB12/PB13/PB14/PB15	
I2C	I2C1 on pins PB6/PB7 I2C2 on pins PB10/PB11 I2C3 on pins PC0/PC1	I ² C slave address is 0x86

Figure 5 - BootLoader Communication Protocols - [Source](#)

We focus on USART1 connection, for further information, please refer to the table and the source below:


Bootloader	Feature/Peripheral	State	Comment
Common to all bootloaders	RCC	HSI enabled	The system clock frequency is 72 MHz (using the PLL clocked by HSI)
		-	The clock recovery system (CRS) is enabled for the DFU bootloader to allow USB to be clocked by HSI48 48 MHz
	RAM	-	16 Kbyte starting from address 0x20000000 are used by the bootloader firmware
	System memory	-	28 Kbyte starting from address 0x1FFF0000, contain the bootloader firmware
	IWDG	-	The independent watchdog (IWDG) prescaler is configured to its maximum value. It is periodically refreshed to prevent watchdog reset (in case the hardware IWDG option was previously enabled by the user).
Securable memory area	-	-	The address to jump to the exit securable memory area @0x1FFF6800
USART1 bootloader	USART1	Enabled	Once initialized the USART1 configuration is: 8-bit, even parity and 1 Stop bit
	USART1_RX pin	Input	PA10 pin: USART1 in reception mode
	USART1_TX pin	Output	PA9 pin: USART1 in transmission mode
USART2 bootloader	USART2	Enabled	Once initialized the USART2 configuration is: 8-bit, even parity and 1 Stop bit
	USART2_RX pin	Input	PA3 pin: USART2 in reception mode
	USART2_TX pin	Output	PA2 pin: USART2 in transmission mode
USART3 bootloader	USART3	Enabled	Once initialized the USART3 configuration is: 8-bit, even parity and 1 Stop bit
	USART3_RX pin	Input	PC11 pin: USART3 in reception mode
	USART3_TX pin	Output	PC10 pin: USART3 in transmission mode

Figure 6 - Detailed Explanations For USART Connection - [Source](#)

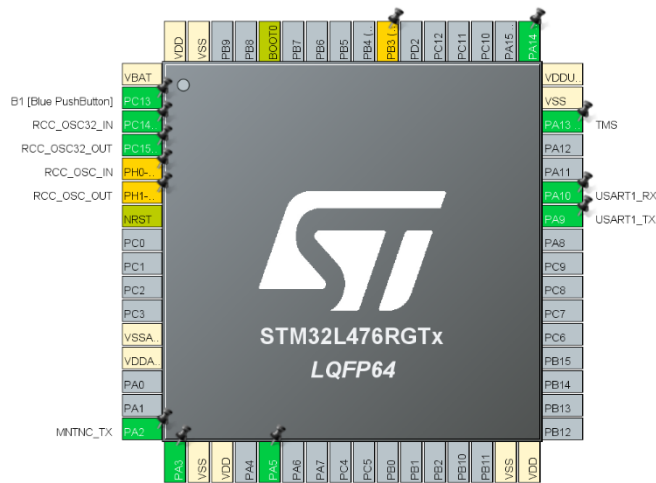

As stated, first, we need to initialize our USART1 in proper settings. To do this, we facilitate an ST software called [STM32CubeMX](#). By setting PA9 and PA10 pins, RX, and TX, respectively. The software offers much more convenience.

Then we define our USART1 parameters obeying the given rules above:

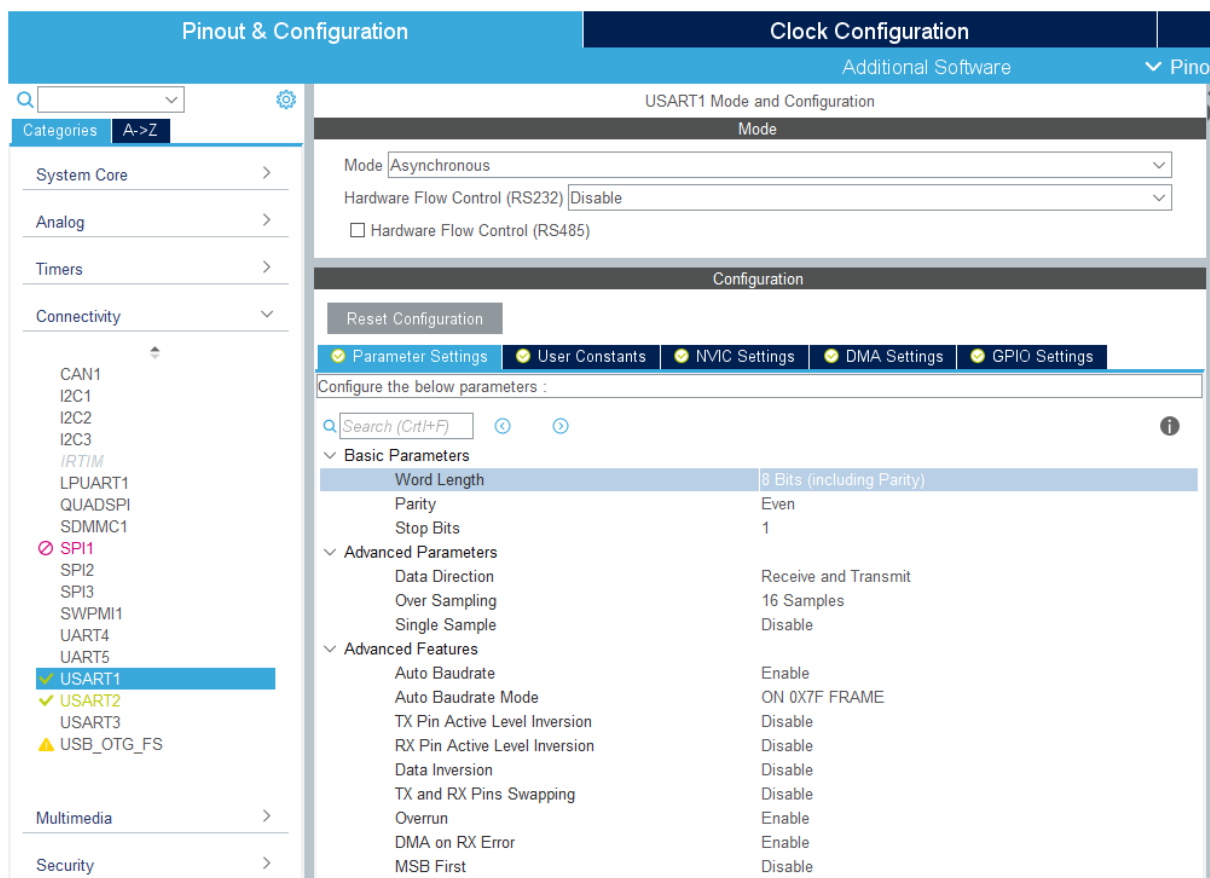

Since the BootLoader is going to use this port also for Auto Boudrate finding, you may need to set this parameter.

To actively communicate and use the commands of bootloader, we need to follow the flow below:

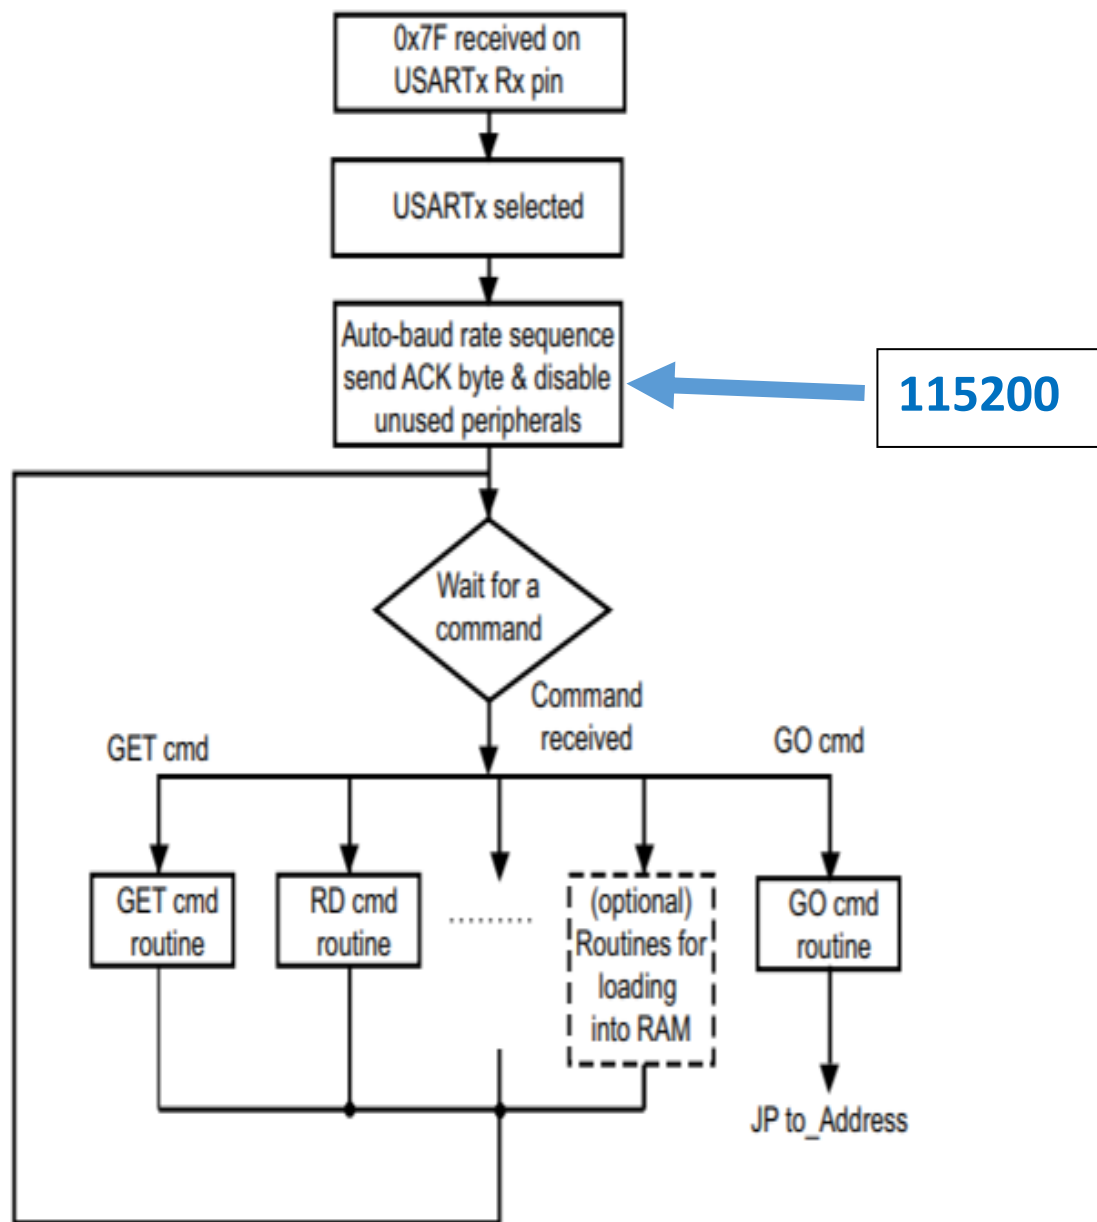


Figure 7 - BootLoader Protocol Selection - UART - [Source](#)

We activate the communication over USART1 by sending a 0x7F data frame, consisting of one start bit, 0x7F data, even parity bit, and one stop bit. According to the [Application Note – AN3155](#), the returned message is either ACK or NACK, which are 0x79 and 0x1F, respectively.

How can we order a command

Command ⁽¹⁾	Command code	Command description
Get ⁽²⁾	0x00	Gets the version and the allowed commands supported by the current version of the bootloader.
Get Version & Read Protection Status ⁽²⁾	0x01	Gets the bootloader version and the Read Protection status of the Flash memory.
Get ID ⁽²⁾	0x02	Gets the chip ID.
Read Memory ⁽³⁾	0x11	Reads up to 256 bytes of memory starting from an address specified by the application.
Go ⁽³⁾	0x21	Jumps to user application code located in the internal Flash memory or in the SRAM.
Write Memory ⁽³⁾	0x31	Writes up to 256 bytes to the RAM or Flash memory starting from an address specified by the application.
Erase ⁽³⁾⁽⁴⁾	0x43	Erases from one to all the Flash memory pages.
Extended Erase ⁽³⁾⁽⁴⁾	0x44	Erases from one to all the Flash memory pages using two byte addressing mode (available only for v3.0 USART bootloader versions and above).
Write Protect	0x63	Enables the write protection for some sectors.
Write Unprotect	0x73	Disables the write protection for all Flash memory sectors.
Readout Protect	0x82	Enables the read protection.
Readout Unprotect ⁽²⁾	0x92	Disables the read protection.

Figure 8 - Command List - [Source](#)

Communication Safety


All communication from the programming tool (PC) to the device is verified by:

1. Checksum: received blocks of data bytes are XOR-ed. A byte containing the computed XOR of all previous bytes is added to the end of each communication (checksum byte). By XOR-ing all received bytes, data plus checksum, the result at the end of the packet must be 0x00.
2. For each command the host sends a byte and its complement (XOR = 0x00).
3. UART: parity check active (even parity).

Hence we send our command byte followed by its complementary byte. For example, the "GET" command 0x00 is sent with its complement 0xFF, so that we establish secure communication.

Receiving Information via Bootloader

There is a flowchart for the “GET” Command showing how the communication is handled.

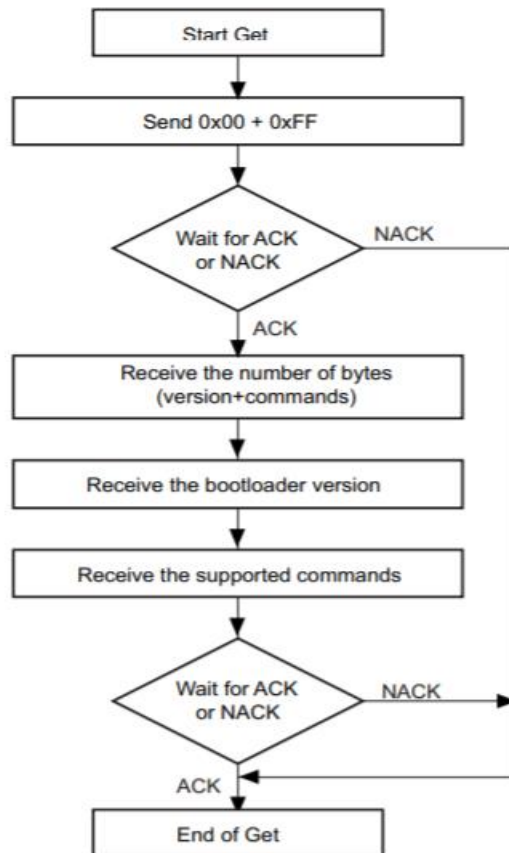

The STM32 sends the bytes as follows:

Byte 1: ACK

Byte 2: N = 11 = the number of bytes to follow – 1 except current and ACKs.

Byte 3: Bootloader version (0 < version < 255), example: 0x10 = version 1.0

Byte 4: 0x00 – Get command

Byte 5: 0x01 – Get Version and Read Protection Status

Byte 6: 0x02 – Get ID

Byte 7: 0x11 – Read Memory command

Byte 8: 0x21 – Go command

Byte 9: 0x31 – Write Memory command

Byte 10: 0x43 or 0x44 – Erase command or Extended Erase command (exclusive commands)

Byte 11: 0x63 – Write Protect command

Byte 12: 0x73 – Write Unprotect command

Byte 13: 0x82 – Readout Protect command


Byte 14: 0x92 – Readout Unprotect command

Last byte (15): ACK

How to Write our code - Write Memory command

The maximum length of the block to be written for the STM32 is 255 bytes, according to [AN3115](#).

If the Write Memory command is issued to the option byte area, all bytes are erased before writing the new values, and at the end of the command, the bootloader generates a system reset to take into account the new configuration of the option bytes.

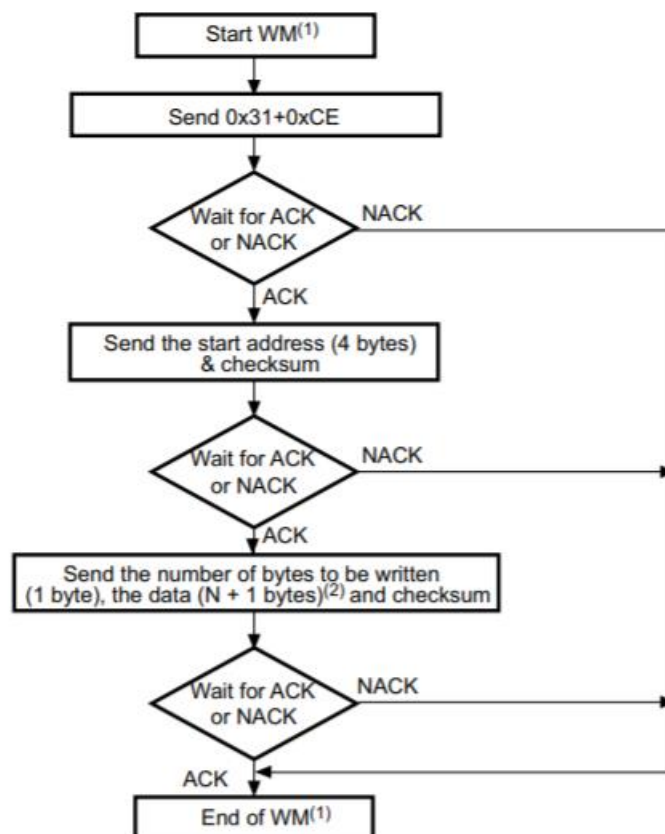

ai14641b

WM = Write Memory.

N+1 must be a multiple of 4.

The host sends the bytes to the STM32 as follows:

Byte 1: 0x31

Byte 2: 0xCE

Wait for ACK

Byte 3 to byte 6: Start address (byte 3: MSB, byte 6: LSB)

Byte 7: Checksum: XOR (byte3, byte4, byte5, byte6)

Wait for ACK

Byte 8: Number of bytes to be received ($0 < N \leq 255$)

N + 1 data bytes: (Max 256 bytes)

Checksum byte: XOR (N, N+1 data bytes)

Where to write our code

We cannot write the code directly to an arbitrary memory location. First, we need to compile and build the code to obtain HEX or BIN translation of the code. For coding IDE, I use [KEIL \$\mu\$ VisionV5](#) Software. After we built the code, we obtain the HEX file, ready to be written.

The program must be written starting from the beginning of the FLASH Memory @0x08000000 memory address (See [Memory Mapping](#)).

Some constraints we need to obey

Table 7. Flash memory alignment constraints on STM32 products (continued)

Series	Alignment
STM32F2	4 bytes
STM32F3	4 bytes
STM32F4	4 bytes
STM32F7	8 bytes
STM32L0	8 bytes
STM32L1	8 bytes
STM32L4	8 bytes
STM32G0	4 bytes
STM32G4	4 bytes
STM32H7	8 bytes
STM32WB	8 bytes
STM32WL	8 bytes

Example of alignment:

- 4 bytes: 0x08000014 is aligned and passes, 0x08000012 is not aligned and fails
- 8 bytes: 0x08000010 is aligned and passes, 0x08000014 is not aligned and fails


The code generated by KEIL uVision Software:

32 HEX_CODED FORM == 16 BYTES

```
1 :02000040800F2
2 :020000020000FC
3 :2000000E00400209D010008EB190008F7180008E9190008690500084D220008000000001C
4 :2002000000000000000000000000351D00086B05000800000000ED190008371D000884
5 :2004000B7010008B7010008B7010008B7010008B7010008B7010008B7010008A0
6 :2006000B7010008B7010008B7010008B7010008B7010008B7010008B7010008B701000880
7 :2008000B7010008B7010008B7010008B7010008B7010008B7010008B7010008B701000860
8 :200A000B7010008B7010008B7010008B7010008B7010008B7010008B7010008B701000840
9 :200C000B7010008B7010008B7010008B7010008B7010008B7010008B7010008B701000820
10 :200E000B7010008B7010008B7010008B7010008B7010008B7010008B7010008B701000800
11 :2010000B7010008B7010008B7010008B7010008B7010008B7010008B7010008B7010008DF
12 :2012000B7010008B7010008B7010008B7010008B7010008B7010008B7010008B7010008BF
13 :2014000B7010008B7010008B7010008B7010008B7010008B7010008B7010008B7010008B70100089F
14 :2016000B7010008B7010008B7010008B7010008B7010008B7010008B7010008B701000800000000003F
15 :2018000B7010008B7010008DFF80CD00F0DAF9004800471D240008E00400200648804778
16 :201A00006480047FEE7FEE7FEE7FEE7FEE7FEE7FEE7FEE7FEE7B11D00088901000850
17 :201C0002DE9F05F0546002092469B4688460646814640241BE0284641464746224600F07C
18 :201E0000CF953465A46C01A914110D311461846224600F0F3F82D1A67EB01084F4622469B
19 :20200000120002100F0EAF817EB00094E41201EA4F10104DFDC484631462A46434600F0AF
20 :202200000B830BCBDE8C09FD2B201E000F8012B491EFBD270470022F6E710B513460A4635
21 :202400004461946FFF7F0FF204610BD421C10F8011B0029FBD1801A7047034611F8012B97
22 :202600000F8012B002AF9D1184670472DE9FE4F81EA030404F0004421F00041100944FF01F
23 :2028000000B23F0004350EA01045ED052EA03045BD0C3F30A54C1F30A552C44A4F2F334CE
24 :202A00000194A0FB0254C1F3130141F48011C3F3130343F4801301FB024400FB034E840A78
25 :202C0000970A44EA815447EA8357A4FB076802958D0A05FB07854FEA932C04FB0C54270524
26 :202E000029D4FEA065847EA1637B5EB08056EB070C870E920EA47EA811742EA831247FBD0
27 :203000000201B6EB0B0164EB00042B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
28 :2032000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
29 :20340000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
30 :20360000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
31 :20380000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
32 :203A0000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
33 :203C0000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
34 :203E0000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
35 :20400000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
36 :20420000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
37 :20440000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
38 :20460000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
39 :20480000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
40 :204A0000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
41 :204C0000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
42 :204E0000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
43 :20500000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
44 :20520000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
45 :20540000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
46 :20560000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
47 :20580000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
48 :205A0000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
49 :205C0000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
50 :205E0000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
51 :20600000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
52 :20620000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
53 :20640000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
54 :20660000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
55 :20680000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
56 :206A0000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
57 :206C0000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
58 :206E0000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
59 :20700000020B0D43BA0C335E1844EB1C50DA465146B7FB0201C5F3D1
60 :20720000013044FEA0B3343EA14534FEA0432019C43EA0603A4F10C040294009CCDE900B418
61 :20740000020B0D43BA0C335E1844EB1C50DA465146B7FB0
```


An Example Program – STM32 Flasher

Connection Properties

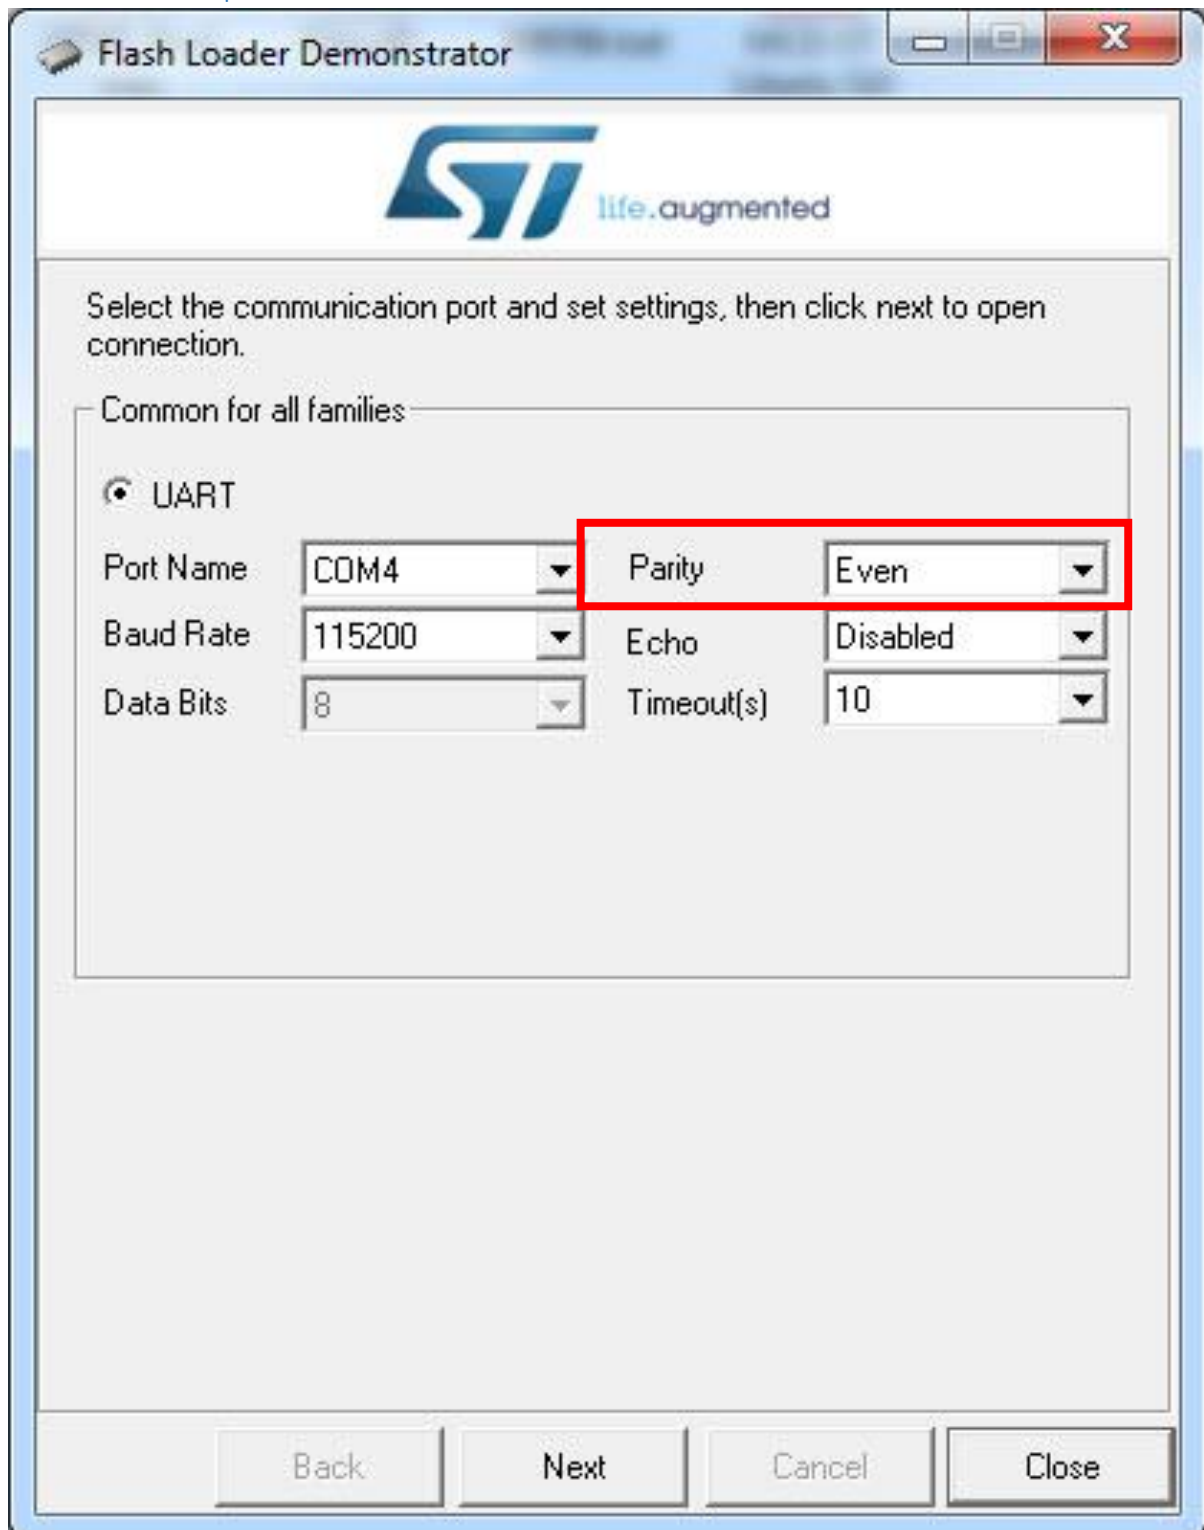

The image shows a screenshot of the 'Flash Loader Demonstrator' application window. The window has a title bar with the text 'Flash Loader Demonstrator' and standard Windows window controls (minimize, maximize, close). Below the title bar is the STMicroelectronics logo and the text 'life.augmented'. The main area of the window contains the following text: 'Select the communication port and set settings, then click next to open connection.' Below this text is a section titled 'Common for all families' which contains a radio button labeled 'UART' that is selected. Under the 'UART' section, there are six settings arranged in two columns. The first column contains 'Port Name' (set to 'COM4'), 'Baud Rate' (set to '115200'), and 'Data Bits' (set to '8'). The second column contains 'Parity' (set to 'Even'), 'Echo' (set to 'Disabled'), and 'Timeout(s)' (set to '10'). A red rectangular box highlights the 'Parity' and 'Even' dropdown menu. At the bottom of the window, there are four buttons: 'Back', 'Next', 'Cancel', and 'Close'.

Flash Loader Demonstrator

ST life.augmented


Select the communication port and set settings, then click next to open connection.


Common for all families


☒ UART

Port Name	COM4	Parity	Even
Baud Rate	115200	Echo	Disabled
Data Bits	8	Timeout(s)	10

Back Next Cancel Close

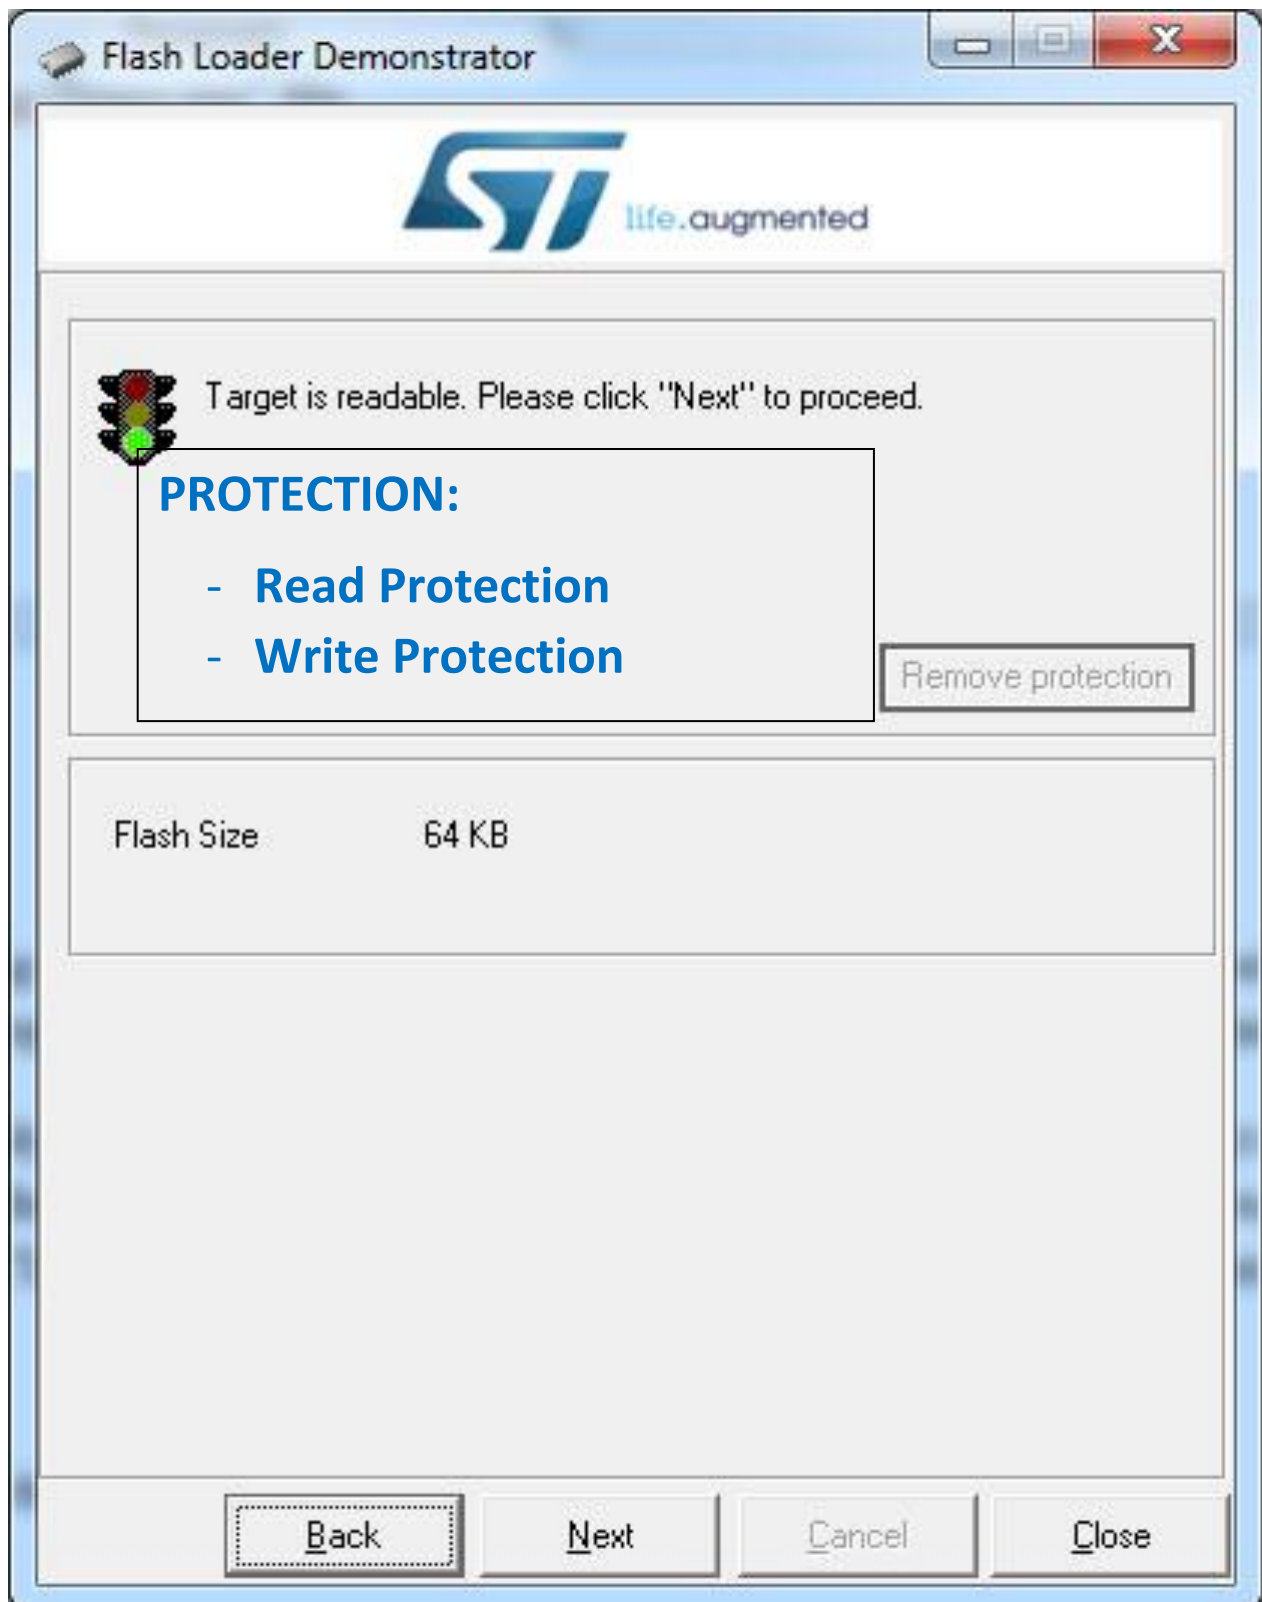

 Flash Loader Demonstrator

 life.augmented

Please, select your device in the target list

Target
















PID (h)

BID (h)

Version

GET CMD

Flash mapping

Name	Start address...	End address	Size
 Page0	0x 8000000	0x 80007FF	0x800 (2K)
 Page1	0x 8000800	0x 8000FFF	0x800 (2K)
 Page2	0x 8001000	0x 80017FF	0x800 (2K)
 Page3	0x 8001800	0x 8001FFF	0x800 (2K)
 Page4	0x 8002000	0x 80027FF	0x800 (2K)
 Page5	0x 8002800	0x 8002FFF	0x800 (2K)
 Page6	0x 8003000	0x 80037FF	0x800 (2K)
 Page7	0x 8003800	0x 8003FFF	0x800 (2K)
 Page8	0x 8004000	0x 80047FF	0x800 (2K)
 Page9	0x 8004800	0x 8004FFF	0x800 (2K)
 Page...	0x 8005000	0x 80057FF	0x800 (2K)
 Page...	0x 8005800	0x 8005FFF	0x800 (2K)
 Page...	0x 8006000	0x 80067FF	0x800 (2K)
 Page...	0x 8006800	0x 8006FFF	0x800 (2K)
 Page...	0x 8007000	0x 80077FF	0x800 (2K)

**FLASH
MEMORY
ADDRESS**

Back Next Cancel Close

