

GENERAL**Operational Hours****ATS Hours:** TWR: See NOTAM**AD ADMIN Hours:** MON-FRI 0700-1600, SAT/SUN 0800 1400±**Airport Information****RFF:** CAT 4 MON-FRI 0700-1600±, SAT/SUN 0800-1400±**Fuel:** MON-FRI 0700-1600±, SAT/ SUN/HOL O/R**PCN:** RWY 04/22: LCN 35**Customs:** O/R**ARRIVAL****Communication****COM Failure**

ACFT to join overhead the AD at 2500ft AGL.

Observe and join the AD TFC.

Make all turns to left whenever possible.

Watch for ATC light signals from TWR.

Land ASAP and report to ATC.

Arrival Procedure**VFR Traffic Pattern:** RWY 04 right-hand circuit.**DEPARTURE****Take-off Minima**

RWY		04/22	
All ACFT	ft - m/km	0 - 400v	HJ only

Communication**COM Failure**

ACFT to join overhead the AD at 2500ft AGL.

Observe and join the AD TFC.


Make all turns to left whenever possible.

Watch for ATC light signals from TWR.

Land ASAP and report to ATC.

4301
4000
3500
2500
1500

No instrument APCH published.
No MSA published

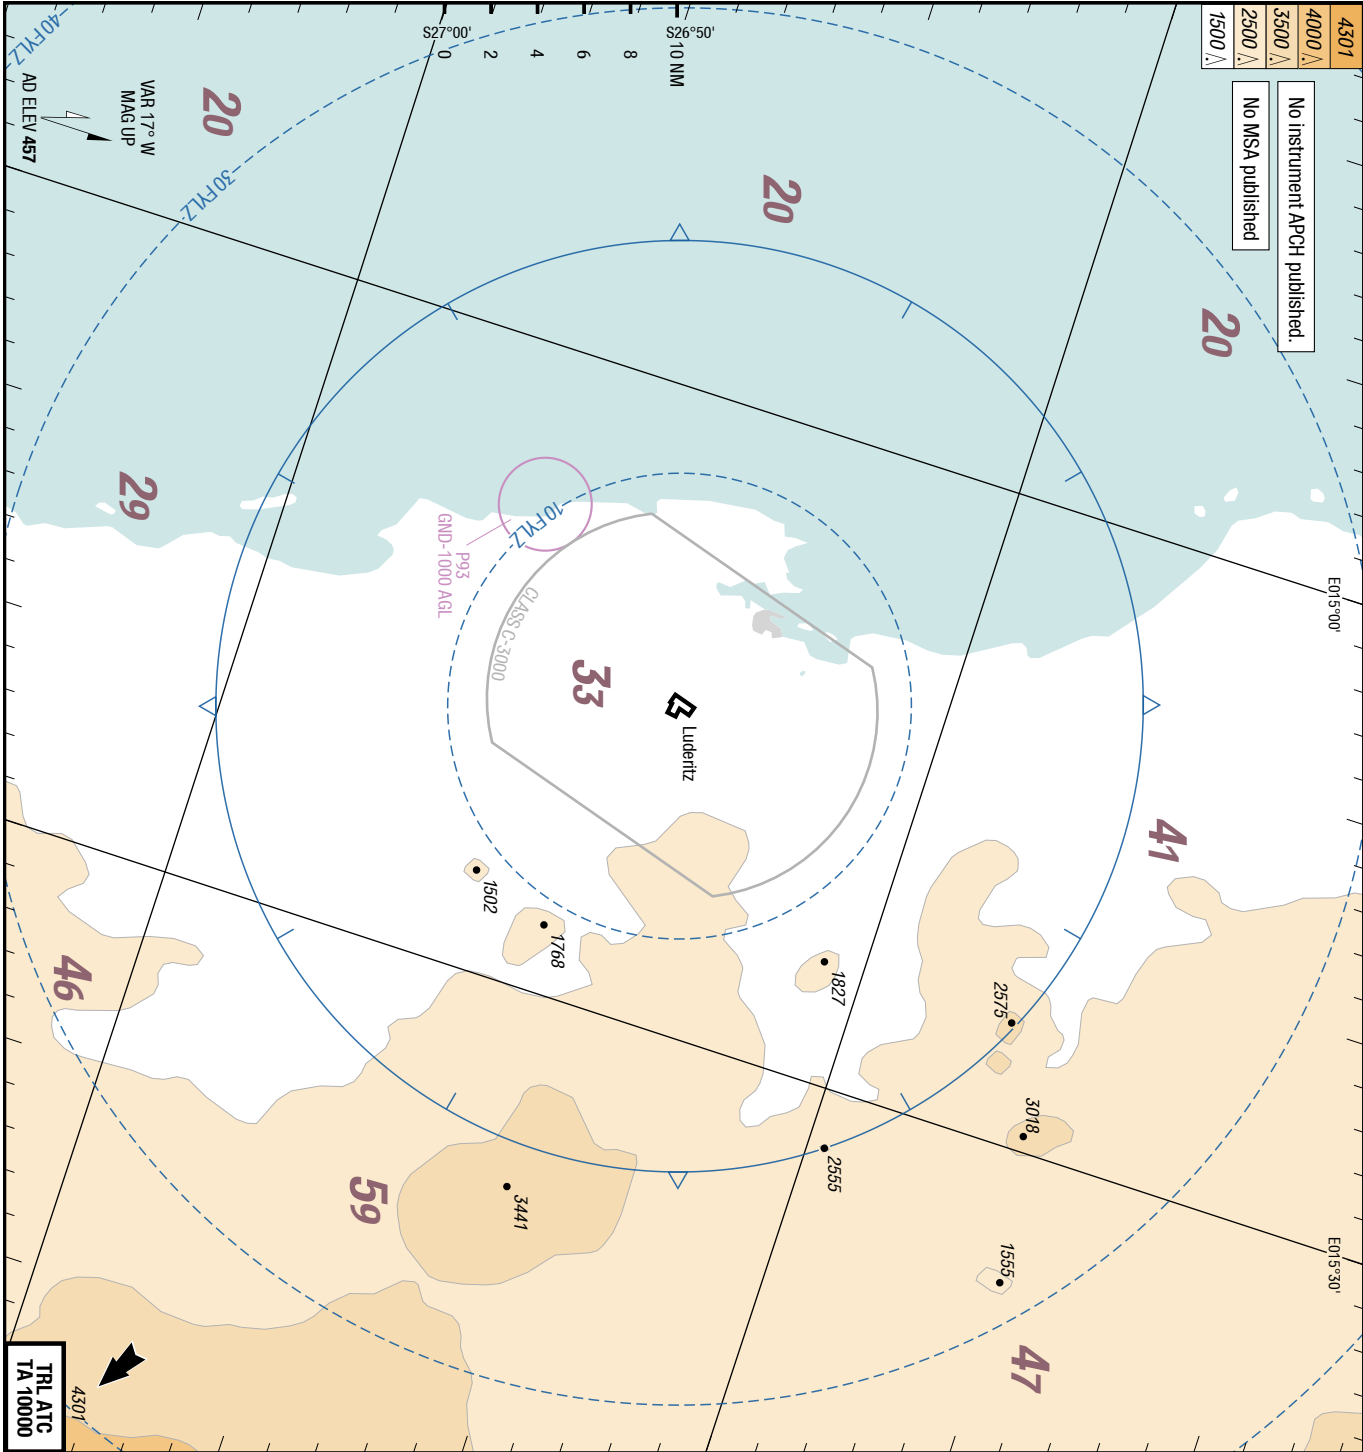

Changes: FREQ, VAR

Caution:
No official airport graphic available.
Chart contents are based on the best available information.
NOTAMs may not be available.
Use at your own discretion.

TWR 118.600 HO by NOTAM.
O/T use as TIBA

22
214°
392

12
116°
421

ARP
S 26 41.1
E 015 14.7

04
034°
420

30
296°
457

1830 x 30

GRAVEL 1193 x 30 GRAVEL

S26°41.5'

S26°41.5'

E015°14.5'

E015°14.8'

VAR 17° W
MAG UP
AD ELEV 457

