



# BESST Tool

for motors

M500

M420

M400


M300

Download firmwares from: <https://www.leaderfox.cz/en/guides>  
*BESST Bafang mid motor firmware AJ*

Download and instal program **BESST**: <https://www.bafang-e.com/en/oem-area/service/besst/>



Mail to [reklamace@leaderfox.cz](mailto:reklamace@leaderfox.cz) for Invitatiom Code

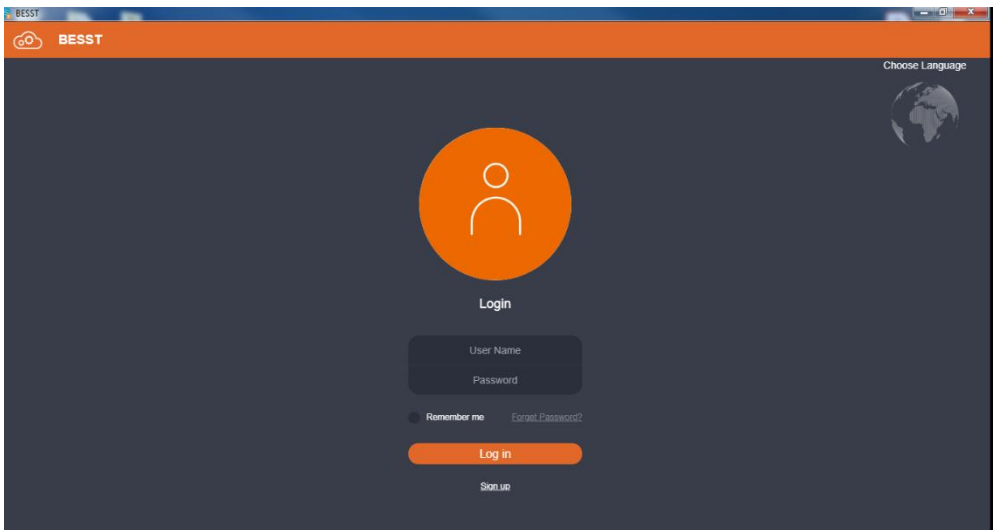

1

2

3

Verify the codeCreate an accountCreate a company

Invitation Code

Type the code you receive from brand.  
If you have used the code but not register successfully, you can try again.

Verify

Fill in invitation code

1

2

3

Verify the codeCreate an accountCreate a company

Verify

E-mail validation code

Password


Confirm password

Next


Verify will send another code to Your email

## FIRMWARE UPDATE:

Plug in BESST Tool to PC and to a display cable. Set: **Tools-Update-Component-Controller-Read**. **Get file from local** choose a firmware from downloaded folder. Press **Update-Firmware** will load to adapter

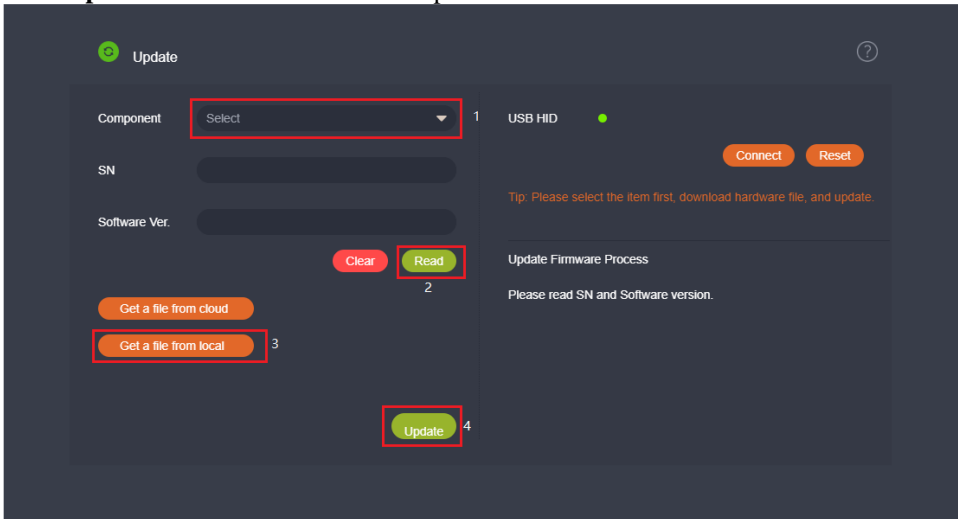


Unplug and plug the display cable-firmware will upload to the controller

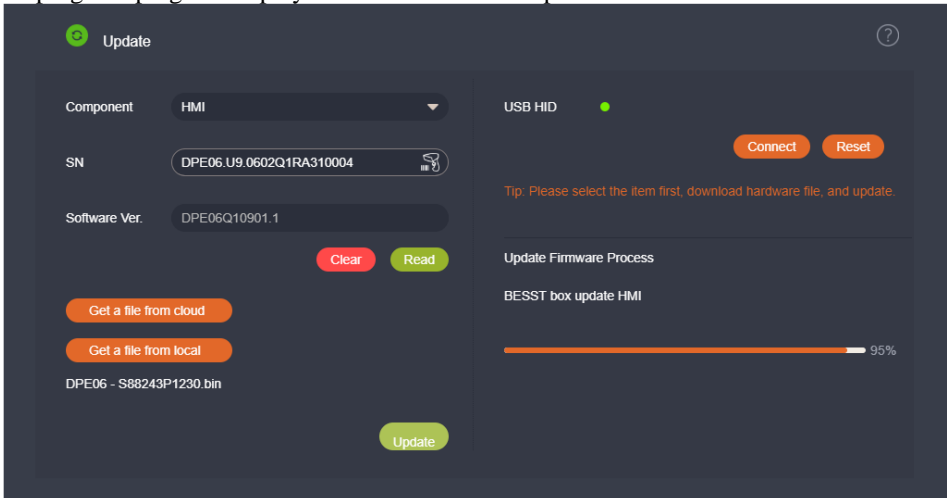

**After firmware update restart the adapter-plug off from display cable and PC and wait for 5 secs**

PARAMETERS

Tools – Controller – Read

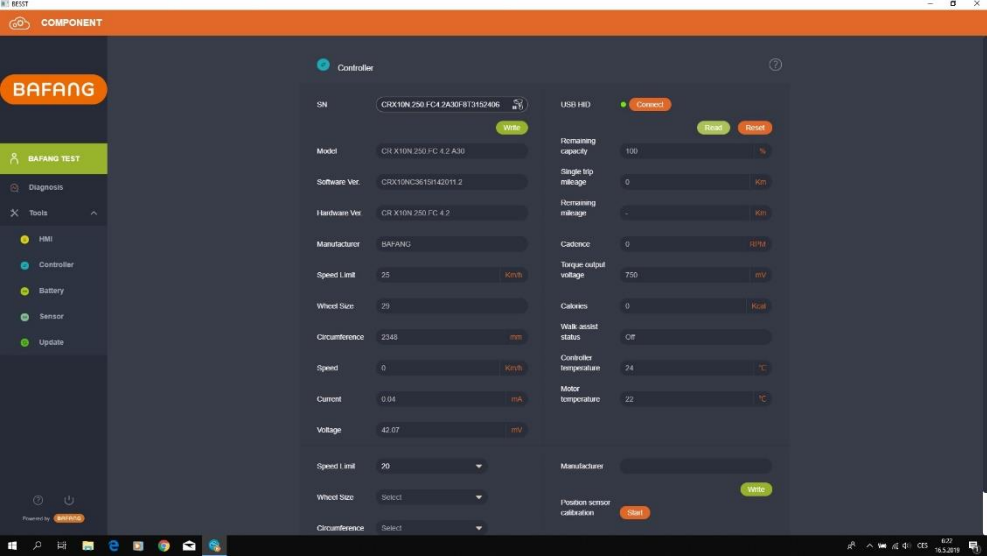

You can modify  
**Speed limit**  
**Wheel size**  
**Circumference**

