

The diagram illustrates the rear chassis and suspension components of a vehicle. The components are labeled with part numbers and codes, organized into columns on the left and right sides of the diagram. The central part of the diagram shows the rear view of the vehicle's frame and suspension assembly.

Left Column Labels:


- G31
- G16
- G05
- GJB03
- GJB04
- GJB05
- G15
- G37
- G2C
- GJP17
- Eg01
- G36
- G2R
- G2A
- G2I
- Kg1
- G2L
- G2J
- Kg2
- G38(A)
- G03
- GJT02
- GJT01
- GJK13
- GJK12
- GJK10
- GJK11
- G28


Right Column Labels:


- G07
- Eg08
- G79
- G23
- G38(B)
- Eg10
- Kg3
- G25(A)
- G25(B)
- G46
- Eg11
- G19
- GJU08
- GJU09
- GJB07
- GJB06
- GJK14
- GJK15
- GJK16
- G45(B)
- G45(A)
- G56
- G48
- GK32
- G33
- G35
- G43
- G39(B)
- G39(A)
- G10-1
- G32
- G47
- Eg06
- G24
- G22
- G34
- G02
- G18-1
- G44


Top Labels:


- GJGa18
- G08(C)
- G08(D)
- Eg05
- G14
- G21(A)
- G21(B)
- G41
- G21(C)
- G07(C)-2
- G07(A)-2
- G07(B)-2
- G08(A)
- G08(B)
- Eg09
- G11

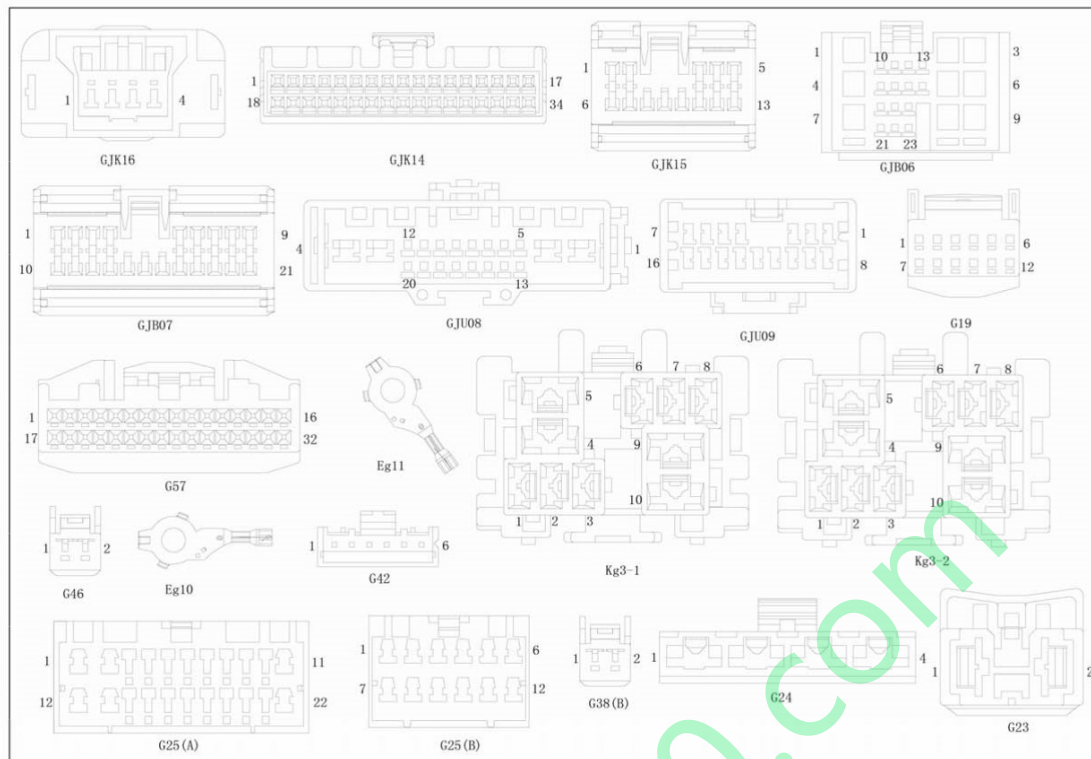


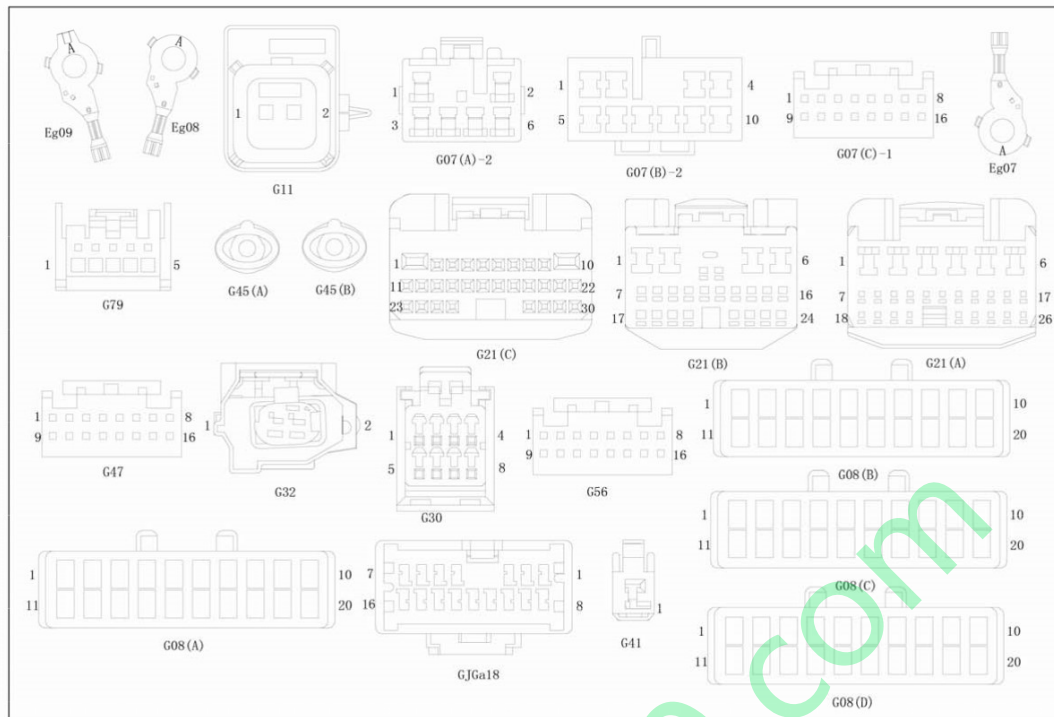

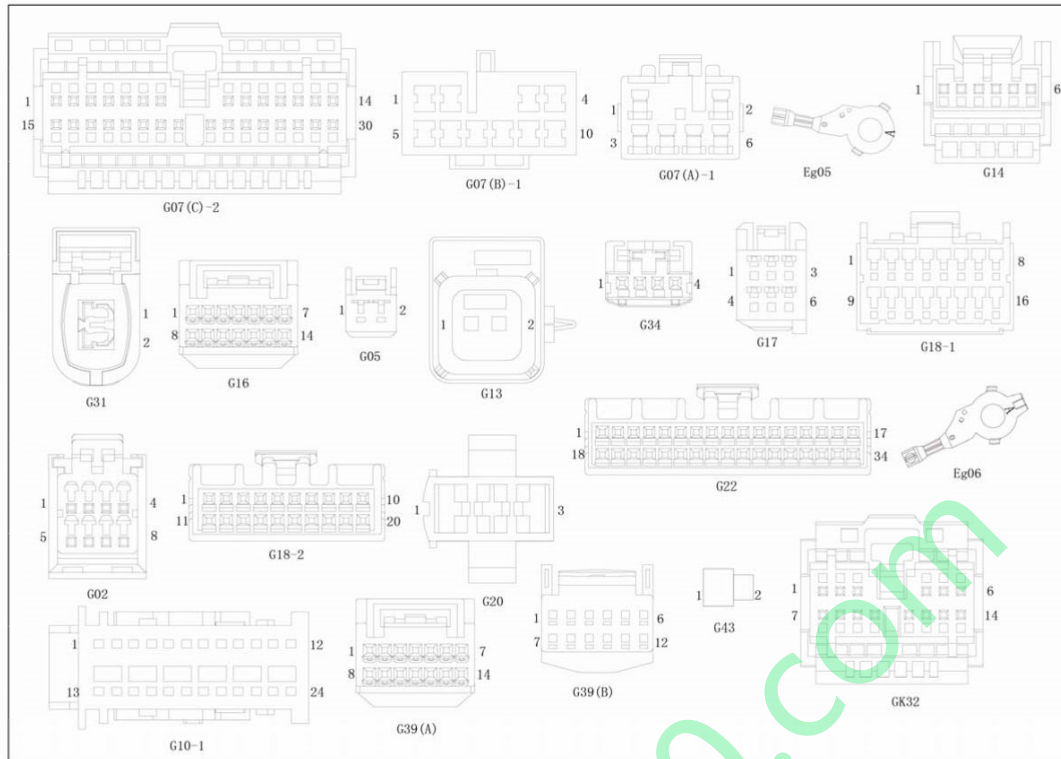

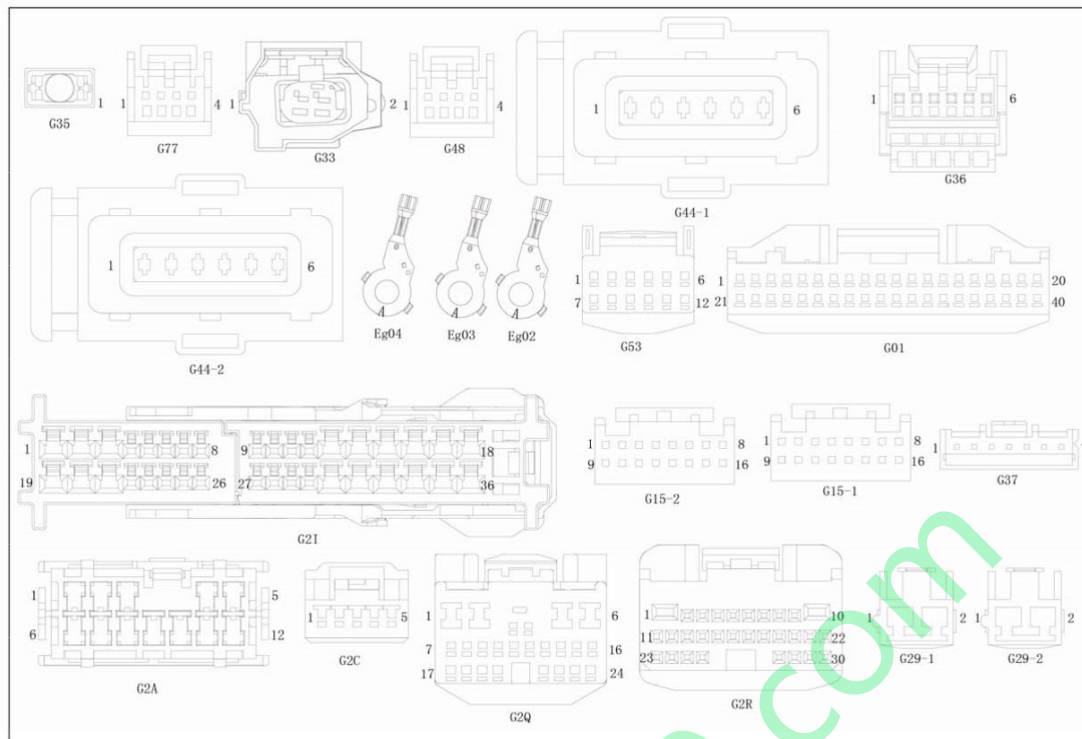

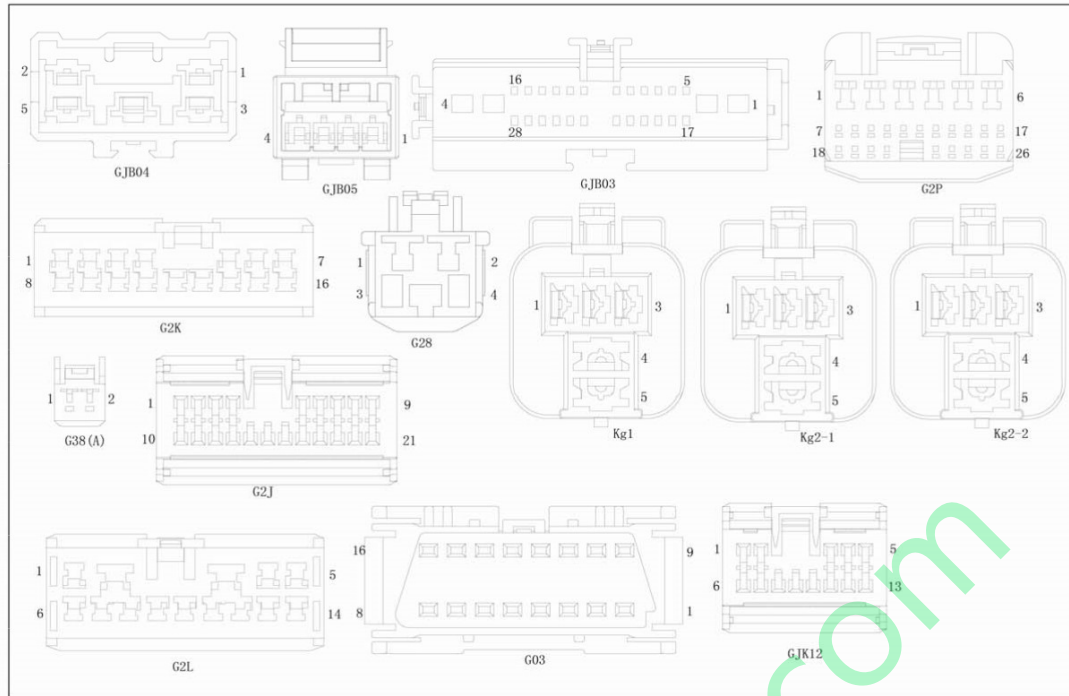

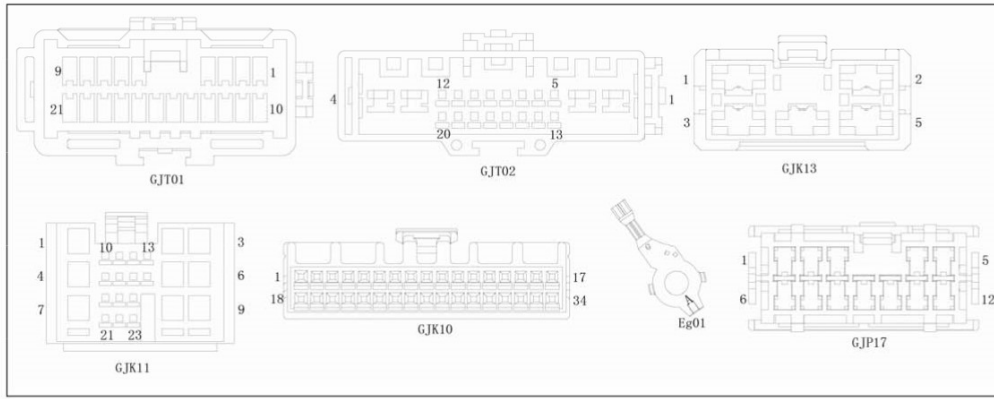

序号 No.	零件编号 Part No.	名 称 Description	数量 Qty	备注 Rem	
		中 文 Chinese	英 文 English		
GJK16		接地板线束 MX10-4SC			
GJK14		接地板线束 6098-4596			
GJK15		接地板线束 6098-2784			
GJB06		接前舱线束 6098-4708			
GJB07		接前舱线束 6098-2764			
GJU08		接右前门线束 6098-4591			
GJU09		接右前门线束 3TK16MW			
G19		接网关控制器			
G57		接全景影像			
Eg11		接 11#搭铁			
G46		接杂物箱照明灯			
Eg10		接 10#搭铁			
G42		接 PM2.5 测试仪			
Kg3-1		接小灯继电器			
Kg3-2		接空气净化继电器			
G25(A)		接智能钥匙控制器 368135-1			
G25(B)		接智能钥匙控制器 175442-1			
G38(B)		接副驾照脚灯			
G24		接调速模块			
G23		接 AC 鼓风机			

Eg09		接 9#搭铁			
Eg08		接 8#搭铁			
G11		接 PAB			
G07(A)-2		接 DVD 主机 7283-1261			
G07(B)-2		接 DVD 主机 2102201FW			
G07(C)-1		接 CD 主机 1318386-1			
Eg07		接 7#搭铁			
G79		接副驾安全带提醒显示			
G45(A)		接杂物箱灯开关			
G45(B)		接杂物箱灯开关			
G21(A)		接空调控制器 A			
G21(B)		接空调控制器 B			
G21(C)		接空调控制器 C			
G47		接空调面板			
G32		接前部车内磁卡探测天线			
G30		接倒车雷达开关			
G56		接 1#开关组			
GJGa18		接仪表小线 3TK16MW			
G41		接天线 2012300FW			
G08(A)		接短路片 A			
G08(B)		接短路片 B			
G08(C)		接短路片 C			
G08(D)		接短路片 D			
G07(C)-2		接 DVD 主机 IL-AG5-30S-D3C1			
G07(B)-1		接 CD 主机 2012201FW			

G07(A)-1		接 CD 主机 7283-1261			
Eg05		接 5#搭铁			
G14		接告警灯开关			
G31		接蜂鸣器			
G16		接启动按钮			
G05		接车内温度传感器			
G13		接时钟弹簧 2			
G34		接方向盘转角传感器			
G17		接转向轴锁			
G18-1		接螺旋线圈 1			
G02		接组合开关			
G18-2		接时钟弹簧 1			
G20		接点烟器			
G22		接空调箱体小线			
Eg06		接 6#搭铁			
G10-1		接气囊 ECU			
G39(A)		接换挡机构			
G39(B)		接挡位传感器			
G43		接车载电源			
GK32		接 EPB 开关			
G35		接驻车制动开关			
G77		接智能钥匙充电器			
G33		接中部车内磁卡探测天线			
G48		接 USB 充电连接器			
G44-1		接电子油门踏板			

G36		接大灯调节开关			
G44-2		接加速踏板位置传感器			
Eg04		接 4#搭铁			
Eg03		接 3#搭铁			
Eg02		接 2#搭铁			
G53		接 EPS 通讯口			
G01		接组合仪表 1318389-1			
G2I		接仪表配电盒 2362300FW-1			
G15-2		接电动外后视镜调节开关			
G15-1		接电动外后视镜调节开关			
G37		接 3#开关组			
G2A		接仪表配电盒 212230FGR			
G2C		接仪表配电盒 7283-5830			
G2Q		接仪表配电盒 1318756-1			
G2R		接仪表配电盒 1318758-1			
G29-1		接离合开关			
G29-2		接离合开关			
GJB04		接前舱线束 2056600MBR			
GJB05		接前舱线束 174929-1			
GJB03		接前舱线束 6098-4725			
G2P		接仪表配电盒 1318757-1			
G2K		接仪表配电盒 6098-3563			
G28		接制动灯开关			
G38(A)		接主驾照脚灯			
G2J		接仪表配电盒 6098-2764			

Kg1		接油泵继电器			
Kg2-1		接电喷主继电器			
Kg2-2		接座椅继电器			
G2L		接仪表配电盒 6098-3565			
G03		接 DLC3 诊断接口			
GJK12		接地板线束 6098-2784			
GJT01		接左前门线束 6098-2789			
GJT02		接左前门线束 6098-4591			
GJK13		接地板线束 2056600FBR			
GJK11		接地板线束 6098-4708			
GJK10		接仪表线束 6098-4596			
Eg01		接 1#搭铁			
GJP17		接顶棚线束 6098-0251			