


ref line
lift = 0

axis of
engine vs.
wind

setting angle
 α - setting angle = α_r

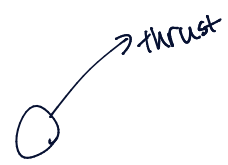

Upwash

Downwash

