




1. Auto loading function is programmable, the 9th option is for loading time, 3 ~ 0 second(s) adjustable, set to 7 is off
2. Clean the sector gear with alcohol pad
3. Apply a gear sticker(1 for the DSG, 3 for the 18:1, 16:1, 13:1) to the back of the sector gear

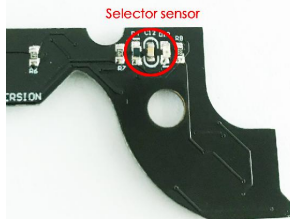


4. Shim the gears before start, make sure the gear sticker can not reach the spur gear
5. Apply a selector sticker to the selector plate, make sure the sticker can cover the selector sensor when the selector on the auto fire mode

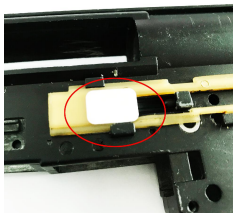

6. Remove all the parts inside the gearbox and leave the outer shell of the gearbox

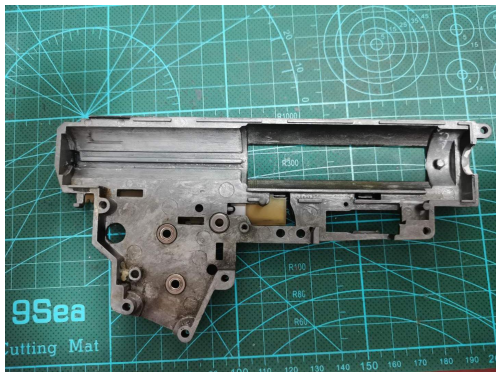

7. Put on V3 DTU, and put the attached gasket on the screw column and tighten the screw

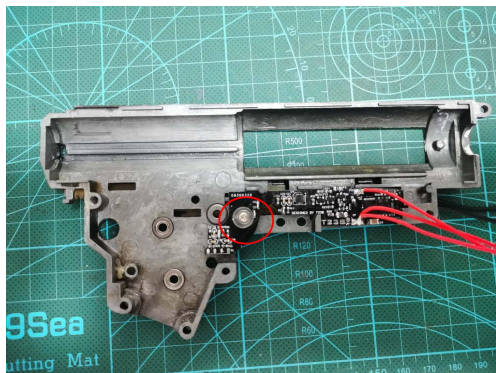

8. Then put the other parts of the gearbox back in turn and tighten the screws of the gearbox