


AtLAs Master State Machine

rev 1.0

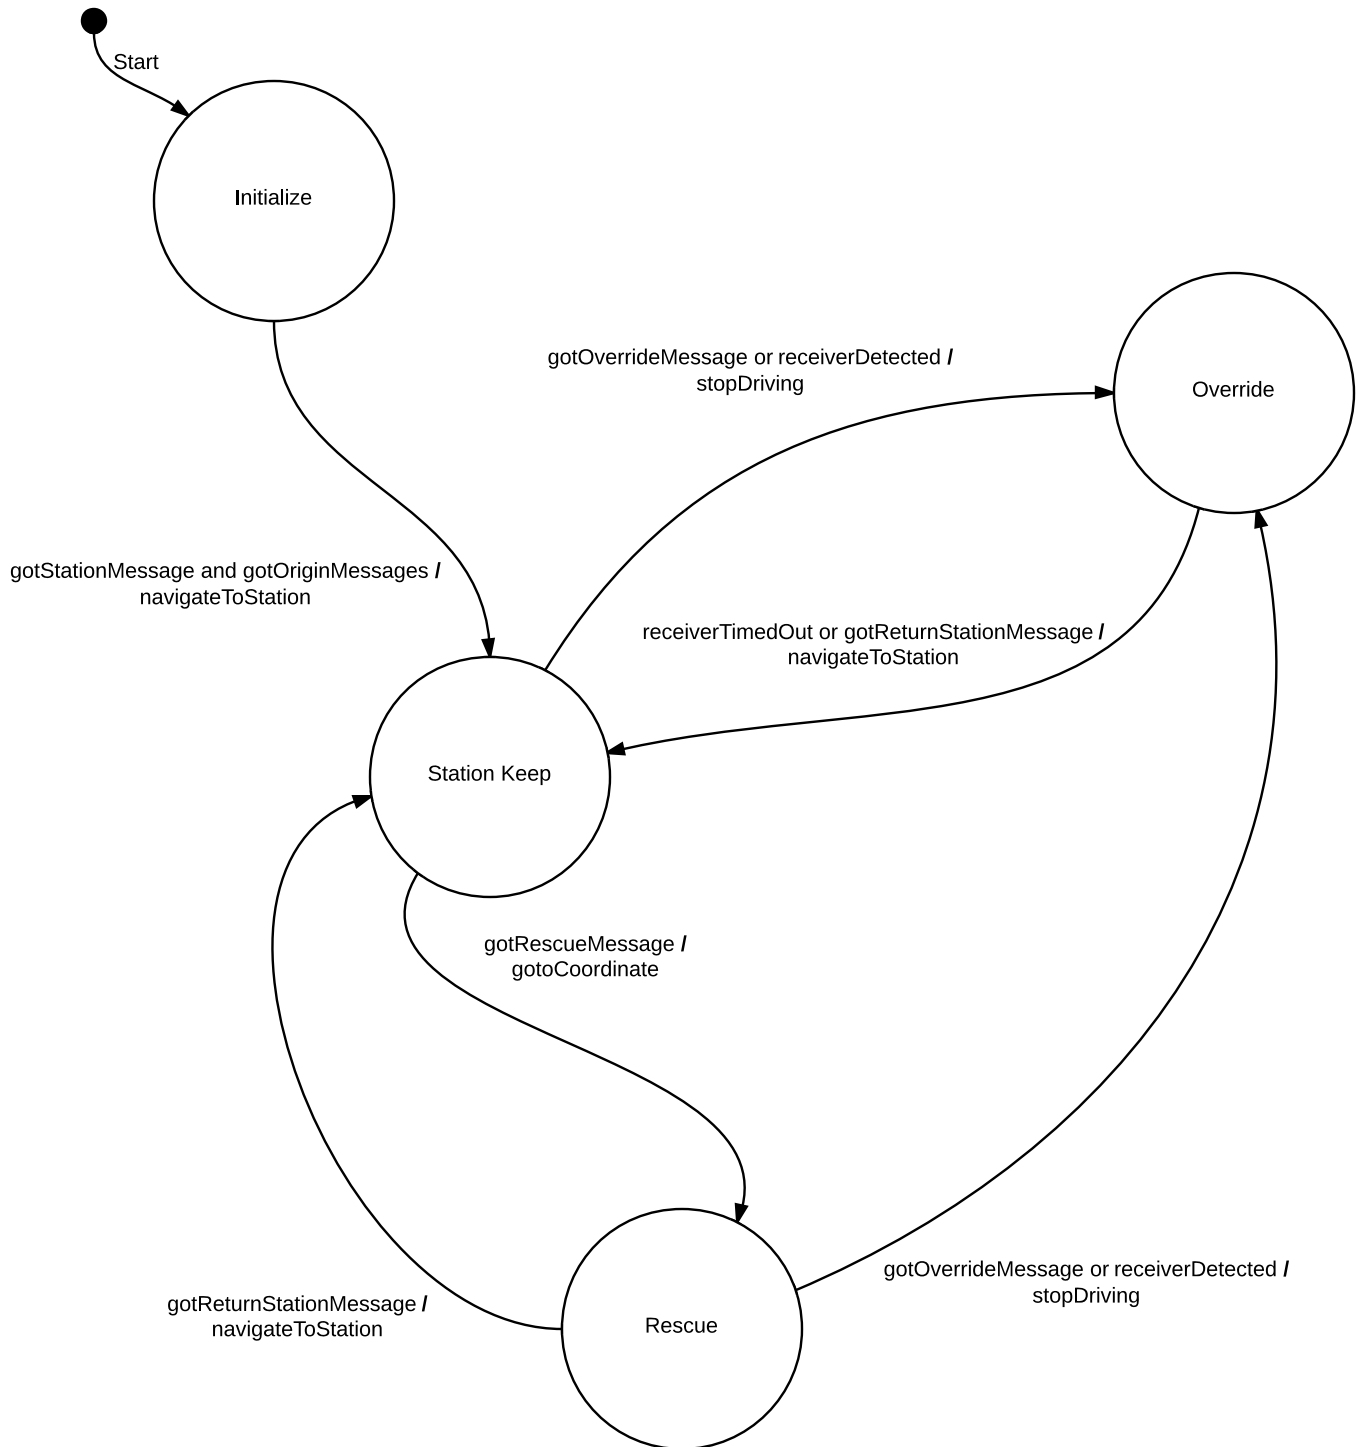

*Note: All states can also transition back to the **Initialize** state when the boat 'gotReinitialize' from the command center