

PL2303 USB-to-Serial Chip Windows Driver Installer User Manual

1) Please go to the link below and download the Windows installer for the USB RS-232 adapter.

<https://serialio.com/drivers-and-set-up-usb-rs-232-adapter-in-windows>


2) Extract files from the zip file.

3) Install the driver.


4) Press the Windows key + X or right click on Start to open the Power User Menu

5) Select Device Manager in the menu.


6) Click on Ports.

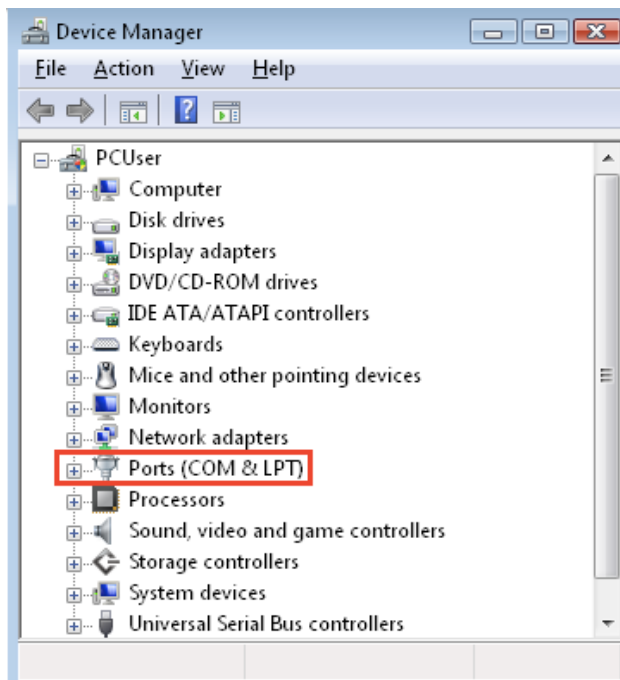

7) If there is no warning symbol on the Prolific USB-to Serial Comm Port name, the installation is successful. The device is ready to use.

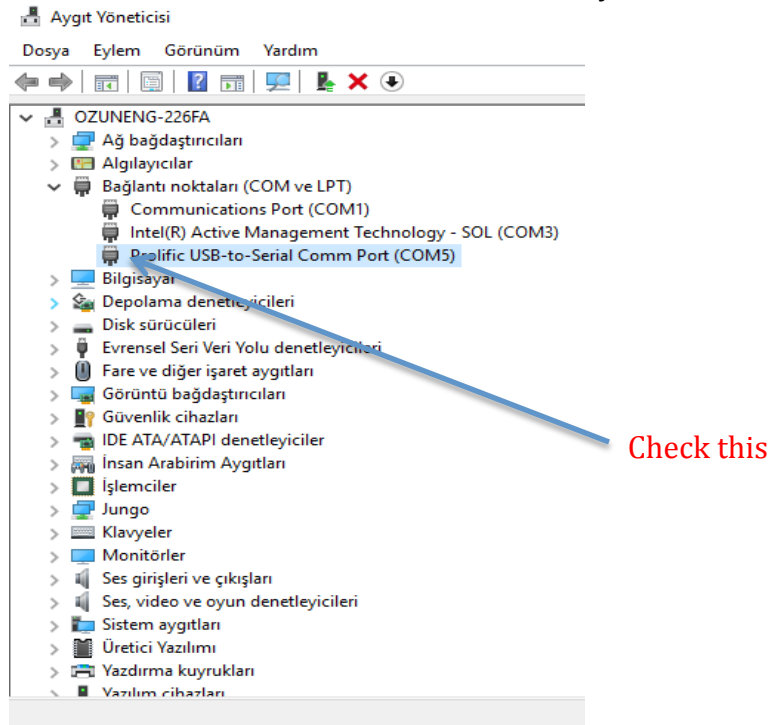


8) If there is a warning symbol on the Prolific USB-to Serial Comm Port name, follow the steps below.

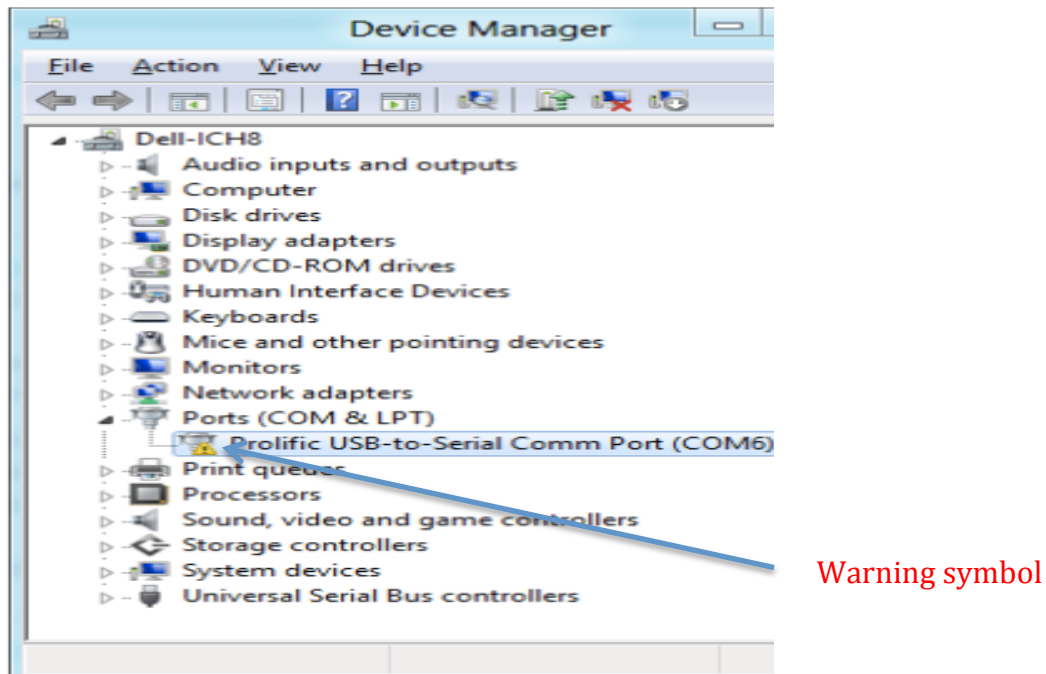


9) Right-click on the USB-Serial Controller device and click on **Update Driver**.

10) Select **Browse my computer for driver software**

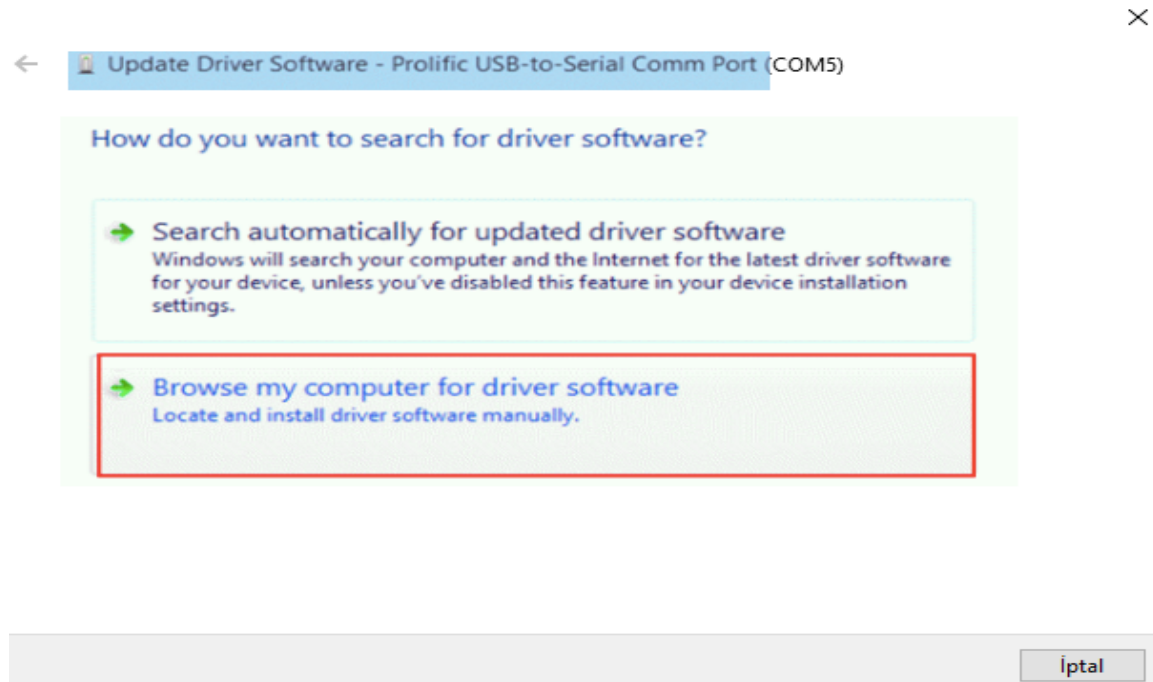

11) Click on **Let me pick from a list of device drivers on my computer**.

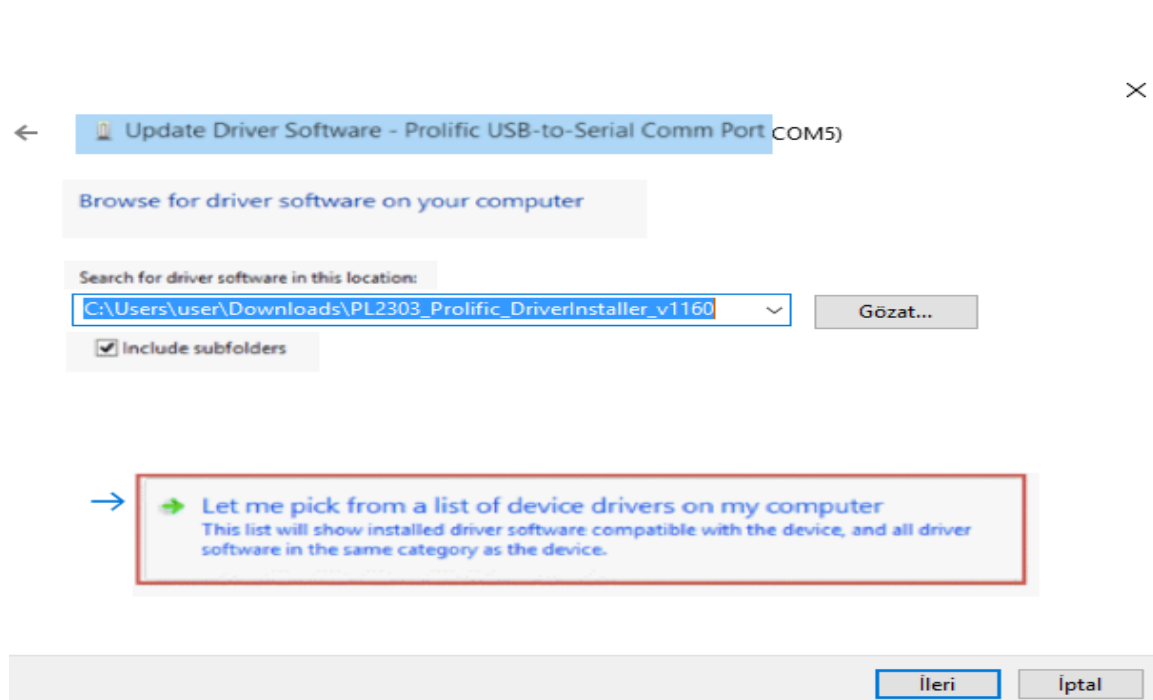

×



No warning symbol

