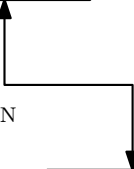



CLOCK PULSE

A horizontal arrow pointing from the PRU1 CLOCK block to the PRU0 SPI block.

CHARACTER
DEVICE
rpmsg-pru30
INITIALIZATION
PCM DATA
STREAM

A line connecting the ARM DEBIAN LINUX block to the PRU0 SPI block. It starts from the top of the ARM block, goes up, then left, then up again to the PRU0 SPI block.

CHARACTER
DEVICE
rpmsg-pru31
START CLOCK
CONTROL

A line connecting the ARM DEBIAN LINUX block to the PRU1 CLOCK block. It starts from the top of the ARM block, goes up, then right, then up again to the PRU1 CLOCK block.

ARM
DEBIAN
LINUX

A large rectangular block representing the ARM DEBIAN LINUX system.