

A

B

C


D

A


B

C


D

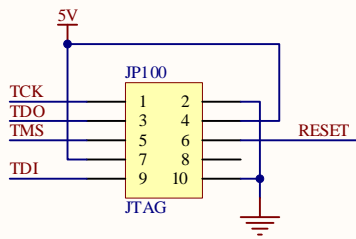


JTAG Programming Interface

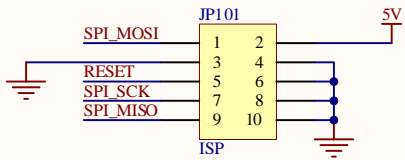

ISP Programming Interface

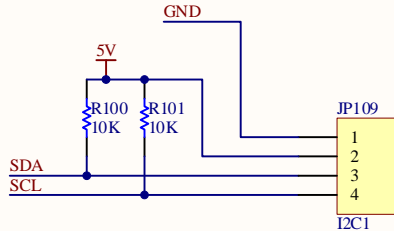


I2C1

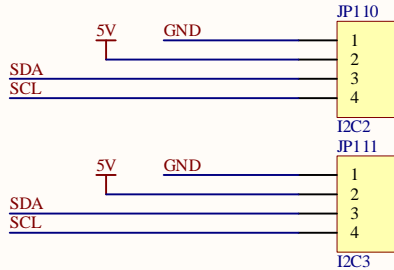


I2C2  
I2C3


PC Serial Interface

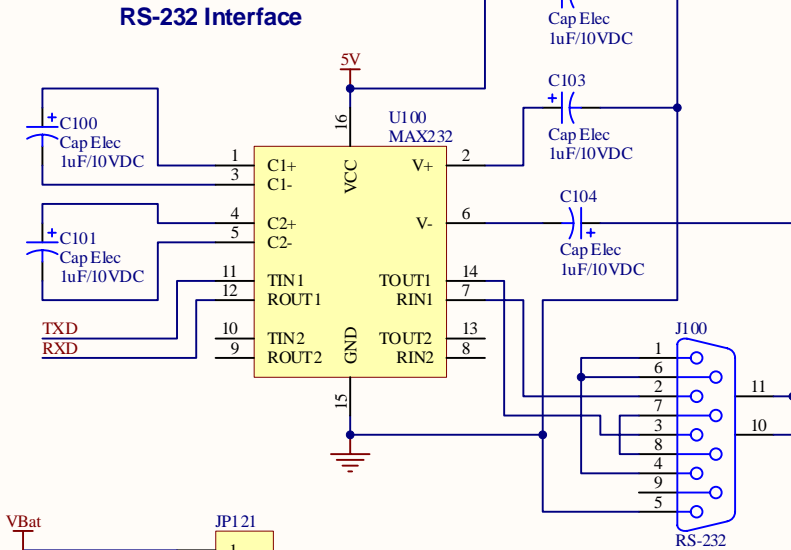

RS-232 Interface




Batt In




Batt Out

Unregulated Voltage Input/Output

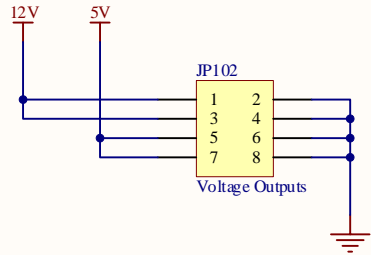


Voltage Outputs

Regulated Voltage Outputs

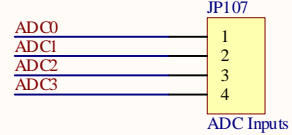


ADC Inputs

ADC Inputs

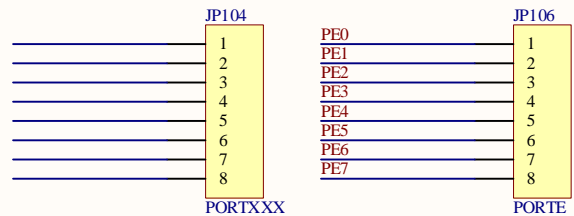

Digital I/O

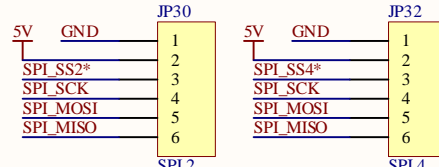

SPI Serial  
SPI\_SS\* is used for the serial ROM

Title		
Size	Number	Revision
A4		
Date:	04-Mar-07	Sheet of 10
File:	C:\Documents and Settings\...\Interfaces and I/O Drivers.SCHDOC	