

# QuickStart Card

## IAR Embedded Workbench™ using a stand-alone license

This QuickStart card describes how you install and activate IAR Embedded Workbench™ products with a **stand-alone license**.

For more detailed information, see the *Installation and Licensing Guide*, which is included on the product CD as the file *InstallationGuide.pdf*.

### SYSTEM REQUIREMENTS

- A PC with Windows 98/ME/XP, Windows 2000, or Windows NT 4.
- A Pentium processor with at least 64 Mbytes of RAM, and 100 Mbytes of free disk space.
- A web browser and Adobe Acrobat Reader to be able to access all the product documentation.

### STAND-ALONE LICENSE LOCKS

A **stand-alone license** is a single-user license, locked either to the computer where the software is installed (the default), or to a hardware lock (dongle). A **dongle** is a device you attach to the computer's parallel port, which allows you to easily move the license to another computer. A dongle is part of the product package only if you have explicitly ordered it.

## The installation procedure

The IAR Embedded Workbench™ installation is a three-stage procedure:

- A** First you install the IAR software using a **QuickStart key**, which allows you to use the product for 30 days.
- B** During this 30-day period, you must activate your license by registering the product with IAR Systems. Within 5 business days, you will receive a **permanent key** for your license.
- C** Finally you install the permanent key. This opens up the product for permanent usage.

Follow the detailed steps below for each stage.

### A. Installing the software

- 1** Insert the IAR Embedded Workbench™ installation CD. The installation program should start automatically. If it does not, run the *autorun.exe* program from the CD.
- 2** Select **Install the IAR Embedded Workbench™**.
- 3** You must accept the license agreement when prompted. By clicking the **Accept** button, you confirm that you have read and understood the license agreement.

- 4** Enter your name, company, and the 17-character license number printed on the CD cover:

Name:

Company:

The license number can be found on the CD cover.

License#:

- 5** Enter the 16-character QuickStart key printed on the CD cover:

License #:

License Key:

- 6** Select the type of license lock you wish to use, either **My computer** or **Hardware dongle**:

☒ My computer (Default)

☐ Hardware dongle

Lock type information:


My Computer.

The license will be locked to the computer on which this product is installed.


If you choose Hardware dongle, you must now attach the dongle to the parallel port.

(Continue on the next page)

- 7 Accept the default installation directory or specify a directory of your choice:




- 8 Select either a **Full** or a **Custom** installation:

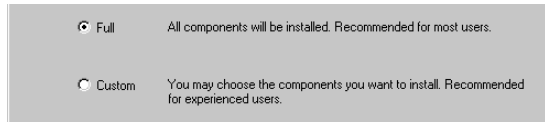

If you choose Custom, select the components you want to install in the next dialog.

- 9 Select where to place the IAR Embedded Workbench™ icons in the Windows **Start** menu:

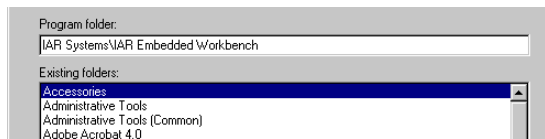


- 10 Review the settings for the installation and click **Next** to install the program files.

At this point, you can use the IAR product for a limited period of 30 days. To open up the product for permanent usage, you have to **activate** the license: first you register the product with IAR Systems to receive a permanent key, and then you install the permanent key.

If you do not register the product, you will be **unable to run the software** after the 30-day period.

## B. Activation step 1: Registering the product

- 1 When the program files have been installed, a license activation program is started. Click **Next** to enter the requested information, and select how to register:

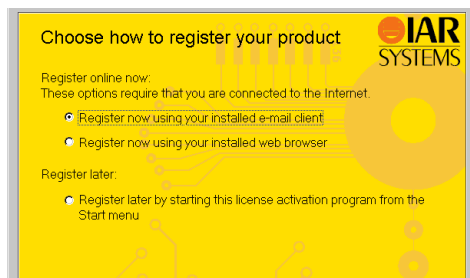

- 2 Send in your registration now or later:


- If you choose to register now via E-mail, an E-mail message is automatically sent to IAR Systems.
- If you choose to register now via the web, make sure to **Submit** the resulting web page to IAR Systems.
- If you choose to register later, the information you entered is saved in the `registration.txt` file in the installation folder. However, you must remember to run the license activation program at a later time to send this file to IAR Systems.

- 3 Finish the installation program.

## C. Activation step 2: Installing the permanent key

Within 5 business days after sending in your registration, you will receive the permanent key via E-mail. Install it as follows:

- 1 Select and copy the permanent key from the E-mail message, according to the instructions in the message.
- 2 Start the **IAR Systems License Manager** from the **Start** menu. In the License Manager window, click the **Install License** button.

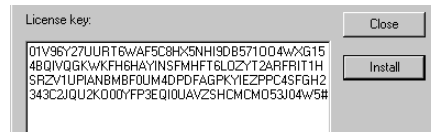

- 3 Enter or paste the permanent key into the text field.
- 4 Click **Install**.

You are now finished with the IAR Embedded Workbench™ installation.

**Important:** Read the note about license transfer in the *Installation and Licensing Guide*.

### IN CASE OF PROBLEMS

If you have problems concerning the installation or license:

- Read the detailed *Installation and Licensing Guide*, included on the product CD as the file `InstallationGuide.pdf`
- Check the technical notes on the Technical Support pages on the IAR website: [www.iar.com](http://www.iar.com)
- Contact your IAR software distributor. If they are unable to assist you, contact IAR Technical Support. Refer to the product box for address information.