

# AnyClub.Org

Android Linux Development Technology.

6/01/2012

## How to build the Android LK bootloader without compiling the entire software

If you are always working in LK bootloader, a dedicated command to build the LK bootloader may save a lot of time, here are the step that you need to do (example below is for 8660):

1.. cd M8660AAABQONLYM1070/LINUX/android

2.. source build/envsetup.sh

3.. choosecombo 1 1 msm8660\_surf 3

4.. cd android/bootable/bootloader/lk

5.. make PROJECT=msm8660\_surf BOOTLOADER\_OUT=../../out/target/product/msm8660\_surf/obj/BOOTLOADER\_EMMC\_OBJ EMMC\_BOOT=1

Android Developer



Follow

+1

+ 389


Search This Blog

Search

Followers

Once the completed, the image emmc\_appsboot.mbn will be generated in M8660AAABQONLYM1070/LINUX/android/out/target/product/msm8660\_surf folder which you specified in BOOTLOADER\_OUT.

时间： 6:22:00 PM

 Recommend this on Google

标签：[bootloader](#), [building Envionment](#)

No comments:

Post a Comment

Enter your comment...

Comment as: 小草 (Google)

Sign out

Publish

Preview

☐ Notify me


[Newer Post](#)

[Home](#)

[Older Post](#)

Subscribe to: [Post Comments \(Atom\)](#)

关注者 ( 36 人 ) [下一步](#)

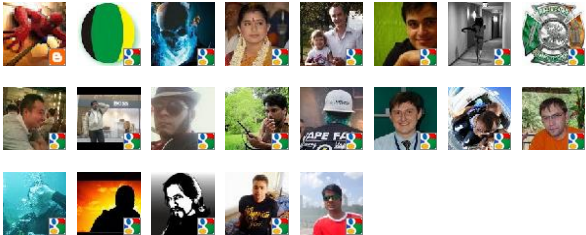

[关注](#)

Labels

- [3D](#) (2)
- [Accessory](#) (1)
- [aduio](#) (6)
- [amss](#) (13)
- [android](#) (4)
- [android linux](#) (12)
- [AT command](#) (1)
- [bcm4329](#) (1)
- [bootloader](#) (8)
- [building Envionment](#) (5)
- [bus](#) (4)
- [charge](#) (1)
- [clock](#) (1)
- [ddr](#) (1)

[download](#) (3)

[efs](#) (1)

[emmc boot](#) (12)

[GPS](#) (1)

[HDMI](#) (1)

[i2c](#) (4)

[JTAG](#) (7)

[kernel](#) (2)

[kernel debug](#) (13)

[LCD](#) (2)

[MDM9x15](#) (1)

[media](#) (4)

[mmc card](#) (2)

[msm7x27](#) (4)

[msm7x27A](#) (1)

[msm8960](#) (1)

[msm8x55](#) (14)

[msm8x60](#) (12)

[NV](#) (3)

[partition](#) (1)

[pmic](#) (5)

[ppp](#) (2)

[qpst](#) (5)

[QRD8x25](#) (8)

[SD card](#) (4)

[sim card](#) (2)

[sleep](#) (6)

[tools](#) (5)

[Trace32](#) (7)

[uart](#) (4)

[usb](#) (18)

[usb otg](#) (2)

[Video](#) (1)

[wifi](#) (6)

---

#### Blog Archive

---

► [2014](#) (1)

► [2013](#) (11)

▼ [2012](#) (225)

► [December](#) (7)

► [November](#) (2)

► [September](#) (1)

▼ [June](#) (157)

[qualcomm msm7227 Audio device flow in  
Android part...](#)

[HSUSB related NV items in qualcomm  
chipset](#)

[I2C Power collapse issue in android build](#)

I2C Suspend Power Collapse in AMSS  
8650 Software

If Host PC do not set DTR high on rmnet  
interface,...

In CATC USB analyser log file, USB reset  
signal is...

Instead of TCXO\_EN, can any GPIO be  
used for contr...

Is Gadget frame work supported and how  
to enable G...

Is it possible to use UART1DM and  
UART1 simultaneo...

Kernel Panic when enabling USB  
Tethering on msm7x2...

Qualcomm Universal serial (QUP) on  
msm7x30 overvie...

How to enable Analog audio over HS USB  
port on Qua...

QPST configuration window can not find  
the phone.

Q&A about Qualcomm's Windows host  
driver

Andoird Platform doesn't go to suspend  
when BT is ...

Lower SPI transaction rates supported by  
our drive...

How to mount the FAT partition as a Mass  
Storage d...

How to make usb host driver work in  
Vista64

How to make the device able to sleep  
when usb cabl...

How to make mass-storage recognized as  
CD-ROM driv...

How to Know real speed the usb stack  
work in

How to install device driver for USB2.0  
Debug Conn...

How OEM can set own PID for dload  
mode in qualcomm...

How the usb function device exist in  
android/LE bu...

How to add another usb COM port in  
android/LE buil...

How to add GPIO bit-bang i2c device to  
Linux kerne...

How to add new clock param for SPI bus  
in linux bu...

How to analyze the status of I2C Bus for  
linux bui...

How to capture LeCroy CATC USB log?

How to capture modem PPP log use  
wireshark in Qual...

Direct control of sensors through apps  
processor o...

Does MTP supported in Android builds?

Enabling High Speed Electrical Test Tool  
(HSET) su...

Fast Dead Battery Charging via USB HID  
Enumeration...

How can I switch HS USB composition  
without resett...

How can I access Data Service over 2

[different USB...](#)

[GSBI Protocol Code/PIN mappings in qualcomm MSM866...](#)

[GSBI Configuration for I2C on qualcomm Android msm...](#)

[Diag over UART on qualcomm MDM8200, MDM8220, MDM92...](#)

[Connecting QPST over uart1dm in qualcomm android c...](#)

[Comparison between Self-powered hub and Bus-powere...](#)

[Can we disable session/vbus comparators in integra...](#)

[Can we customize the interface number in the Andro...](#)

[Can I implement usb NIC or use QMI/NDIS interface ...](#)

[Can Qualcomm MSM8960 apps processor control GSBI11...](#)

[Calculation of the UART2DM Baud Rates in qualcomm ...](#)

[What is the API or callback function when the Wall...](#)

[Adding Dal i2c to osbl in Qualcomm AMSS 7630 Softw...](#)

[about change the sequence of interfaces in composi...](#)

[Can UART2DM used for linux kernel debugging purpos...](#)

[Sleep Mechanism in Qualcom msm8x55 chipset ---- D...](#)

[Sleep Mechanism in Qualcom msm8x55](#)

chipset ---- D...

Sleep Mechanism in Qualcomm msm8x55  
chipset ---- SI...

Sleep Mechanism in Qualcomm msm8x55  
chipset ---- S...

Why Trace 32 Lauterbach debugger GUI  
always meet d...

Enumerate the SD card in DLOAD mode  
only on MSM896...

[TZ] Dump RPM MPM timer ticket via TZ

[TZ] Extracting Power Collapse and Warm  
Boot Count...

Trustzone L1 Cache Dump on AMSS8960

Unified boot cookie on MSM8660

Usage of system IMEM on AMSS8960

What is dual-channel interleaved mode  
with SDRAM a...

What is FEATURE\_AUTODETECT\_DDR  
about in MDM6600 bu...

How to perform Emergency Download on  
MSM7x27 SURF

How to measure the running time of  
program in Trac...

How to know the RPM watchdog activity  
on MSM8960?

How to increase the memory size  
allocated for the ...

How to increase Max NAND partition  
number on MDM9x...

How to get the power on status on  
MSM7x30



How to get the detailed information about  
how many...

How to get the 7x30 PBL error message  
by using JTA...

How to generate the source level  
debugging build i...

How to generate a non repeating random  
number in S...

How to find out rpm version on AMSS8960

How to extend the memory region for A5  
use when ap...

How to enable EB11 Turbo mode  
(450/492Mhz) on Msm8...

Kernel timers API

Dumping an eMMC partition in the  
msm8x55/msm8x60

Modem EFS partition backup and recovery  
during boo...

eMMC Sparse Image Download in the  
MSM8x60

Adding New Sound device on MSM8x60  
Linux Platforms...

How to add support for a new MDDI client  
on Linux ...

Adding task to dynamic software watchdog  
in the MD...

Additional octets in FTN (Forward To  
Number) in Re...

Adreno200 GPU MMU behavior

An easy way to enable logo display during  
linux bo...

Analog TV-OUT cable Auto detection  
feature

Android (7x27, 8x50) - Green (Gray)  
images are sho...

Android - Some clips cannot be played  
through HTTP...

Android CTS Datetime error

Android Gingerbread BT source file  
directory

Android GPS/AGPS settings for CU and  
OMH

A2DP audio intermittent drops while the  
device inq...

Abnormal current drain soon after  
MediaFLO activat...

About Call Origination Plan

About Low battery charging in boot stage

About NV items as XML or QCN file

How UE decides the acquisition order  
preference in...

Acoustic vs Electrical audio measurement

ACDB ( Audio Calibration Database)  
images in Fusio...

- ▶ [May](#) (49)
- ▶ [April](#) (1)
- ▶ [March](#) (1)
- ▶ [February](#) (6)
- ▶ [January](#) (1)
- ▶ [2011](#) (10)

Ethereal template. Powered by [Blogger](#).