


WARNING – there is no over-voltage protection on these inputs. They can only be connected to 0–5V control voltages / gates.

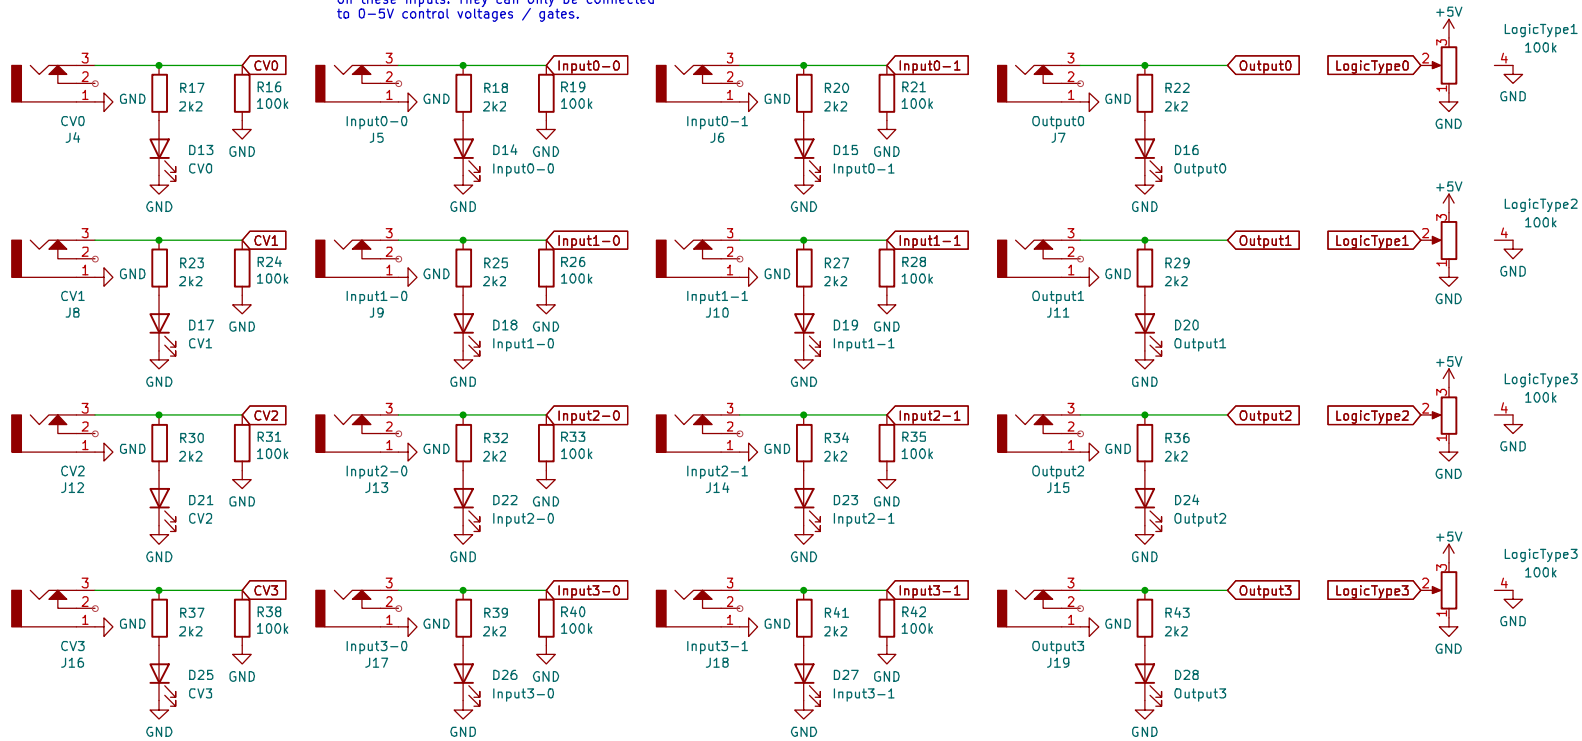

Choose between each gate having 3 inputs, or each gate having 2 inputs plus CV to change the gate type

SW?  
3 inputs / 2 inputs + CV  
GND

