



For information, contact your reseller or go to:
www.polycom.com

Polycom WW Headquarters:


Polycom, Inc. Corporate Headquarters
6001 America Center Drive
San Jose, CA 95164
USA

© 2012, Polycom, Inc. All rights reserved. POLYCOM®, the Polycom logo and the names and marks associated with Polycom's products are trademarks and/or service marks of Polycom, Inc. and are registered and/or common law marks in the United States and various other countries. All other trademarks are property of their respective owners. No portion hereof may be reproduced or transmitted in any form or by any means, for any purpose other than the recipient's personal use, without the express written permission of Polycom.


1725-07836-001 Rev. D

Parts List


SoundStation2W™ console

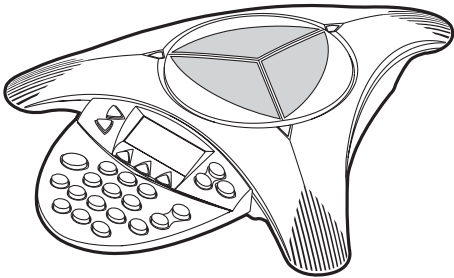


Battery pack




Console Charging module

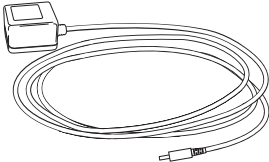


SoundStation2W™ base

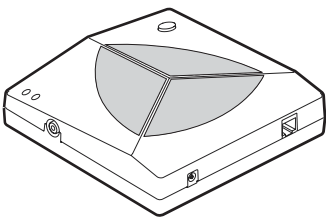


Base power supply

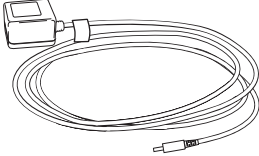


Telephone cord

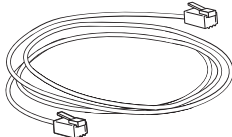


Mobile telephone connector




Documentation

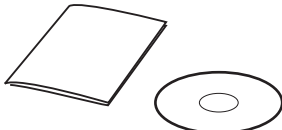


Expansion microphones
(Sold as an accessory)

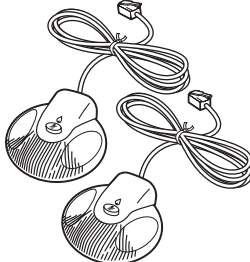

Setup

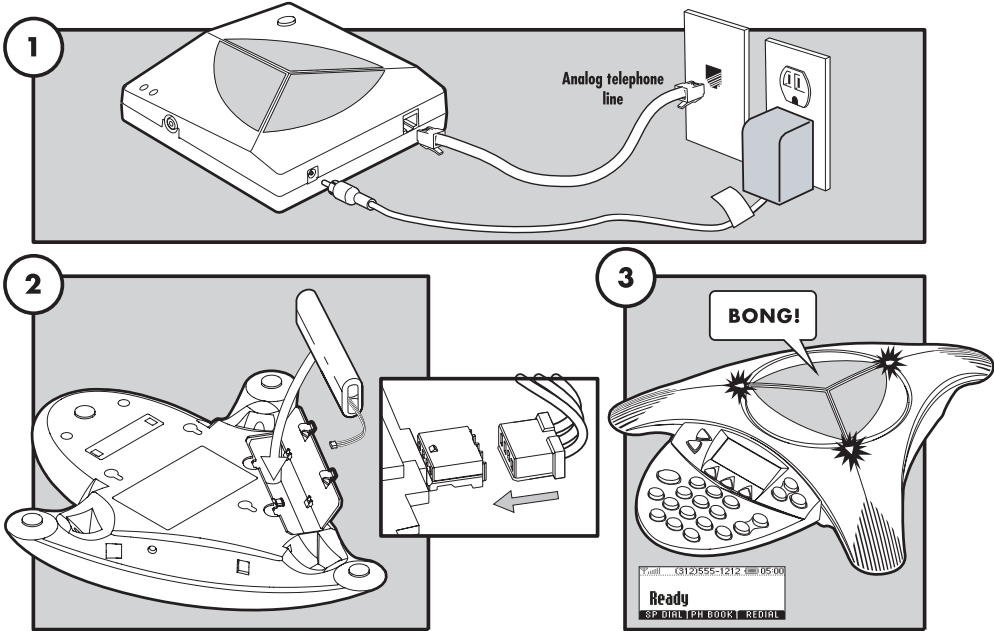


LCD

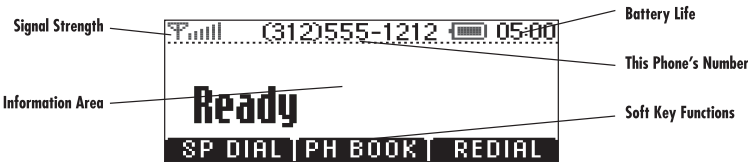

Signal Strength



Recharge Battery

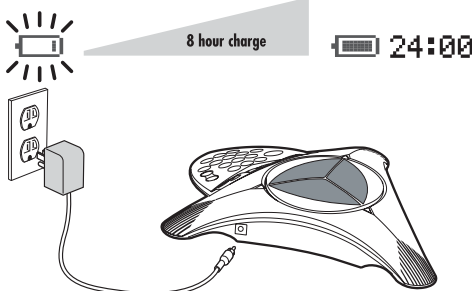

Phone operates normally while charging.


Console

LEDs



Green – Your call is in progress.
Blinking Green – A call is incoming.
Red – Your call is muted.
Blinking Red – Your call is on hold.


Buttons

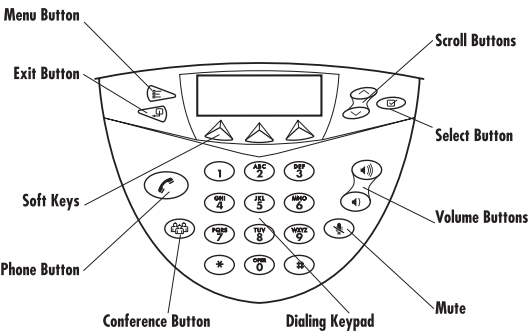

Additional Setup Options

External Connections


Mobile Phone
Adapter may be needed
depending on phone type

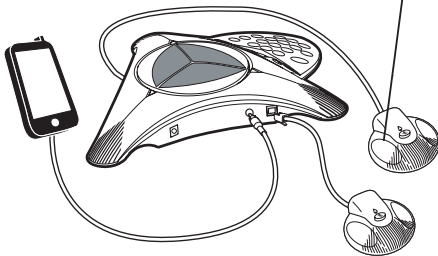

Wall Mount

External Microphones
Only available on expandable models


Wall Mount Holes

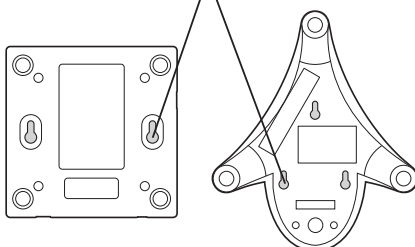

Bottom of Console and Base Station

Base Station

LEDs

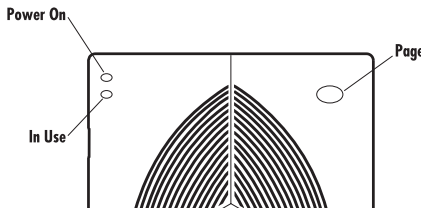

Auxiliary Setup

