

# **UcConditioner 5V**

## **Ultra Capacitor Conditioner board**

By Ian Jin May 28, 2020 Ver. 0.91b

### **A. Introduction**


UcConditioner 5V is an ultra capacitor conditioner board that works with any existing 5V power supply. UcConditioner will significantly improve the power supply quality by reducing both internal ESR and the noise levels, as well as increasing the stability and the maximal deliver current.

For audiophiles, upgrading power supply with UcConditioner could be a one of the best solution to achieve better sound quality.

### **B. Highlighted Features and Specifications**

- Fully ultra low resistance MOS FET architecture.
- Built-in automatic per-charge/charge circuits with current limitation.
- Enable/disable conditioning is performed by monitoring ultra capacitors and DC input status.
- All control logics are running automatically at background, no need any external control signal.
- Very easy to use. Just input and output.
- On-board active balancers for ultra capacitor protection.
- LED indications for power on, power good, ultra capacitor full and conditioning.
- Double thickness 2oz PCB copper layers especially designed for high current and ultra low ESR applications.
- MOS FETs are controlled by optical isolators to eliminate any possible leakage current.
- External ultra capacitor connectors flexible for evaluation and possible upgrading.
- Output is 100% following the input without any delay.
- With ON/OFF control signal output for possible requirement.
- DIY friendly, works for any 5V power supply, plug and play, no software is required.

## C. Layout and Dimensions (in mm)

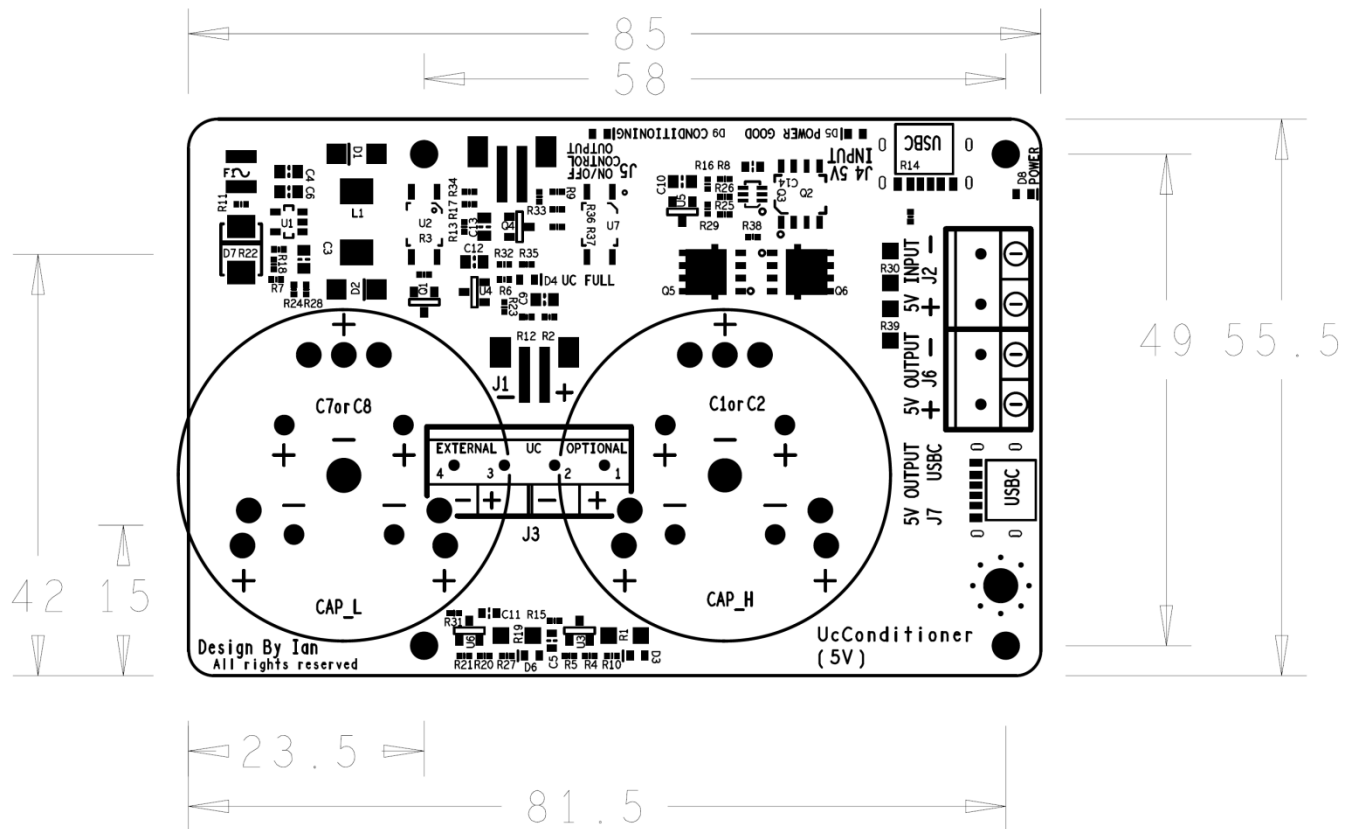

## D. Getting start

1. Solder two ultra capacitors to the positions of CAP\_L and CAP\_H.

Ultra capacitor P/N can be:

BCAP0325 P270 S17, or

BCAP0350 E270 T11.

Lower ESR capacitors are performed.

Please make sure using solder iron with **80W or higher** power for durable connections of this high current conditioner board.

2. Connect a 5V power supply to either input terminal block J2 or USB connector J4. (If you power supply is capable of delivering 1.5A current or higher, you can go to step5 directly)
3. Turn on the 5V power supply, both power LED and power good LED will be lit.

4. For the first time power up, it will take up to 10 minutes charging the ultra capacitors to 5V. When they are fully charged, both UC FULL LED and CONDITIONING LED will light up. After that, turn off the 5V power supply.
5. Connect UcConditioner output (J6 or J7) to the device that needs to be powered.
6. Turn on the 5V power supply. All of the above 4 LEDs will be lit up shortly indicating that the UcConditioner is in conditioning state. Now you can enjoy the improvement that the UcConditioner makes.

## **E. Connectors**

### **J2: 5V DC power input connector**

A 5V DC power supply that needs to be conditioned must be connected to this (or J4) 2-pin 5.0mm terminal to operate. The voltage range must be within 4.9V to 5.3V. To power Raspberry Pi, rated current 2A or higher linear power supply would be recommended for this input.

### **J4: 5V USB type-C input power connector**

If you want to use a USB power supply, you can connect it to J4 and at the same time leave J2 unconnected. Rated current 2A or higher would be recommended. J4 and J2 are connected together internally.

### **J6: UcConditioner 5V output in 2-pin 5.0mm terminal**

This is the ultra capacitor conditioned 5V output when conditioning LED is lit, otherwise it will be connected to 5V input.

UcConditioner output will be turned on or off automatically when 5V DC input voltage is applied or removed.

This output can deliver maximal current higher than 100A, so has to be very careful not to short circuit.

### **J7: UcConditioner 5V output in USB type-C connector**

This output is alternative to J6 if you need the USB cable. Internally J6 and J7 are connected together.

### **J1: Ultra capacitor package testing/monitoring connector in 2-pin PH2.0**

- 1: V- of ultra capacitor package
- 2: V+ of ultra capacitor package

### **J3: Optional external ultra capacitor terminal connector (un-installed by default)**

- 1: CAP\_H +
- 2: CAP\_H -
- 3: CAP\_L +
- 4: CAP\_L -

### **J5: ON/OFF control signal output in 2-pin PH2.0**

Can be used for the isolated input of other possible device that needs this on/off control signal. No need in normal application. This signal is non-isolated.

## F. LED indicators

D8: Power indicator. Indicating that the DC input voltage is applied when lit. The output of UcConditioner will be valid at same time.

D5: Power good indicator. Indicating that the DC input voltage is higher than 4.9V when lit.

D4: Ultra capacitor full indicator. Indicating that the ultra capacitor package is full when lit.

D9: Conditioning indicator. Indicating that the UcConditioner output is in conditioning state when lit.

D3, D6: Ultra capacitor over voltage alarm indicator. Indicating the charging voltage of CAP\_H or CAP\_L is higher than 2.7V.

## G. Application notes

1. It will be very hard to remove if the ultra capacitors are soldered to the UcConditioner PCB. So, if you are new to UcConditioner, I would suggest soldering them first to the option external UC connector J3. And then solder them to PCB only after you make sure everything is good.
2. UcConditioner is kind of passive power supply. Please use wires as big and short as possible to the output to get the best possible performance.
3. UcConditioner doesn't regulate the voltage. The output voltage will be as same as the input voltage. So, the input voltage must be within range of 4.9V to 5.3V. If it is lower, the UcConditioner will not go to conditioning state. If it is higher, the ultra capacitors can get damaged or reduced the life time.
4. The internal charging current limitation is 1A. If the power supply it will attach to has output current less than that, it may take longer time to charge the UcConditioner to 5V if it is fully empty. In this case, I would suggest pre-charge the UcConditioner with a 5V USB power adapter at the first time of use. Both the UC FULL LED and CONDITIONING LED will light up when UcConditioner is full.
5. The output of UcConditioner will follow the 5V DC input voltage without any delay. However, some power supply doesn't remove the output voltage immediately when you turn off the switch. So, in this case, some delay will be expected to the UcConditioner output. This kind of delay is caused by the power supply itself, not the UcConditioner.

## H. Pictures of UcConditioner


1. UcConditioner as shipped




2. UcConditioner with ultra capacitors installed



3. Dynamic 500mA load transient response of a typical 5V/3A external linear power supply

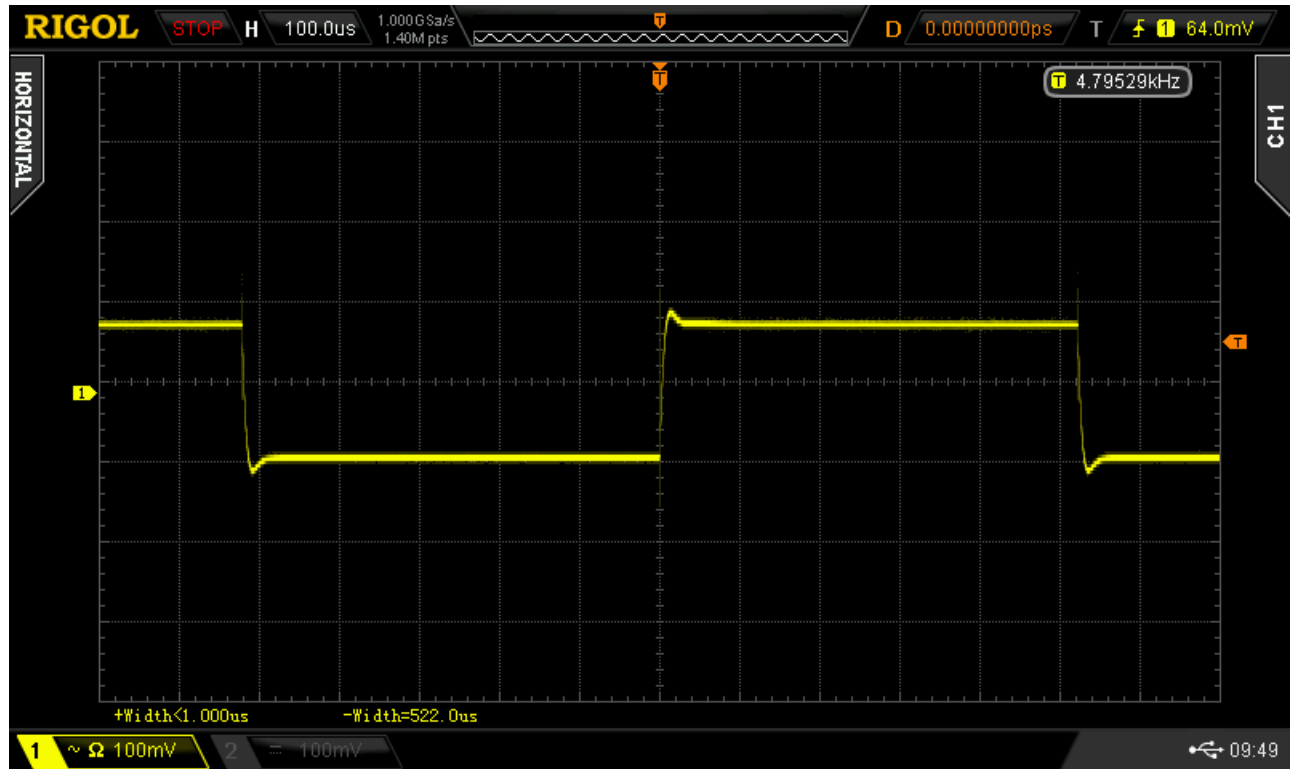

4. Dynamic 500mA load transient response of the same linear power supply with UcConditioner attached

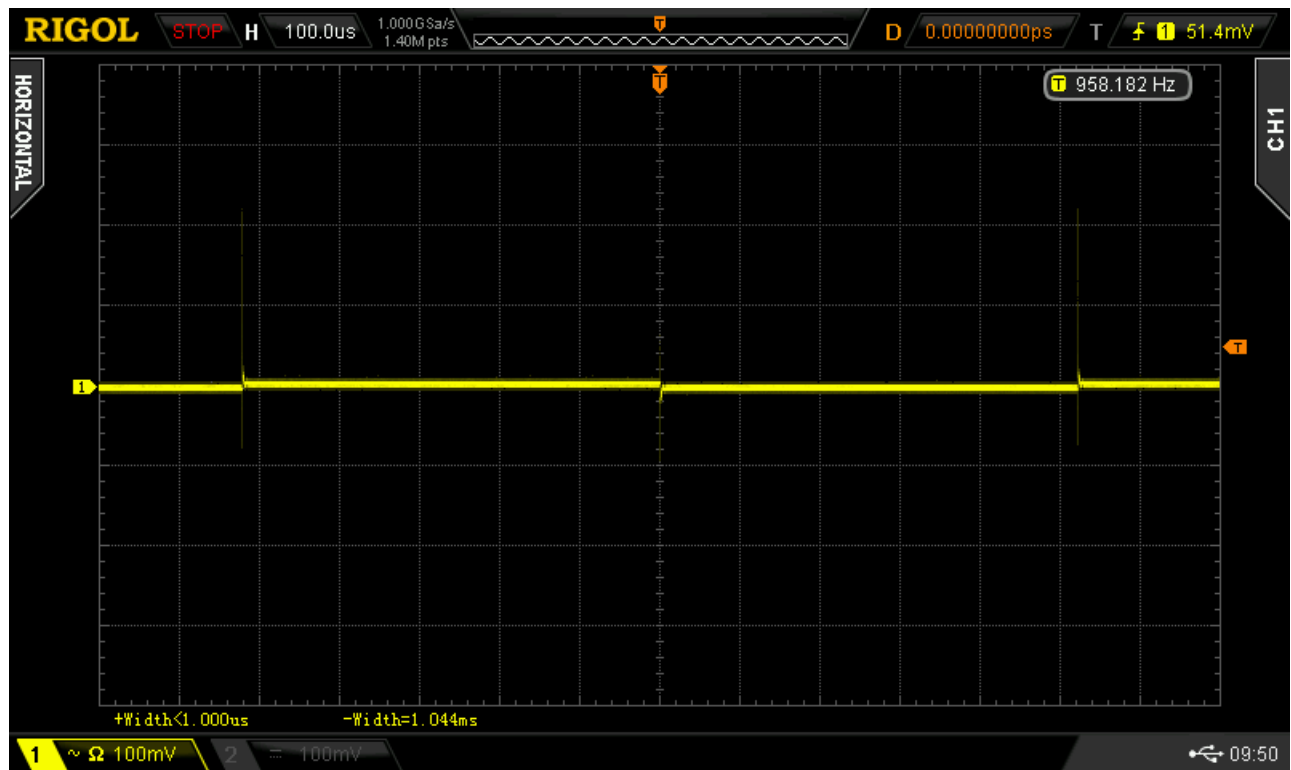

## **I. History of revising**

May 28, 2020 V0.9b released

© 2020 Ian Jin. The firmware code embedded in the UcConditioner is the property of Ian Jin. You are granted a non-exclusive, non-transferable, non-sublicenseable, royalty-free right to use the UcConditioner solely for your own, non-commercial purposes. You may not distribute, sell, lease, transfer, modify, adapt, translate, reverse engineer, prepare derivative works of, decompile, or disassemble the software provided. All rights reserved.