


2.5" Faux Wood Blinds

Installation Instructions


Congratulations on purchasing one of the best blinds on the market. You can take pride that your purchase will enhance the function and beauty of your home.

Mounting hardware:

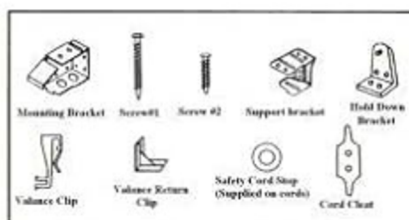


(Note: Support bracket is supplied for blind width 23 7/8" or over)

Tools recommended for installation

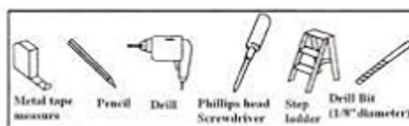


Mounting Instructions

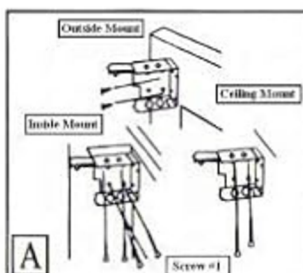


Select the method of mounting blind that best suits your purpose.

- 1) Inside window frame
- 2) On the outside of frame
- 3) On overhead surface ceiling. Brackets should be placed at the end of the width of the blind's head rail $\frac{1}{4}$ " past each end.

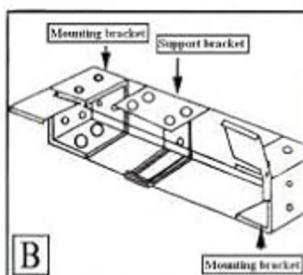


SUPPORT BRACKET

If your blind is supplied with a support bracket, position it closer to the cord lock end of the blind. Make sure the support bracket is in line with the End Mounting brackets.

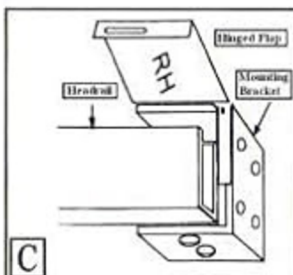


INSERTING HEADRAIL

Insert head rail into brackets and lock hinged flaps down to hold head rail in position.

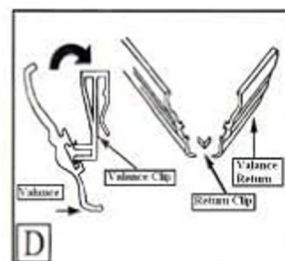

For inside mount installation, attach valance to valance clips by snapping into rear groove of valance. Be sure valance is securely fastened before using your blinds.

For outside mount installation, simply insert the valance clips into the rear groove of valance then attaching the valance with valance clips installed onto the head rail. Insert return clip into valance return. Be sure to insert clip into mitered (Angle cut) side of valance return for proper installation. Then, attach valance return assembly to valance ends.

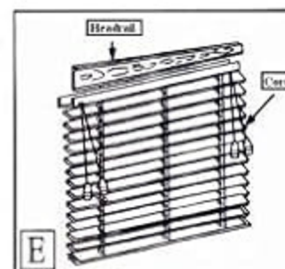

Always tilt blind horizontally before raising/lowering to extend the life of the blind.

To lower blinds: move cord to left, pulling down gently until cord lock release.

To raise blinds: Pull cord downward until blind reaches desired height.

To lock cords: Pull cord right and release. Cord will lock automatically.

Troubleshooting: Due to the weight of the blinds above 50 inches, it may be difficult to lower it at the first use, please use a screwdriver to push the cord lock down to release the blinds.

The cord lock is a small stick at the right side of the head rail; it should be at the bottom to release the blinds.