

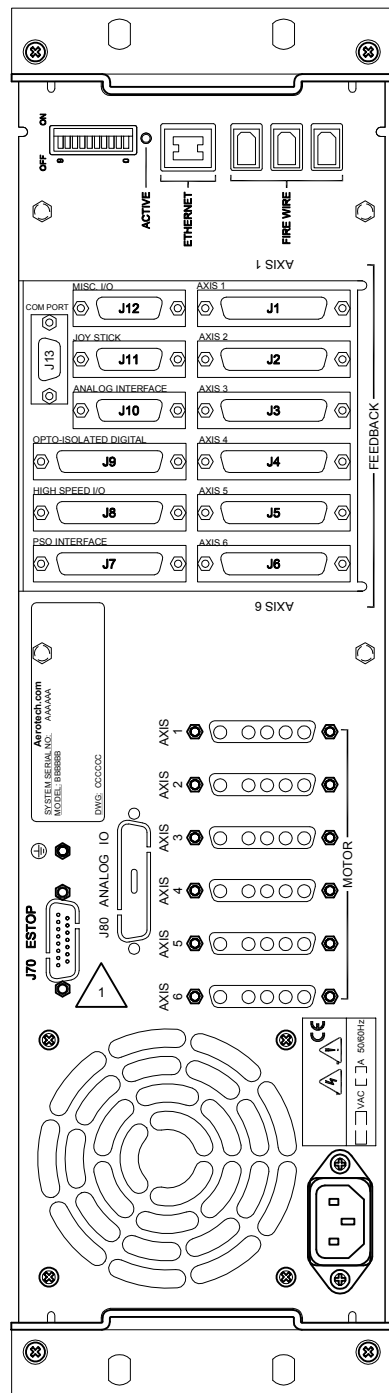


REV.	DESCRIPTION	DATE	DRAWN

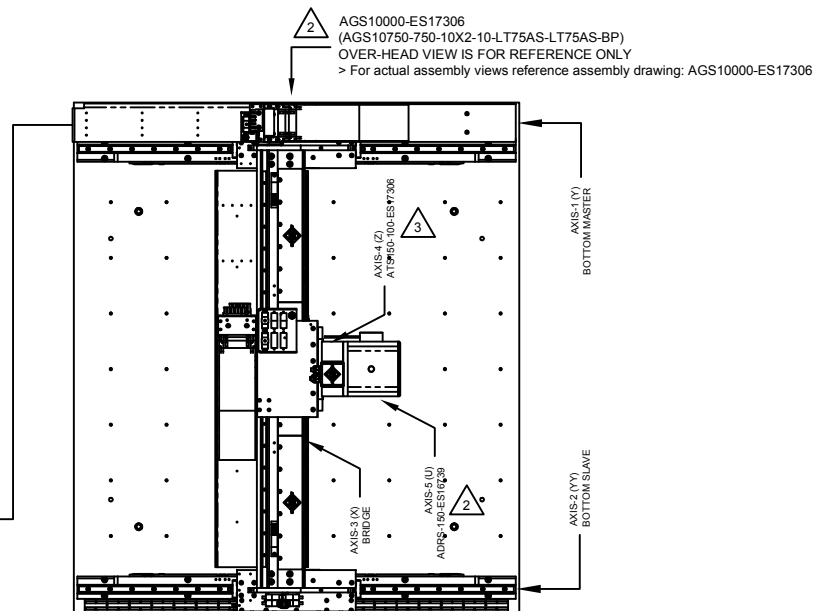

< NPAQ CHASSIS INTERCONNECTIONS >

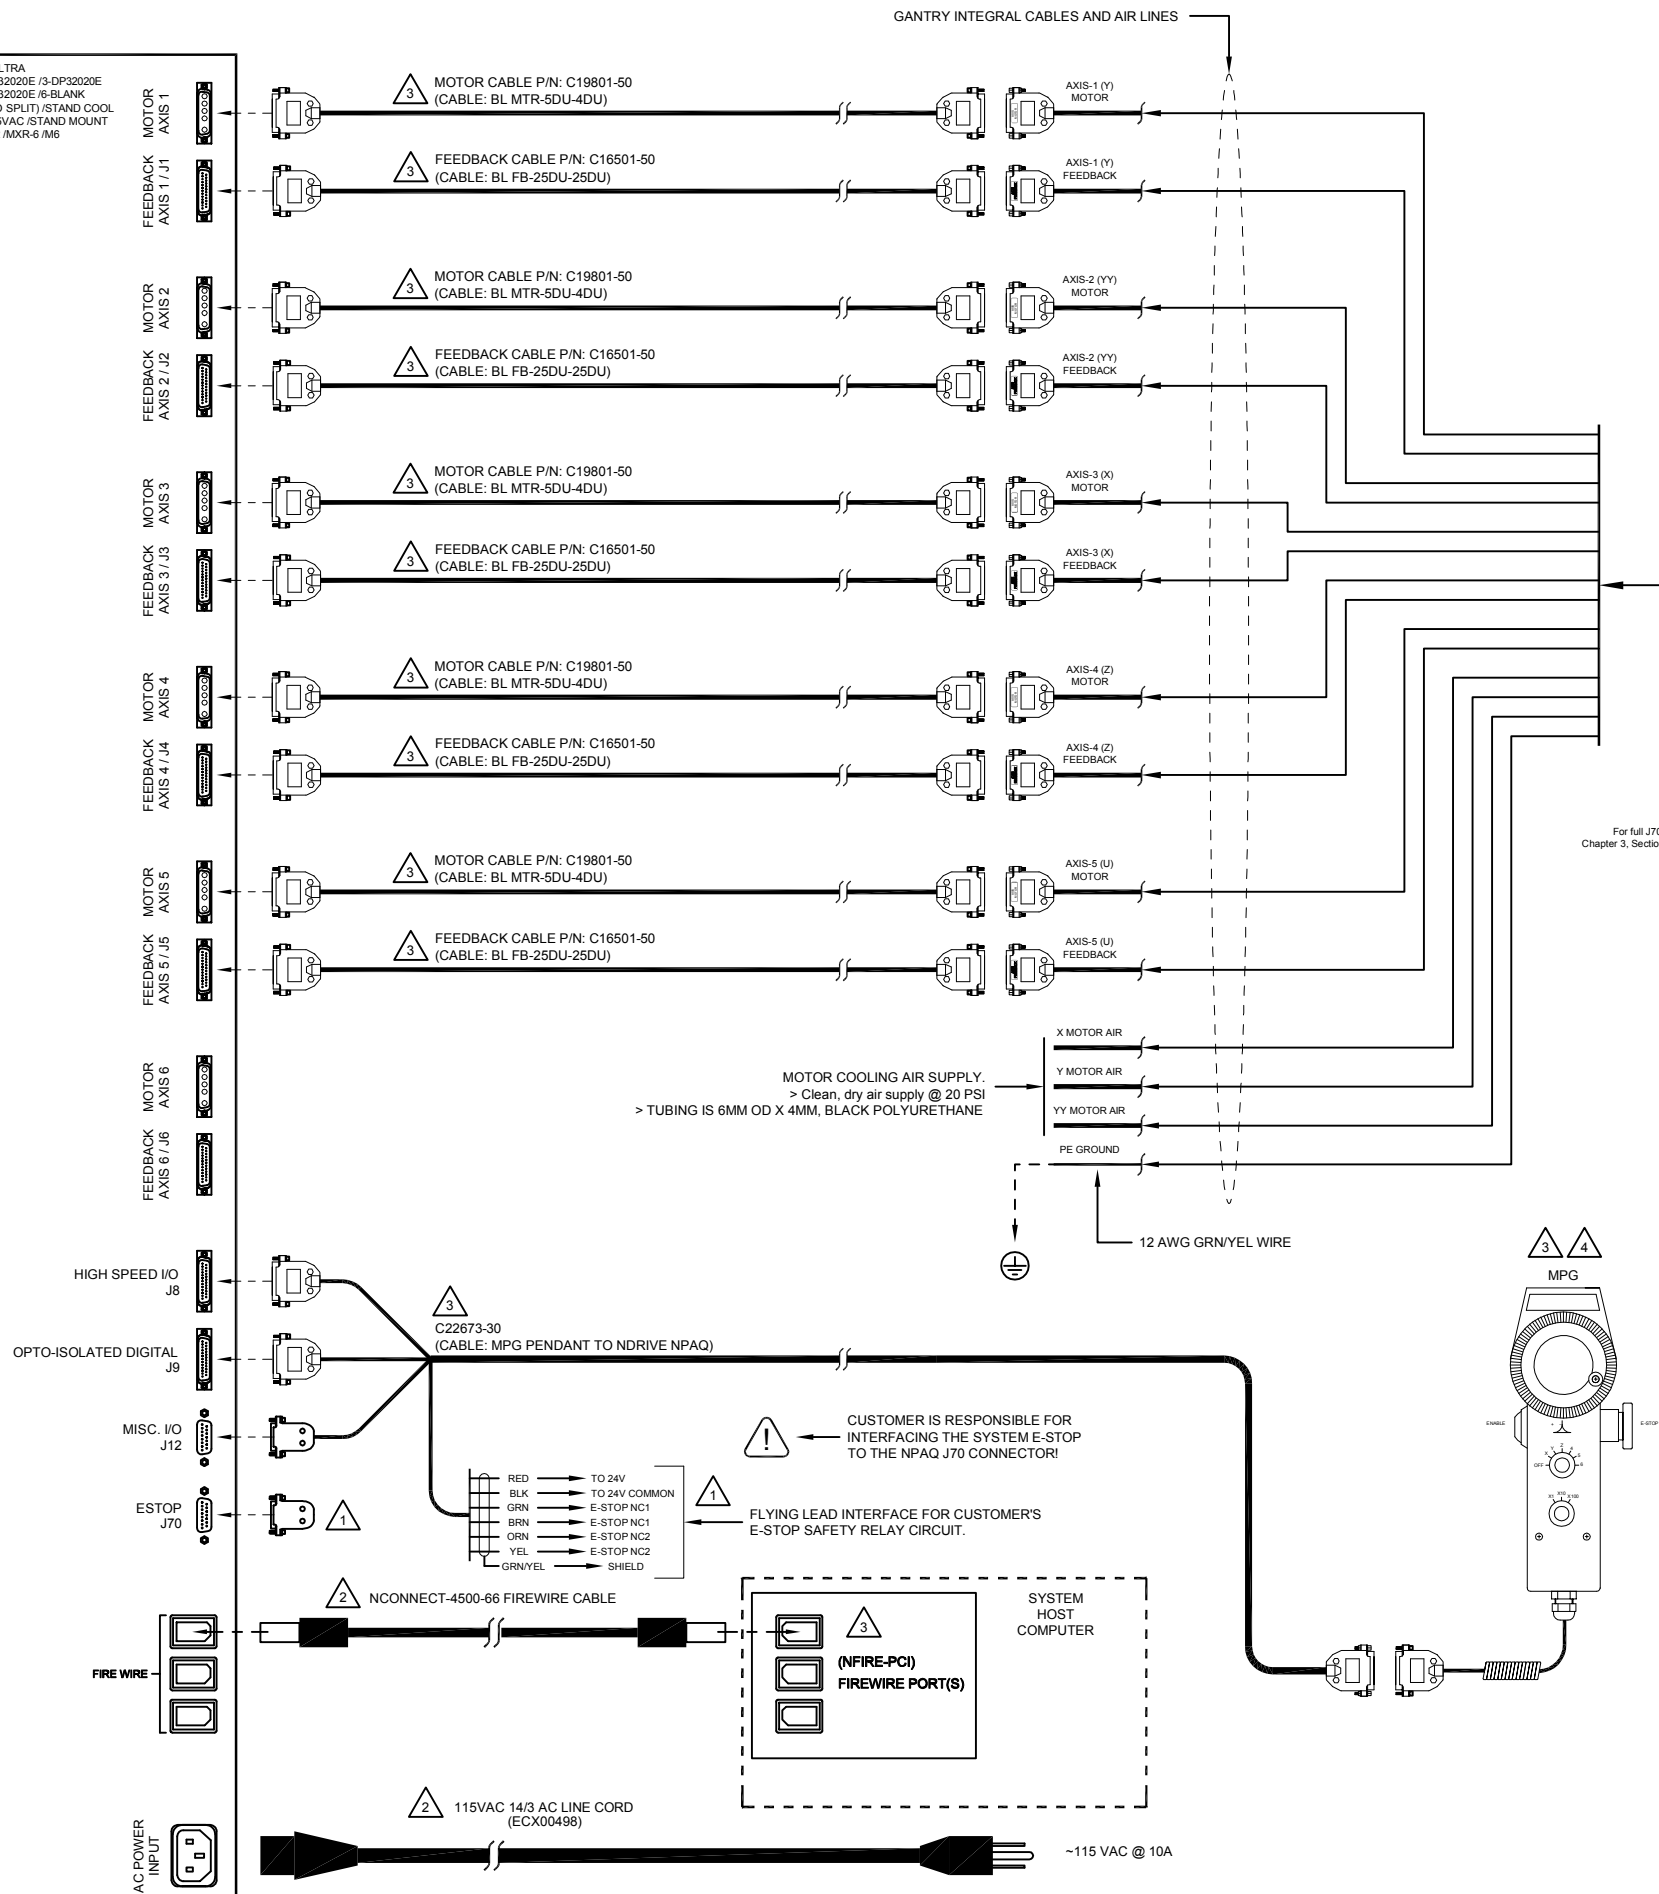


 NPAQ J70 E-STOP CONNECTOR OUTLINE

NPAQ J70 E-STOP CONNECTOR OUTLINE

- > A factory supplied E-STOP by-pass plug is provided to allow the system to be brought on-line during system build-up.
- > Simplified NPAQ E-STOP circuit below is shown for reference only.

For full J70 E-STOP descriptions reference the NPAQ hardware Manual EDU171, Chapter 3, Section 3.6 Emergency Stop Options. Also reference NPAQ wiring for details.

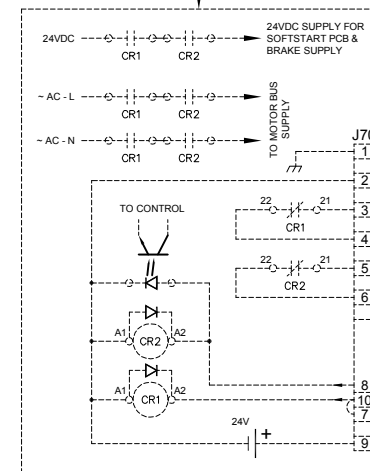

**CUSTOMER IS RESPONSIBLE FOR
— INTERFACING THE SYSTEM E-STOP
TO THE NPAQ J70 CONNECTOR!**



- 2 ITEMS FROM SALES ORDER #158982
- 3 ITEMS FROM SALES ORDER #158981
- 4 MPG HANDWHEEL PENDANT INTERFACE

For connecting the MPG (MPG handwheel pendant) to the NPAQ, reference the following:

- > C22673-30 (CABLE: MPG PENDANT TO NDRIVE NPAQ) See drawing: 630D2267-3
- > MPG Hardware Manual: EDO120

PROPRIETARY INFORMATION THIS DRAWING IS THE PROPERTY OF AEROTECH, INC. AND IS SUBMITTED IN CONFIDENCE AND SHALL NOT BE REPRODUCED NOR COPIED NOR DISCLOSED TO OTHERS UNDER PENALTY OF LAW.			 AEROTECH, INC. 101 Zeta Drive Pittsburgh, PA. 15238 (412)963-7470 www.aerotech.com		
TOLERANCES ON FRACTIONS DECIMALS ANGLES TO 6 1/32 .XX 101 ± 0-30' OVER 6 1/16 .XXX 1005			AGS10000-ES17306 (AGS10000-750-750-10X2-10-LT75AS-LT75AS-BP/ADRS-150) A3200/NPAQ AND GANTRY SYSTEM INTERCONNECTIONS		
RMS EXCEPT FINISH  AS NOTED			PART CODE SIZE REV. A3200/NPAQ D -		
DRAWN JAB 08/20/11 CHECKED EJB 08/20/11			E17306-0		
APPD. EJB 08/20/11			SCALE NTS FILE NAME E17306-001.dwg SHEET 1 of 1		