


LINK CALIBRATION

The controls the apriori GAIN applied to the Reference Receiver.

The controls the apriori GAIN applied to the RF Output N connector

Apriori attenuations applied to each output channels. This forms the nominal setting within SATPOWERPRO absent any other power adjustments.

These are The Hardware Calibration elements. You should not change these values unless you are familiar with the Calibration procedure described [here](#).

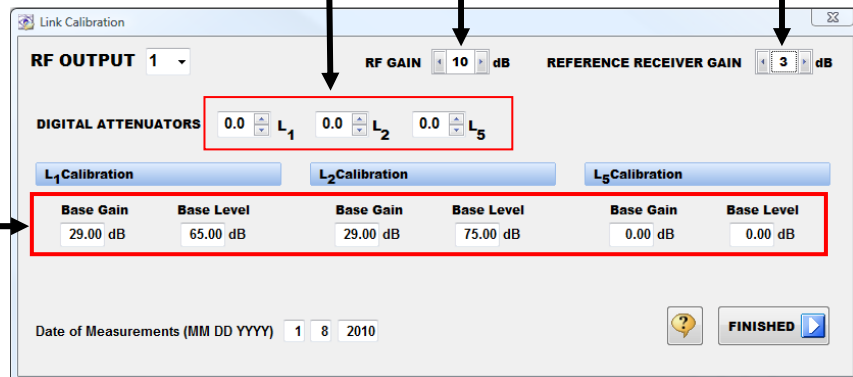

Link Calibration

RF OUTPUT 1 RF GAIN 10 dB REFERENCE RECEIVER GAIN 3 dB

DIGITAL ATTENUATORS 0.0 L₁ 0.0 L₂ 0.0 L₅

L₁ Calibration L₂ Calibration L₅ Calibration

Base Gain	Base Level	Base Gain	Base Level	Base Gain	Base Level
29.00 dB	65.00 dB	29.00 dB	75.00 dB	0.00 dB	0.00 dB

Date of Measurements (MM DD YYYY) 1 8 2010 ? FINISHED