



Configure NVE

ONTAP 9

NetApp
April 24, 2022

Table of Contents

- Configure NVE 1
 - Determine whether your cluster version supports NVE 1
 - Install the license 1
 - Configure external key management 2
 - Enable onboard key management in ONTAP 9.6 and later (NVE) 10
 - Enable onboard key management in ONTAP 9.5 and earlier (NVE) 13
 - Enable onboard key management in newly added nodes 16

Configure NVE

Determine whether your cluster version supports NVE

You should determine whether your cluster version supports NVE before you install the license. You can use the `version` command to determine the cluster version.

About this task

The cluster version is the lowest version of ONTAP running on any node in the cluster.

Step

1. Determine whether your cluster version supports NVE:

```
version -v
```

NVE is not supported if the command output displays the text “1Ono-DARE” (for “no Data At Rest Encryption”), or if you are using a platform that is not listed in [Support details](#).

The following command determines whether NVE is supported on `cluster1`.

```
cluster1::> version -v
NetApp Release 9.1.0: Tue May 10 19:30:23 UTC 2016 <1Ono-DARE>
```

The text “1Ono-DARE” in the command output indicates that NVE is not supported on your cluster version.

Install the license

A VE license entitles you to use the feature on all nodes in the cluster. You must install the license before you can encrypt data with NVE.

What you'll need

You must be a cluster administrator to perform this task.

About this task

You should have received the VE license key from your sales representative.

Steps

1. Install the VE license for a node:

```
system license add -license-code license_key
```

The following command installs the license with the key `AAAAAAAAAAAAAAAAAAAAAAAAAAAA`.

```
cluster1::> system license add -license-code
AAAAAAAAAAAAAAAAAAAAAAAAAAAA
```

2. Verify that the license is installed by displaying all the licenses on the cluster:

```
system license show
```

For complete command syntax, see the man page for the command.

The following command displays all the licenses on `cluster1`:

```
cluster1::> system license show
```

The VE license package name is “VE”.

Configure external key management

Configure external key management overview

You can use one or more external key management servers to secure the keys that the cluster uses to access encrypted data. An external key management server is a third-party system in your storage environment that serves keys to nodes using the Key Management Interoperability Protocol (KMIP).



For ONTAP 9.1 and earlier versions, node management LIFs must be assigned to ports that are configured with the node management role before you can use the external key manager.



NetApp Volume Encryption (NVE) supports Onboard Key Manager in ONTAP 9.1 and later. In ONTAP 9.3 and later, NVE supports external key management (KMIP) and Onboard Key Manager.

Install SSL certificates on the cluster

The cluster and KMIP server use KMIP SSL certificates to verify each other's identity and establish an SSL connection. Before configuring the SSL connection with the KMIP server, you must install the KMIP client SSL certificates for the cluster, and the SSL public certificate for the root certificate authority (CA) of the KMIP server.

What you'll need

- The time must be synchronized on the server creating the certificates, the KMIP server, and the cluster.
- You must have obtained the public SSL KMIP client certificate for the cluster.
- You must have obtained the private key associated with the SSL KMIP client certificate for the cluster.

The SSL KMIP client certificate must not be password-protected.

- You must have obtained the SSL public certificate for the root certificate authority (CA) of the KMIP server.



You can install the client and server certificates on the KMIP server before or after installing the certificates on the cluster.

About this task

In an HA pair, both nodes must use the same public and private KMIP SSL certificates. If you connect multiple HA pairs to the same KMIP server, all nodes in the HA pairs must use the same public and private KMIP SSL certificates.

Steps

1. Install the SSL KMIP client certificates for the cluster:

```
security certificate install -vserver admin_svm_name -type client
```

You are prompted to enter the SSL KMIP public and private certificates.

```
cluster1::> security certificate install -vserver cluster1 -type client
```

2. Install the SSL public certificate for the root certificate authority (CA) of the KMIP server:

```
security certificate install -vserver admin_svm_name -type server-ca
```

```
cluster1::> security certificate install -vserver cluster1 -type server-ca
```

Enable external key management in ONTAP 9.6 and later (NVE)

You can use one or more KMIP servers to secure the keys the cluster uses to access encrypted data. Beginning with ONTAP 9.6, you can use one or more KMIP servers to secure the keys a given SVM uses to access encrypted data.

What you'll need

- The KMIP SSL client and server certificates must have been installed.
- You must be a cluster or SVM administrator to perform this task.
- If you want to enable external key management for a MetroCluster environment, MetroCluster must be fully configured before enabling external key management.

About this task

You can connect up to four KMIP servers to a cluster or SVM. A minimum of two servers is recommended for redundancy and disaster recovery.

The scope of external key management determines whether key management servers secure all the SVMs in the cluster or selected SVMs only:

- You can use a *cluster scope* to configure external key management for all the SVMs in the cluster. The cluster administrator has access to every key stored on the servers.
- Beginning with ONTAP 9.6, you can use an *SVM scope* to configure external key management for a data SVM in the cluster. That's best for multitenant environments in which each tenant uses a different SVM (or set of SVMs) to serve data. Only the SVM administrator for a given tenant has access to the keys for that tenant.
- For multitenant environments, install a license for *MT_EK_MGMT* by using the following command:

```
system license add -license-code <MT_EK_MGMT license code>
```

For complete command syntax, see the man page for the command.

You can use both scopes in the same cluster. If key management servers have been configured for an SVM, ONTAP uses only those servers to secure keys. Otherwise, ONTAP secures keys with the key management servers configured for the cluster.

You can configure onboard key management at the cluster scope and external key management at the SVM scope. You can use the `security key-manager key migrate` command to migrate keys from onboard key management at the cluster scope to external key managers at the SVM scope.

Steps

1. Configure key manager connectivity for the cluster:

```
security key-manager external enable -vserver admin_SVM -key-servers  
host_name|IP_address:port,... -client-cert client_certificate -server-ca-cert  
server_CA_certificates
```



The `security key-manager external enable` command replaces the `security key-manager setup` command. If you run the command at the cluster login prompt, *admin_SVM* defaults to the admin SVM of the current cluster. You must be the cluster administrator to configure cluster scope. You can run the `security key-manager external modify` command to change the external key management configuration.

The following command enables external key management for `cluster1` with three external key servers. The first key server is specified using its hostname and port, the second is specified using an IP address and the default port, and the third is specified using an IPv6 address and port:

```
cluster1::> security key-manager external enable -vserver cluster1 -key  
-servers  
ks1.local:15696,10.0.0.10,[fd20:8b1e:b255:814e:32bd:f35c:832c:5a09]:1234  
-client-cert AdminVserverClientCert -server-ca-certs  
AdminVserverServerCaCert
```

2. Configure a key manager an SVM:

```
security key-manager external enable -vserver SVM -key-servers  
host_name|IP_address:port,... -client-cert client_certificate -server-ca-cert  
server_CA_certificates
```



If you run the command at the SVM login prompt, *SVM* defaults to the current SVM. You must be a cluster or SVM administrator to configure SVM scope. You can run the `security key-manager external modify` command to change the external key management configuration.

The following command enables external key management for `svm1` with a single key server listening on the default port 5696:

```
svm11::> security key-manager external enable -vserver svm1 -key-servers  
keyserver.svm1.com -client-cert SVM1ClientCert -server-ca-certs  
SVM1ServerCaCert
```

3. Repeat the last step for any additional SVMs.



You can also use the `security key-manager external add-servers` command to configure additional SVMs. The `security key-manager external add-servers` command replaces the `security key-manager add` command. For complete command syntax, see the man page.

4. Verify that all configured KMIP servers are connected:

```
security key-manager external show-status -node node_name
```



The `security key-manager external show-status` command replaces the `security key-manager show -status` command. For complete command syntax, see the man page.

```
cluster1::> security key-manager external show-status
```

| Node | Vserver | Key Server | Status |
|-------|----------|--|-----------|
| ----- | | | |
| node1 | | | |
| | svm1 | keyserver.svm1.com:5696 | available |
| | cluster1 | 10.0.0.10:5696 | available |
| | | fd20:8b1e:b255:814e:32bd:f35c:832c:5a09:1234 | available |
| | | ks1.local:15696 | available |
| node2 | | | |
| | svm1 | keyserver.svm1.com:5696 | available |
| | cluster1 | 10.0.0.10:5696 | available |
| | | fd20:8b1e:b255:814e:32bd:f35c:832c:5a09:1234 | available |
| | | ks1.local:15696 | available |

8 entries were displayed.

Enable external key management in ONTAP 9.5 and earlier

You can use one or more KMIP servers to secure the keys the cluster uses to access encrypted data. You can connect up to four KMIP servers to a node. A minimum of two servers is recommended for redundancy and disaster recovery.

What you'll need

- The KMIP SSL client and server certificates must have been installed.

- You must be a cluster administrator to perform this task.
- You must configure the MetroCluster environment before you configure an external key manager.

About this task

ONTAP configures KMIP server connectivity for all nodes in the cluster.

Steps

1. Configure key manager connectivity for cluster nodes:

```
security key-manager setup
```

The key manager setup starts.

2. Enter the appropriate response at each prompt.

3. Add a KMIP server:

```
security key-manager add -address key_management_server_ipaddress
```

```
cluster1::> security key-manager add -address 20.1.1.1
```

4. Add an additional KMIP server for redundancy:

```
security key-manager add -address key_management_server_ipaddress
```

```
cluster1::> security key-manager add -address 20.1.1.2
```

5. Verify that all configured KMIP servers are connected:

```
security key-manager show -status
```

For complete command syntax, see the man page.

```
cluster1::> security key-manager show -status
```

| Node | Port | Registered Key Manager | Status |
|-------------|------|------------------------|-----------|
| ----- | ---- | ----- | ----- |
| cluster1-01 | 5696 | 20.1.1.1 | available |
| cluster1-01 | 5696 | 20.1.1.2 | available |
| cluster1-02 | 5696 | 20.1.1.1 | available |
| cluster1-02 | 5696 | 20.1.1.2 | available |

Manage keys with Azure Key Vault or Google Cloud KMS

Beginning in ONTAP 9.10.1, you can use [Azure Key Vault \(AKV\)](#) and [Google Cloud Platform's Key Management Service \(Cloud KMS\)](#) to protect your ONTAP encryption keys in a Azure- or Google Cloud Platform-deployed application.

AKV and Cloud KMS can be used to protect [NetApp Volume Encryption \(NVE\) keys](#) only for data vservers.

Key management with AKV or Cloud KMS can be enabled with the CLI or the ONTAP REST API.

When using AKV or Cloud KMS, be aware that by default a data vserver LIF is used to communicate with the cloud key management endpoint. A node management network is used to communicate with the cloud provider's authentication services (login.microsoftonline.com for Azure; oauth2.googleapis.com for Cloud KMS). If the cluster network is not configured correctly, the cluster will not properly utilize the key management service.

Prerequisites

- The ONTAP cluster's nodes must support NVE
- Volume Encryption (VE) license installed
- Multi-tenant Encryption Key Management (MTEKM) license installed
- You must be a cluster or vserver administrator

Limitations

- AKV and Cloud KMS are not available for NSE and NAE. [External KMIPs](#) can be used instead
- AKV and Cloud KMS are not available for MetroCluster configurations.
- AKV and Cloud KMS can only be configured on a data vserver

Enable external key management with the CLI

Enabling external key management depends on the specific key manager you use. If you are enabling AKV in a Cloud Volumes ONTAP, note that there is a separate procedure. Choose the tab of the key manager and environment that suits your needs:

Azure for ONTAP


Enable Azure Key Vault for ONTAP

1. Before you begin, you need to obtain the appropriate authentication credentials from your Azure account, either a client secret or certificate.
You must also ensure all nodes in the cluster are healthy. You can check this with the command `cluster show`.
2. Set privileged level to advanced
`set -priv advanced`
3. Enable AKV on the SVM
`security key-manager external azure enable -client-id client_id -tenant-id tenant_id -name -key-id key_id -authentication-method {certificate|client-secret}`
When prompted, enter either the client certificate or client secret from your Azure account.
4. Verify AKV is enabled correctly:
`security key-manager external azure show vservers vserver_name`
If the service reachability is not OK, establish the connectivity to the AKV key management service via data vserver LIF.

Azure for Cloud Volumes ONTAP

Enable Azure Key Vault for Cloud Volumes ONTAP

1. Before you begin, you need to obtain the appropriate authentication credentials from your Azure account, either a client secret or certificate.
You must also ensure all nodes in the cluster are healthy. You can check this with the command `cluster show`.
2. Set privileged level to advanced
`set -priv advanced`
3. Enable AKV on the SVM
`security key-manager external azure enable -client-id client_id -tenant-id tenant_id -name -key-id key_id -authentication-method {certificate|client-secret}`
When prompted, enter either the client certificate or client secret from your Azure account.
4. Set up DNS for the data SVM:
`dns create -domains domain_name -name-servers server_address -vservers vserver_name`
5. Go to the Azure portal for the subscription that contains your key vault. Select the **Access policies** menu. Provide the application the key permissions, secret permissions, and certificate permissions and then save.

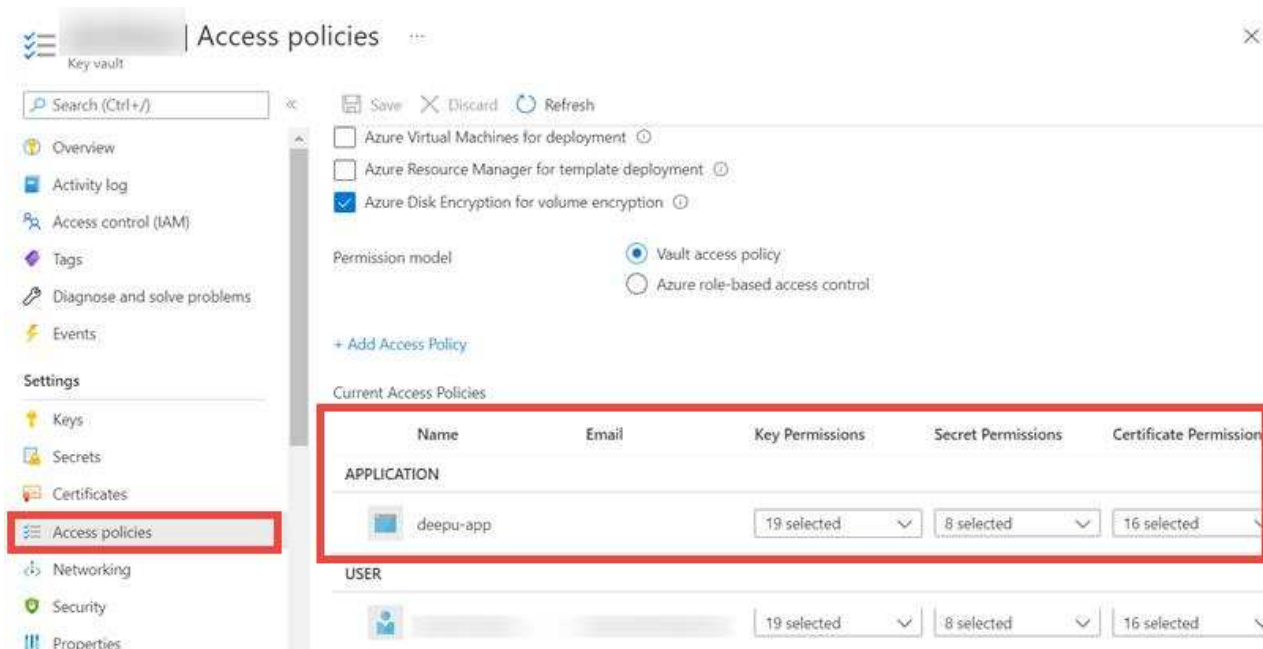

6. Verify AKV is enabled correctly:

```
security key-manager external azure show vserver vserver_name
```

If the service reachability is not OK, establish the connectivity to the AKV key management service via data vserver LIF.

Google Cloud for ONTAP

Enable Cloud KMS with the CLI for ONTAP

1. Before you begin, you need to obtain the private key for the Google Cloud KMS account key file in a JSON format. This can be found in your GCP account.

You must also ensure all nodes in the cluster are healthy. You can check this with the command `cluster show`.

2. Set privileged level to advanced

```
set -priv advanced
```

3. Enable Cloud KMS on the SVM

```
security key-manager external gcp enable -vserver data_svm_name -project-id project_id-key-ring-name key_ring_name -key-ring-location key_ring_location -key-name key_name
```

When prompted, enter the contents of the JSON file with the Service Account Private Key

4. Verify that Cloud KMS is configured with the correct parameters:

```
security key-manager external gcp show vserver vserver_name
```

The status of `kms_wrapped_key_status` will be "UNKNOWN" if no encrypted volumes have been created.

If the service reachability is not OK, establish the connectivity to the GCP key management service via data vserver LIF.

If one or more encrypted volumes is already configured for a data vserver and the corresponding NVE keys are managed by the admin vserver onboard key manager, those keys should be migrated to the external key management service. To do this with the CLI, run:

```
security key-manager key migrate -from-Vserver admin_vserver -to-Vserver data_vserver
```

New encrypted volumes cannot be created for the tenant's data vserver until all NVE keys of the data vserver

are successfully migrated.

Enable onboard key management in ONTAP 9.6 and later (NVE)

You can use the Onboard Key Manager to secure the keys that the cluster uses to access encrypted data. You must enable Onboard Key Manager on each cluster that accesses an encrypted volume or a self-encrypting disk.

What you'll need

- You must be a cluster administrator to perform this task.
- You must configure the MetroCluster environment before you configure an external key manager.

About this task

You must run the `security key-manager onboard sync` command each time you add a node to the cluster.

If you have a MetroCluster configuration you must run `security key-manager onboard enable` on the local cluster first, then run `security key-manager onboard sync` on the remote cluster, using the same passphrase on each.

By default, you are not required to enter the key manager passphrase when a node is rebooted. You can use the `cc-mode-enabled=yes` option to require that users enter the passphrase after a reboot.

For NVE, if you set `cc-mode-enabled=yes`, volumes you create with the `volume create` and `volume move start` commands are automatically encrypted. For `volume create`, you need not specify `-encrypt true`. For `volume move start`, you need not specify `-encrypt-destination true`.

When configuring ONTAP data at rest encryption, to meet the requirements for Commercial Solutions for Classified (CSfC) you must use NSE with NVE and ensure the Onboard Key Manager is enabled in Common Criteria mode. Refer to the [CSfC Solution Brief](#) for more information on CSfC.

When the Onboard Key Manager is enabled in Common Criteria mode (`cc-mode-enabled=yes`), system behavior is changed in the following ways:

- The system monitors for consecutive failed cluster passphrase attempts when operating in Common Criteria mode.

If you fail to enter the correct cluster passphrase at boot, encrypted volumes are not mounted. To correct this, you must reboot the node and enter the correct cluster passphrase. Once booted, the system allows up to 5 consecutive attempts to correctly enter the cluster passphrase in a 24-hour period for any command that requires the cluster passphrase as a parameter. If the limit is reached (for example, you have failed to correctly enter the cluster passphrase 5 times in a row) then you must either wait for the 24-hour timeout period to elapse, or you must reboot the node, in order to reset the limit.

- System image updates use the NetApp RSA-3072 code signing certificate together with SHA-384 code signed digests to check the image integrity instead of the usual NetApp RSA-2048 code signing certificate and SHA-256 code signed digests.

The upgrade command verifies that the image contents have not been altered or corrupted by checking various digital signatures. The image update process proceeds to the next step if validation succeeds; otherwise, the image update fails. See the “cluster image” man page for information concerning system updates.

The Onboard Key Manager stores keys in volatile memory. Volatile memory contents are cleared when the system is rebooted or halted. Under normal operating conditions, volatile memory contents will be cleared within 30s when a system is halted.

Steps

1. Start the key manager setup:

```
security key-manager onboard enable -cc-mode-enabled yes|no
```

Set `cc-mode-enabled=yes` to require that users enter the key manager passphrase after a reboot. For NVE, if you set `cc-mode-enabled=yes`, volumes you create with the `volume create` and `volume move start` commands are automatically encrypted. The `-cc-mode-enabled` option is not supported in MetroCluster configurations. The `security key-manager onboard enable` command replaces the `security key-manager setup` command.

The following example starts the key manager setup command on cluster1 without requiring that the passphrase be entered after every reboot:

```
cluster1::> security key-manager onboard enable
```

```
Enter the cluster-wide passphrase for onboard key management in Vserver
"cluster1"::    <32..256 ASCII characters long text>
Reenter the cluster-wide passphrase:    <32..256 ASCII characters long
text>
```

- At the passphrase prompt, enter a passphrase between 32 and 256 characters, or for “cc-mode”, a passphrase between 64 and 256 characters.



If the specified “cc-mode” passphrase is less than 64 characters, there is a five-second delay before the key manager setup operation displays the passphrase prompt again.

- At the passphrase confirmation prompt, reenter the passphrase.
- Verify that the authentication keys have been created:

```
security key-manager key query -key-type NSE-AK
```



The `security key-manager key query` command replaces the `security key-manager query key` command. For complete command syntax, see the man page.

The following example verifies that authentication keys have been created for `cluster1`:

```
cluster1::> security key-manager key query -key-type NSE-AK
Vserver: cluster1
Key Manager: onboard
Node: node1
```

| Key Tag | Key Type | Restored |
|---|----------|----------|
| node1 | NSE-AK | yes |
| Key ID: | | |
| 000000000000000000002000000000001000c11b3863f78c2273343d7ec5a67762e0000000000000000 | | |
| node1 | NSE-AK | yes |
| Key ID: | | |
| 000000000000000000002000000000001006f4e2513353a674305872a4c9f3bf7970000000000000000 | | |

```

Vserver: svm1
Key Manager: onboard
Node: node1
Key Server: keyserver.svm1.com:5965
```

| Key Tag | Key Type | Restored |
|--|----------|----------|
| eb9f8311-e8d8-487e-9663-7642d7788a75 | VEK | yes |
| Key ID: | | |
| 000000000000000000002000000000004001cb18336f7c8223743d3e75c6a7726e0000000000000000 | | |
| 9d09cbbf-0da9-4696-87a1-8e083d8261bb | VEK | yes |
| Key ID: | | |
| 000000000000000000002000000000004064f2e1533356a470385274a9c3ffb9770000000000000000 | | |

```
00000000
```

```
Vserver: cluster1
Key Manager: onboard
Node: node2
```

| Key Tag | Key Type | Restored |
|---|----------|----------|
| ----- | ----- | ----- |
| node1 | NSE-AK | yes |
| Key ID: | | |
| 000000000000000000002000000000001000c11b3863f78c2273343d7ec5a67762e00000000 | | |
| 00000000 | | |
| node1 | NSE-AK | yes |
| Key ID: | | |
| 000000000000000000002000000000001006f4e2513353a674305872a4c9f3bf79700000000 | | |
| 00000000 | | |

```
Vserver: svm1
Key Manager: onboard
Node: node2
Key Server: keyserver.svm1.com:5965
```

| Key Tag | Key Type | Restored |
|---|----------|----------|
| ----- | ----- | ----- |
| eb9f8311-e8d8-487e-9663-7642d7788a75 | VEK | yes |
| Key ID: | | |
| 0000000000000000000020000000000004001cb18336f7c8223743d3e75c6a7726e00000000 | | |
| 00000000 | | |
| 9d09cbbf-0da9-4696-87a1-8e083d8261bb | VEK | yes |
| Key ID: | | |
| 0000000000000000000020000000000004064f2e1533356a470385274a9c3ffb97700000000 | | |
| 00000000 | | |

After you finish

Copy the passphrase to a secure location outside the storage system for future use.

All key management information is automatically backed up to the replicated database (RDB) for the cluster. You should also back up the information manually for use in case of a disaster.

Enable onboard key management in ONTAP 9.5 and earlier (NVE)

You can use the Onboard Key Manager to secure the keys that the cluster uses to access encrypted data. You must enable Onboard Key Manager on each cluster that accesses an encrypted volume or a self-encrypting disk.

What you'll need

- If you are using NSE with an external key management (KMIP) server, you must have deleted the external key manager database.

Transitioning to onboard key management from external key management

- You must be a cluster administrator to perform this task.
- You must configure the MetroCluster environment before you configure the Onboard Key Manager.

About this task

You must run the `security key-manager setup` command each time you add a node to the cluster.

If you have a MetroCluster configuration, review these guidelines:

- In ONTAP 9.5, you must run `security key-manager setup` on the local cluster and `security key-manager setup -sync-metrocluster-config yes` on the remote cluster, using the same passphrase on each.
- Prior to ONTAP 9.5, you must run `security key-manager setup` on the local cluster, wait approximately 20 seconds, and then run `security key-manager setup` on the remote cluster, using the same passphrase on each.

By default, you are not required to enter the key manager passphrase when a node is rebooted. Beginning with ONTAP 9.4, you can use the `-enable-cc-mode yes` option to require that users enter the passphrase after a reboot.

For NVE, if you set `-enable-cc-mode yes`, volumes you create with the `volume create` and `volume move start` commands are automatically encrypted. For `volume create`, you need not specify `-encrypt true`. For `volume move start`, you need not specify `-encrypt-destination true`.



After a failed passphrase attempt, you must reboot the node again.

Steps

1. Start the key manager setup:

```
security key-manager setup -enable-cc-mode yes|no
```



Beginning with ONTAP 9.4, you can use the `-enable-cc-mode yes` option to require that users enter the key manager passphrase after a reboot. For NVE, if you set `-enable-cc-mode yes`, volumes you create with the `volume create` and `volume move start` commands are automatically encrypted.

The following example starts setting up the key manager on cluster1 without requiring that the passphrase be entered after every reboot:

• • •

- 



- Verify the

recur:

or the

Key

After you finish

Copy the passphrase to a secure location outside the storage system for future use.

All key management information is automatically backed up to the replicated database (RDB) for the cluster.

Whenever you configure the Onboard Key Manager passphrase, you should also back up the information manually to a secure location outside the storage system for use in case of a disaster. See [Back up onboard key management information manually](#).

Enable onboard key management in newly added nodes

You can use the Onboard Key Manager to secure the keys that the cluster uses to access encrypted data. You must enable Onboard Key Manager on each cluster that accesses an encrypted volume or a self-encrypting disk.



For ONTAP 9.5 and earlier, you must run the `security key-manager setup` command each time you add a node to the cluster.

For ONTAP 9.6 and later, you must run the `security key-manager sync` command each time you add a node to the cluster.

If you add a node to a cluster that has onboard key management configured, you will run this command to refresh the missing keys.

If you have a MetroCluster configuration, review these guidelines:

- Beginning with ONTAP 9.6, you must run `security key-manager onboard enable` on the local cluster first, then run `security key-manager onboard sync` on the remote cluster, using the same passphrase on each.
- In ONTAP 9.5, you must run `security key-manager setup` on the local cluster and `security key-manager setup -sync-metrocluster-config yes` on the remote cluster, using the same passphrase on each.
- Prior to ONTAP 9.5, you must run `security key-manager setup` on the local cluster, wait approximately 20 seconds, and then run `security key-manager setup` on the remote cluster, using the same passphrase on each.

By default, you are not required to enter the key manager passphrase when a node is rebooted. Beginning with ONTAP 9.4, you can use the `-enable-cc-mode yes` option to require that users enter the passphrase after a reboot.

For NVE, if you set `-enable-cc-mode yes`, volumes you create with the `volume create` and `volume move start` commands are automatically encrypted. For `volume create`, you need not specify `-encrypt true`. For `volume move start`, you need not specify `-encrypt-destination true`.



After a failed passphrase attempt, you must reboot the node again.

Copyright Information

Copyright © 2022 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.