

NUC980 OpenWrt User Manual

Application Note for 32-bit NuMicro® Family

Document Information

Abstract	NUC980 OpenWrt User Manual
Apply to	NuMicro® NUC980 series.

The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.

Nuvoton is providing this document only for reference purposes of NuMicro microcontroller and microprocessor based system design. Nuvoton assumes no responsibility for errors or omissions.

All data and specifications are subject to change without notice.

For additional information or questions, please contact: Nuvoton Technology Corporation.

www.nuvoton.com

Table of Contents

1	OVERVIEW	3
2	QUICK START	3
2.1	Preparation.....	3
2.2	Installation.....	3
2.3	Configuration.....	3
2.3.1	How to Generate the NUC980 OpenWrt Configuration	5
2.4	Compilation.....	7
2.5	Firmware Program	8
2.6	Test the OpenWrt	9
2.6.1	Network Setting	10
2.6.2	LuCI Web Interface	11
2.6.3	Firmware Update.....	13

1 Overview

The OpenWrt Project is a Linux operating system targeting embedded devices. Instead of trying to create a single, static firmware, OpenWrt provides a fully writable filesystem with package management. NUC980 OpenWrt is based on OpenWrt/LEDE 17.01.7.

2 Quick Start

2.1 Preparation

Before to do the installation, please make sure there are enough free space for project building. The expected used space is about 12GB.

2.2 Installation

The NUC980 Linux 4.4 BSP User Manual describes the steps to download NUC980 Linux BSP and setup develop environment. After that, please clone the NUC980 OpenWrt with following command:

```
$ git clone https://github.com/OpenNuvoton/NUC980-OpenWrt.git
```

After download complete, execute following commands to update the OpenWrt feeds script.

```
$ ./scripts/feeds update -a
$ ./scripts/feeds install -a
```

2.3 Configuration

The NUC980 OpenWrt supports Chili, IoT and EVB three boards, please use the correct setting for the target board. For example, to use the Chili board, user need to do the steps as following:

In folder NUC980-OpenWrt, use the file Nuvoton/config/config_nuc980_chili to be the OpenWrt configuration file.

```
cp Nuvoton/config/config_nuc980_chili .config
```

Run “make menuconfig” to configure OpenWrt. Confirm the Target System be the Nuvoton NUC980, and the Subtarget be the “NUC980 Chili”, as shown in Figure 2-1.

```
$ make menuconfig
```

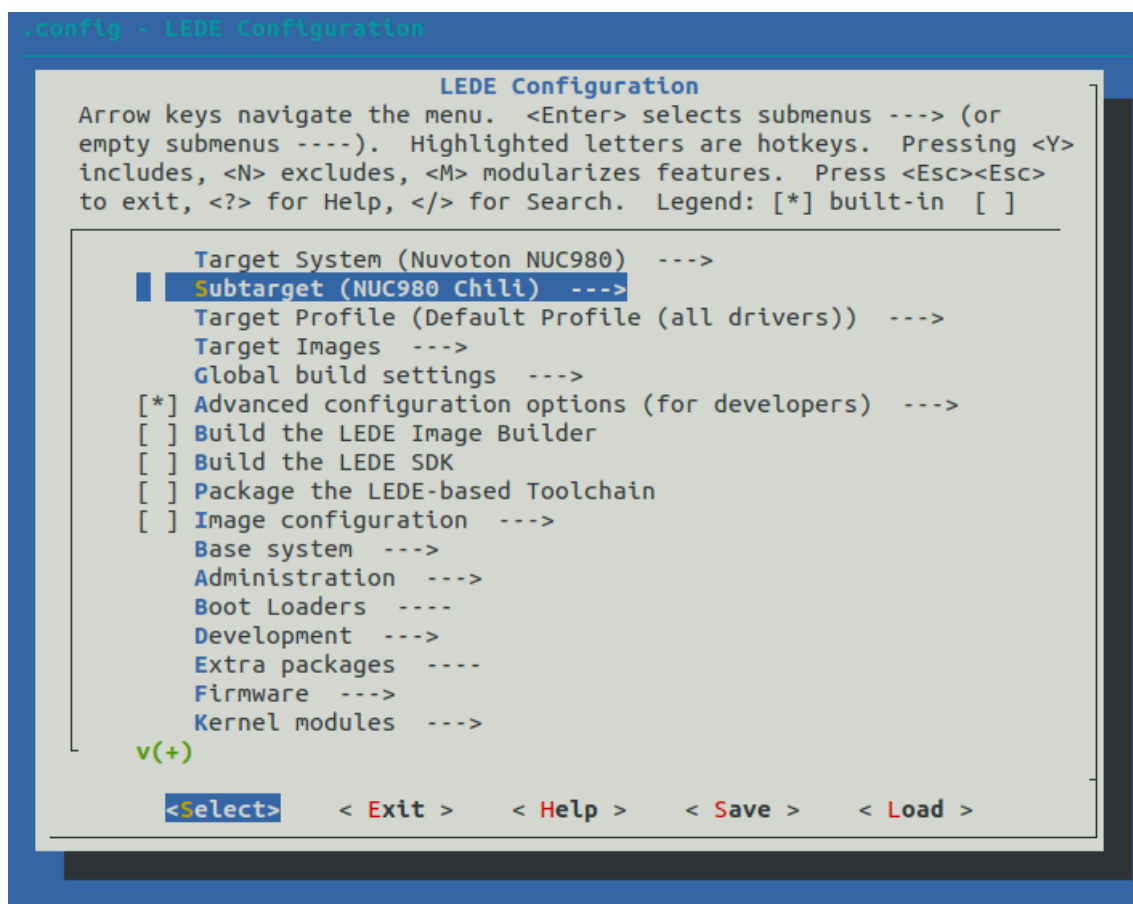


Figure 2-1 Select Target and Subtarget

In Advanced configuration options page, specify the git repository and branch to clone Linux kernel source.

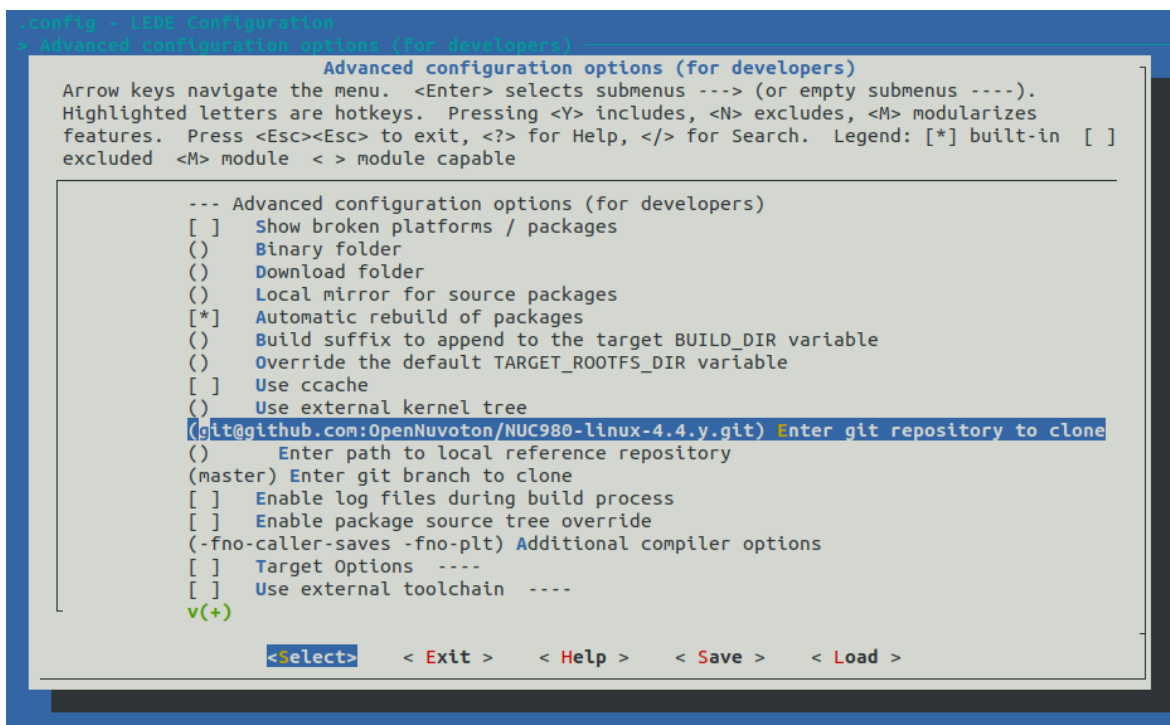


Figure 2-2 Configure Kernel Repository

The default setting uses the SSH method to clone git repository, please make sure the public key of computer is attached to user's git account. If not, user can change to use the HTTPS method to clone. Following Table 2-1 lists available NUC980 Linux kernel repositories of using the HTTPS method.

Repository Manger	URL
Github	https://github.com/OpenNuvoton/NUC980-linux-4.4.y.git
Gitlab	https://gitlab.com/OpenNuvoton/NuMicro-ARM7-ARM9-Family/NUC980-linux-4.4.y.git
Gitee	https://gitee.com/OpenNuvoton/NUC980-linux-4.4.y.git

Table 2-1 NUC980 Linux Kernel Repositories

Run "make kernel_menuconfig" to download NUC980 Linux BSP and related packages, this step may take 20 minutes. Then user can exit and save config directly.

```
$ make kernel_menuconfig
```

2.3.1 How to Generate the NUC980 OpenWrt Configuration

This section introduces how the NUC980 OpenWrt configuration is generated, user can skip this section if user is not interesting on it. The following steps show how the configuration file config_nuc980_iot is generated.

At first user need to specify the target and subtarget of NUC980 IoT board, and then run “make defconfig” to generate the OpenWrt default configuration. After this step is done, the OpenWrt configuration is stored in the file .config.

```
echo CONFIG_TARGET_nuc980=y > .config
echo CONFIG_TARGET_nuc980_nuc980_iot=y >> .config
make defconfig
```

After the default configuration is generated, user can run “make menuconfig” to modify the configurations. The necessary steps for NUC980 IoT board are shown in Figure 2-3.

```
[*] Advanced configuration options (for developers) --->
(git@github.com:OpenNuvoton/NUC980-linux-4.4.y.git) Enter git repository to clone
(master) Enter git branch to clone
[*] Toolchain Options --->
    Binutils Version (Binutils 2.27) --->
    GCC compiler Version (gcc 6.x) --->
    C Library implementation (Use glibc) --->
Boot Loaders --->
    <*> uboot-nuc980-iot..... U-Boot for IoT board
Libraries --->
    SSL --->
        <*> libopenssl..... Open source SSL toolkit (libraries) --->
LuCI --->
    1. Collections --->
        <*> luci-ssl..... LuCI with HTTPS support (mbedtls as SSL backend)
    3. Applications --->
        <*> luci-app-advanced-reboot..... Advanced Linksys Reboot Web UI
    4. Themes --->
        <*> luci-theme-material..... Material Theme
Network --->
    < > ppp-mod-pppoe..... PPPoE plugin
Utilities --->
    Boot Loaders --->
        < > uboot-envtools..... read/modify U-Boot bootloader environment
```

Figure 2-3 Modified Items to Generate NUC980 OpenWrt Configuration

After the configuration modification is done, user can exit the setting and rename the file .config to Nuvoton/config/config_nuc980_iot.

2.4 Compilation

After configuration complete, run “make” command to build the OpenWrt. The building may take around 90 minutes.

```
$ make
```

The generated images are located in the bin/targets/nuc980/-glibc/ directory. The output files are shown as following Table 2-2. Please notice for the Root file system, the Chili board (SPI-NOR) uses the JFFS2, but the IoT board (SPI-NAND) and EVB board (NAND) use the UBIFS by default.

Image Name	Description
\${Subtarget}-uImage	Linux kernel ulmage.
\${Subtarget}-rootfs.jffs2-64k	Root file system in JFFS2 format with 64kB block size (for Chili board).
\${Subtarget}-rootfs.jffs2-128k	Root file system in JFFS2 format with 128kB block size.
\${Subtarget}-root.ubifs	Root file system in ubifs format (for IoT and EVB boards).
\${Subtarget}-u-boot.bin	Main U-Boot loader.
\${Subtarget}-u-boot-spl.bin	Load main U-Boot from NAND Flash to DDR (for IoT and EVB boards).

Table 2-2 OpenWrt Generated Images in Output Directory

Should any error occur during compilation, use following command to gather error log for further investigation.

```
$ make -j1 V=sc
```

2.5 Firmware Program

Before programming firmware, user need to get the U-Boot environment file from Nuvoton/uboot_env/ folder. Note that U-Boot can also be built through the NUC980BSP rather than OpenWrt. Each target board should use its own U-Boot firmware and U-Boot environment

When the target board use the NAND related device as the storage media, such as IoT and EVB boards. User should do the “erase all” action first before programming the firmware.

Refer to NUC980 NuWriter User Manual to program U-Boot, U-Boot environment, kernel and root file system images to the target storage media, as shown in Figure 2-4 (for Chili board) and Figure 2-5 (for IoT board).

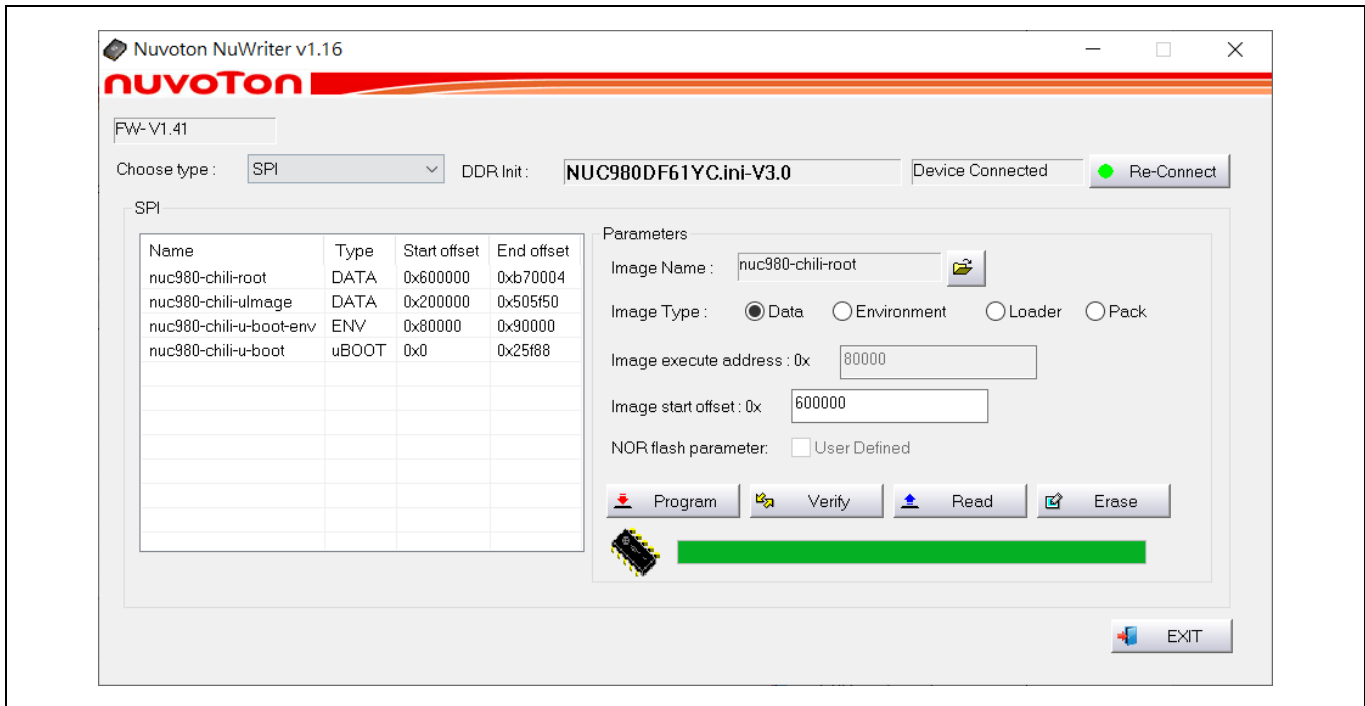


Figure 2-4 Use NuWriter to Program Images for Chili Board

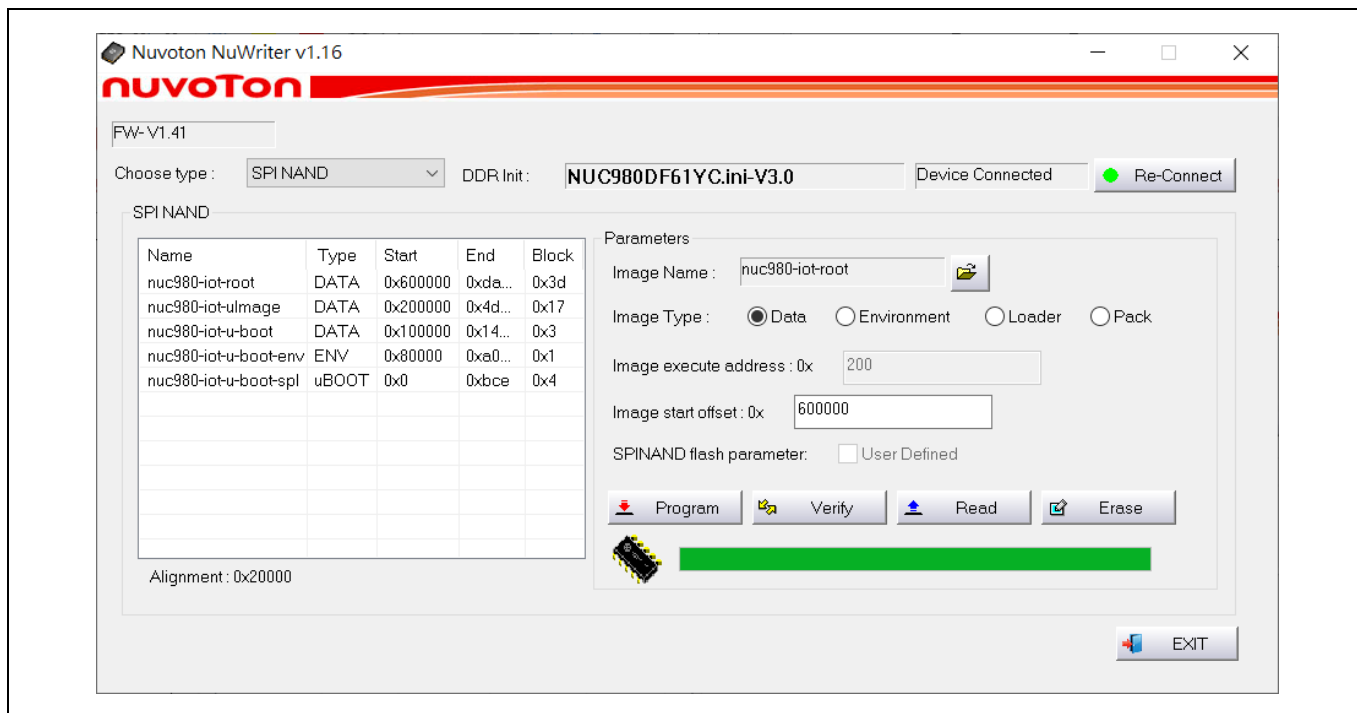


Figure 2-5 Use NuWriter to Program Images for IoT Board

The MTD partitions are defined in U-Boot environment. For the Chili board, user can see there are three MTD partitions as following.

```
bootargs=noinitrd root=/dev/mtdblock2 rw rootfstype=jffs2 console=ttyS0,115200n8
rdinit=/sbin/init mem=64M mtdparts=m25p80:0x200000@0x0(u-boot),0x400000@0x200000
(kernel),-(rootfs) ignore_loglevel
```

For the IoT board, user can see there are also three MTD partitions as following.

```
bootargs=noinitrd ubi.mtd=2 root=ubi0:rootfs rw rootfstype=ubifs console=ttyS0,115200n8
rdinit=/sbin/init mem=64M mtdparts=nand0:0x200000@0x0(u-boot),0x400000@0x200000(kernel),-
(rootfs) ignore_loglevel
```

If user want to change the MTD partitions, please modify the U-Boot environment file, and the image start offset in NuWriter should also be changed.

2.6 Test the OpenWrt

After starting the device, user will see the OpenWrt booting messages, as shown in Figure 2-6.

```
[ 14.383924] random: ubusd: uninitialized random read (4 bytes read, 78 bits of entropy available)
[ 14.394891] procd: - init -
Please press Enter to activate this console.
[ 27.863291] nuc980-eth0 nuc980-eth0: eth0 is OPENED
[ 27.868516] IPv6: ADDRCONF(NETDEV_UP): eth0: link is not ready
[ 28.680199] nuc980-eth0 nuc980-eth0: eth0 is OPENED
[ 28.690683] IPv6: ADDRCONF(NETDEV_UP): eth0: link is not ready
[ 29.742066] random: nonblocking pool is initialized
[ 31.592358] IPv6: ADDRCONF(NETDEV_CHANGE): eth0: link becomes ready

BusyBox v1.25.1 () built-in shell (ash)

      LE
    DE
LE
DE
LE
DE
LE
DE

l e d e

lede-project.org

-----
Reboot (17.01.7, r4030-6028f00df0)
-----

=== WARNING! =====
There is no root password defined on this device!
Use the "passwd" command to set up a new password
in order to prevent unauthorized SSH logins.
-----
root@LEDE:/#
```

Figure 2-6 OpenWrt booting messages

2.6.1 Network Setting

To get the network setting information, user can run below command.

```
uci show network
```

The default network setting is using the static address, as shown in Figure 2-7.

```
root@LEDE:/# uci show network
network.loopback=interface
network.loopback.ifname='lo'
network.loopback.proto='static'
network.loopback.ipaddr='127.0.0.1'
network.loopback.netmask='255.0.0.0'
network.lan=interface
network.lan.ifname='eth0'
network.lan.type='none'
network.lan.proto='static'
network.lan.ipaddr='192.168.10.11'
network.lan.netmask='255.255.255.0'
network.lan.gateway='192.168.10.10'
network.lan.dns='192.168.10.10'
network.@route[0]=route
network.@route[0].target='192.168.10.10'
network.@route[0].netmask='24'
network.@route[0].gateway='192.168.10.20'
network.@route[0].interface='lan'
network.@route[0].metric='2'
network.@route[0].mtu='1500'
```

Figure 2-7 Default Network Settings

If user want to change the network settings, he can modify the file `/etc/config/network` directly, or run the “uci set” command. For example, if user want to change to use a dynamic address, he can run following commands to modify and reset the network settings.

```
uci set network.lan.proto=dhcp
/etc/init.d/network restart
```

2.6.2 LuCI Web Interface

To login the LuCI Web interface, user can connect to https://YOUR_IP_ADDRESS in a Web browser such as Chrome. In first time login, user may encounter a security warning message, as shown in Figure 2-8.

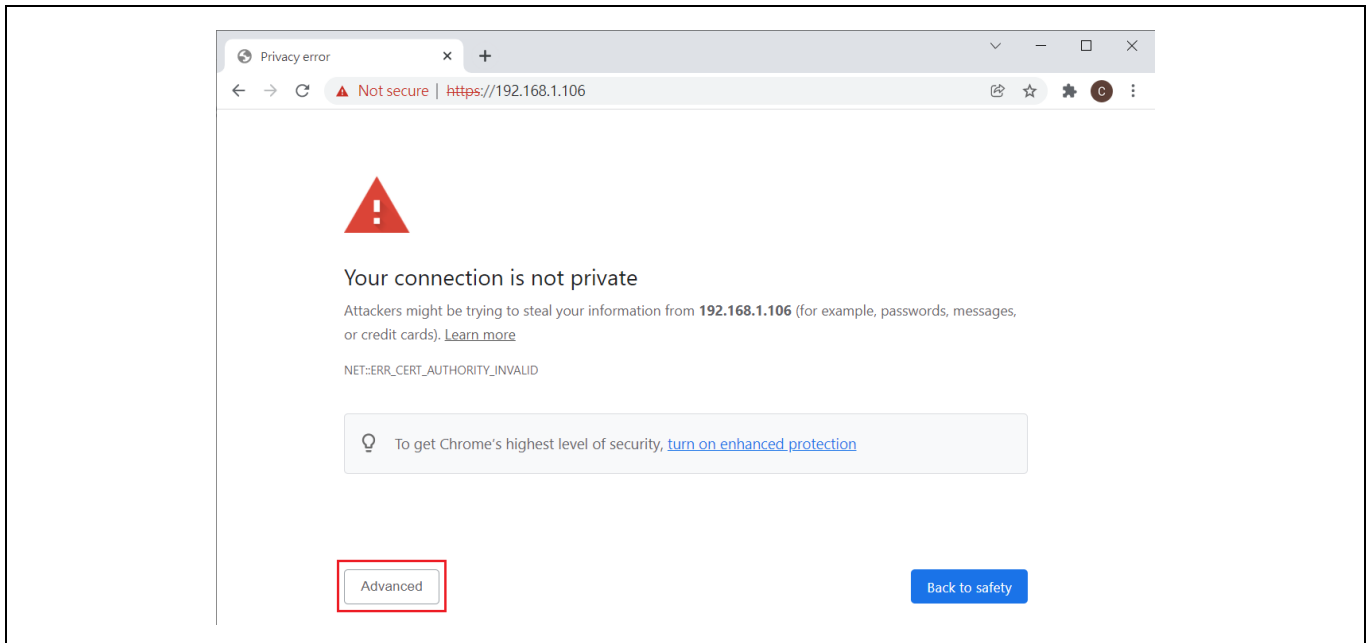


Figure 2-8 First time to login the LuCI Web Interface

After clicking the “Advanced” button, user will see a new screen, as shown in Figure 2-9. Please proceed the connection.

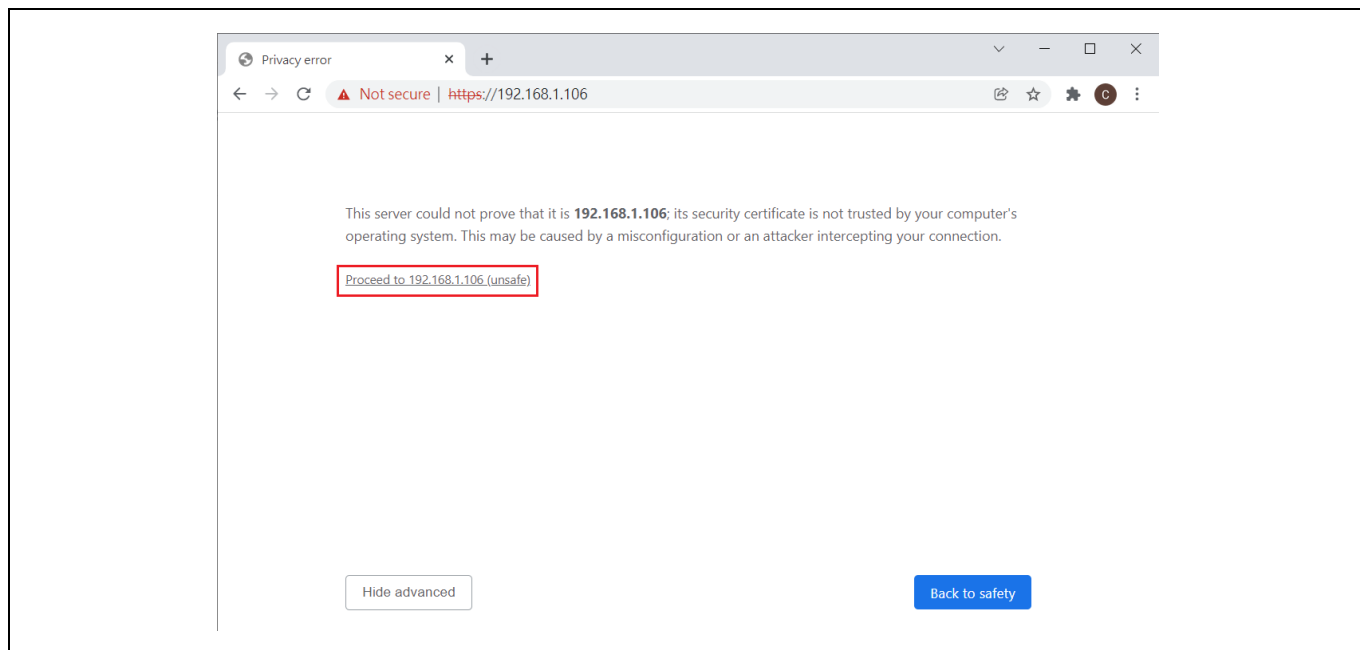


Figure 2-9 Proceed the Connection to LuCI

Then user can see the login screen. The default setting is no password, user can login directly, or set a new password, as shown in Figure 2-10.

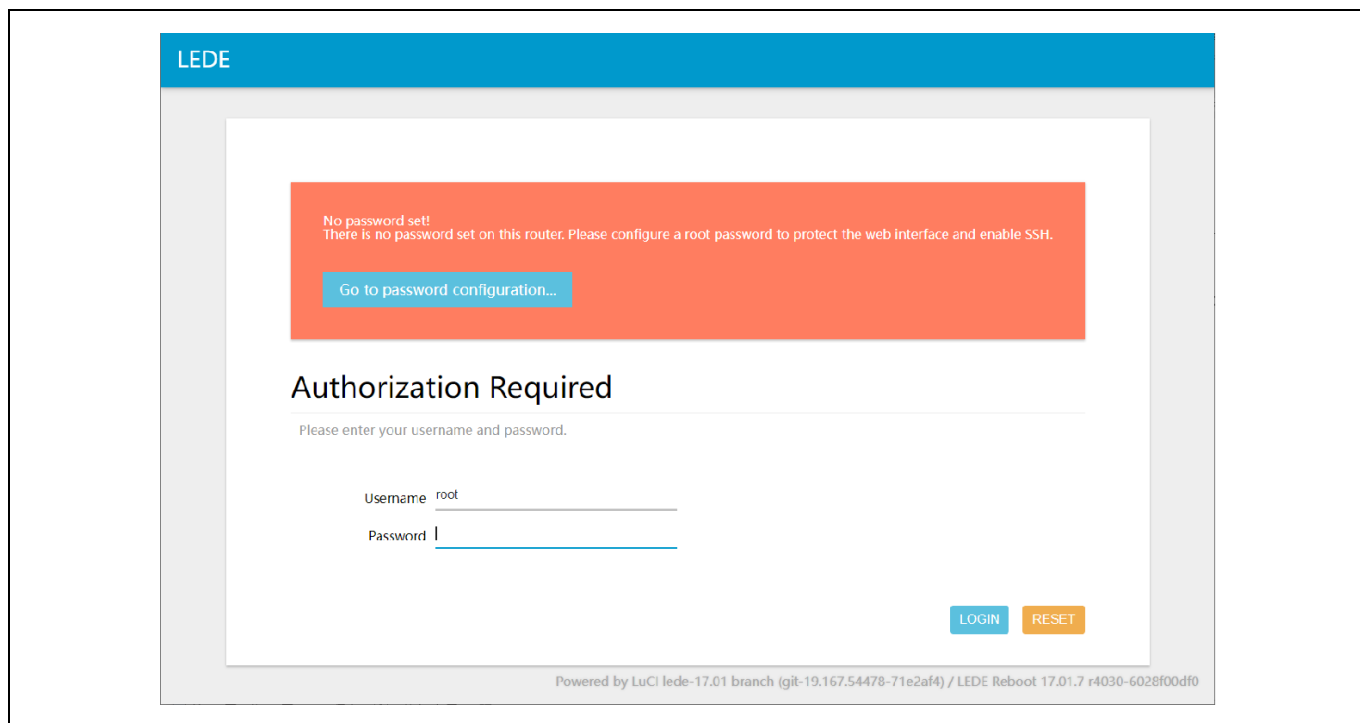


Figure 2-10 Login Screen of LuCI

2.6.3 Firmware Update

Before doing the firmware update, please confirm the MTD partition name is matching between the system and upgrade setting. To check the system partition name, user can see the booting log, as shown in Figure 2-11.

```
[ 1.638483] Creating 3 MTD partitions on "m25p80":
[ 1.643691] 0x000000000000-0x000000200000 : "u-boot"
[ 1.654516] 0x000000200000-0x000000600000 : "kernel"
[ 1.665449] 0x000000600000-0x0000002000000 : "rootfs"
```

Figure 2-11 MTD Partition Name in Booting

To check the upgrade partition name, user can see the file /lib/upgrade/platform.sh, as shown in Figure 2-12.

```
root@LEDE:/# cat /lib/upgrade/platform.sh
#
# Copyright (C) 2010 OpenWrt.org
#
PART_NAME="kernel:rootfs"
platform_check_image() {
    return 0
}
```

Figure 2-12 MTD Partition Name in Upgrade Setting

For the NUC980 Chili board using the SPI-NOR solution, user can upgrade either kernel only or kernel+rootfs. If user want to upgrade kernel only, he can use the image file "ulmage". If user want to upgrade kernel+rootfs, he can use the below image file in output directory.

lede-nuc980-nuc980-chili-nuc980-chili-jffs2-64k-sysupgrade.bin

For the NUC980 IoT board using the SPI-NAND solution, user can upgrade kernel only in current time. And we will support the full upgrade feature in future.

To do the kernel firmware upgrade, enter to "System -> Backup/Flash Firmware". Choose the new kernel image file, and then click "FLASH IMAGE" button, as shown in Figure 2-13.

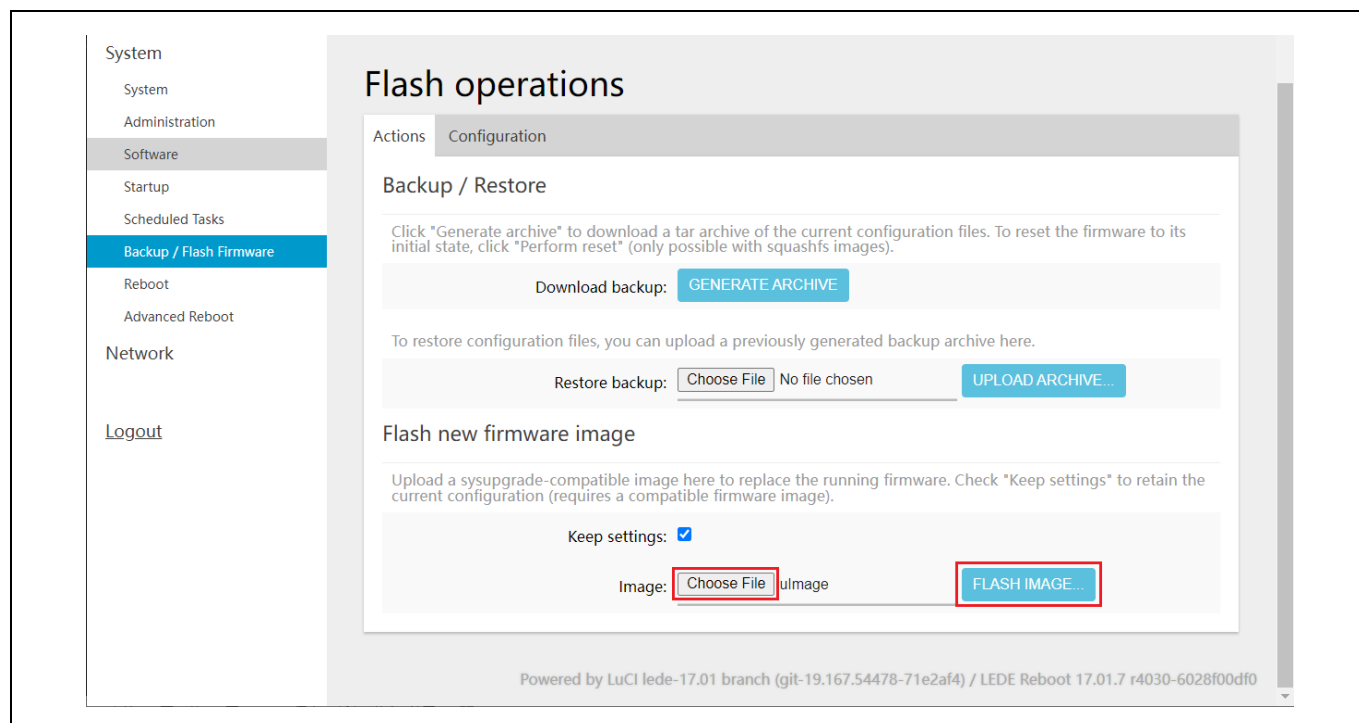


Figure 2-13 Firmware Upgrade in LuCI

Revision History

Date	Revision	Description
2022.01.26	1.00	1. Initially issued.
2022.03.09	1.01	1. Support U-Boot

Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

*Please note that all data and specifications are subject to change without notice.
All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.*