

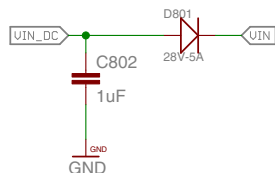

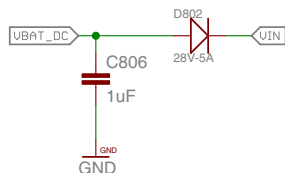
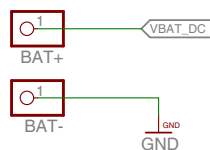



Main DC Input

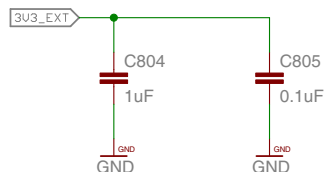

Wireless Expansion

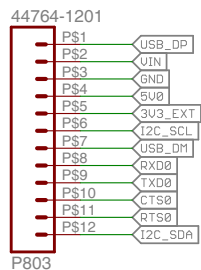

ESP-WROOM-02

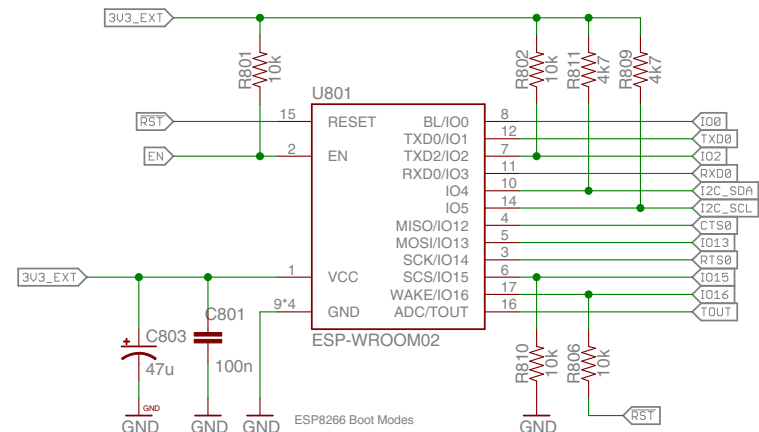


ESP8266 Boot Modes

UART: IO15=Low, IO2=High, IO0=Low
Flash: IO15=Low, IO2=High, IO0=High
SDIO: IO15=High, IO2=x, IO0=x

In the bootup message 'boot mode(x,y)' the 3 low bits of x are [GPIO15, GPIO0, GPIO2].
Default baudrate: 74880 baud (if not working try 76800).

Reset/Boot Switches

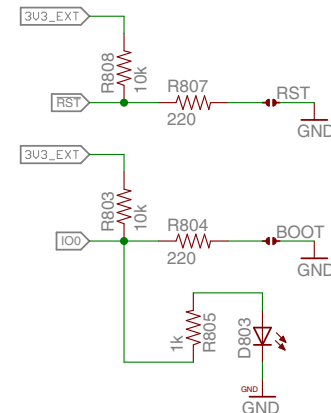

NSVR - ESP8266 Wi-Fi Board

TITLE: wifi_03_12_2018

Document Number:

REV:

Date: 3/12/2018 5:57:27 PM

Sheet: 1/1

©Copyright 2018 NSVR
All Rights Reserved
Confidential and Proprietary Information