


Following 5 steps to update oem.


Step1: Open explorer.

Step2: Select Reader Control. Select register type to OEM, refer to [Fig1]

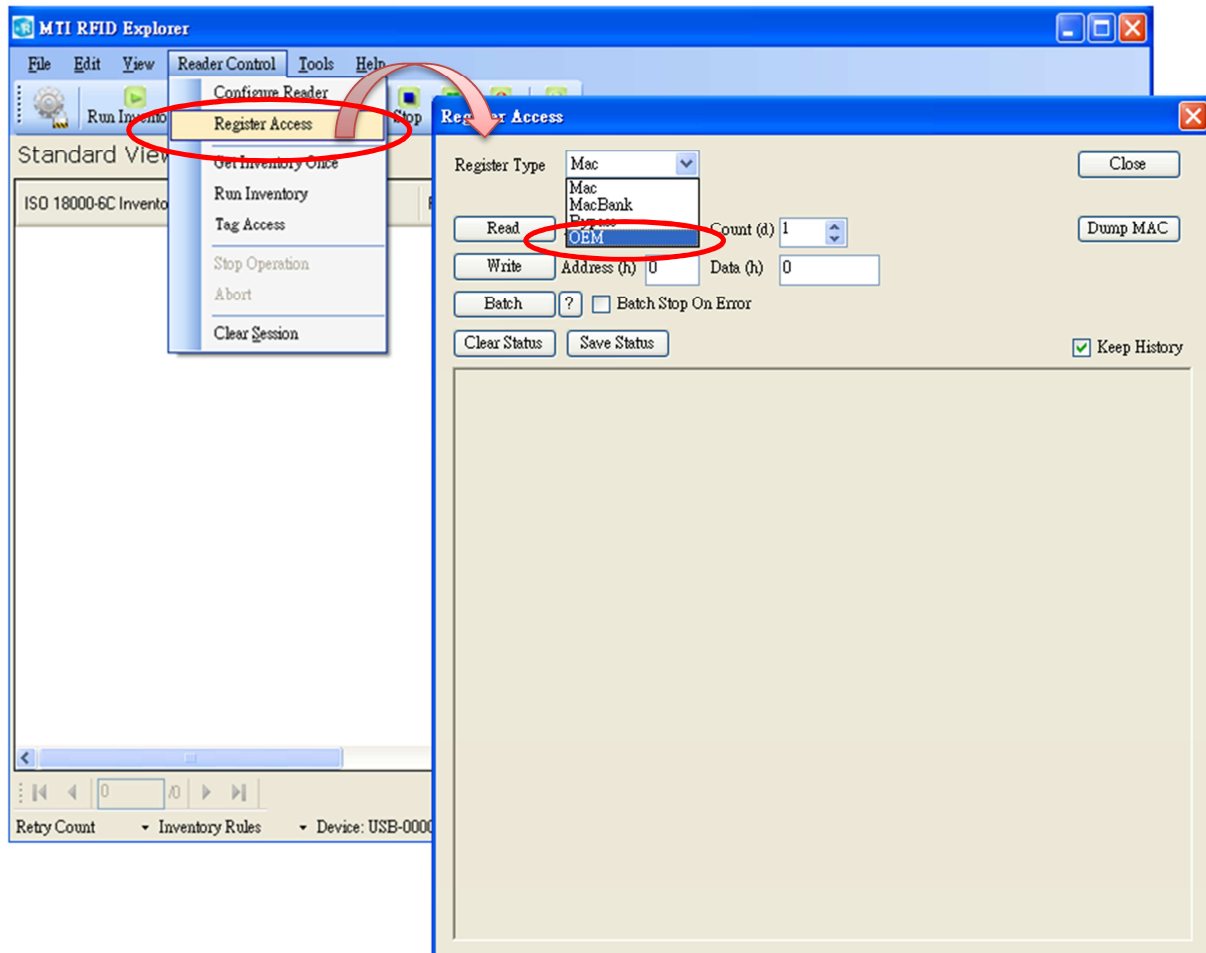


[Fig1]

Step3: Press Batch function and select correct update file, refer to [Fig2]

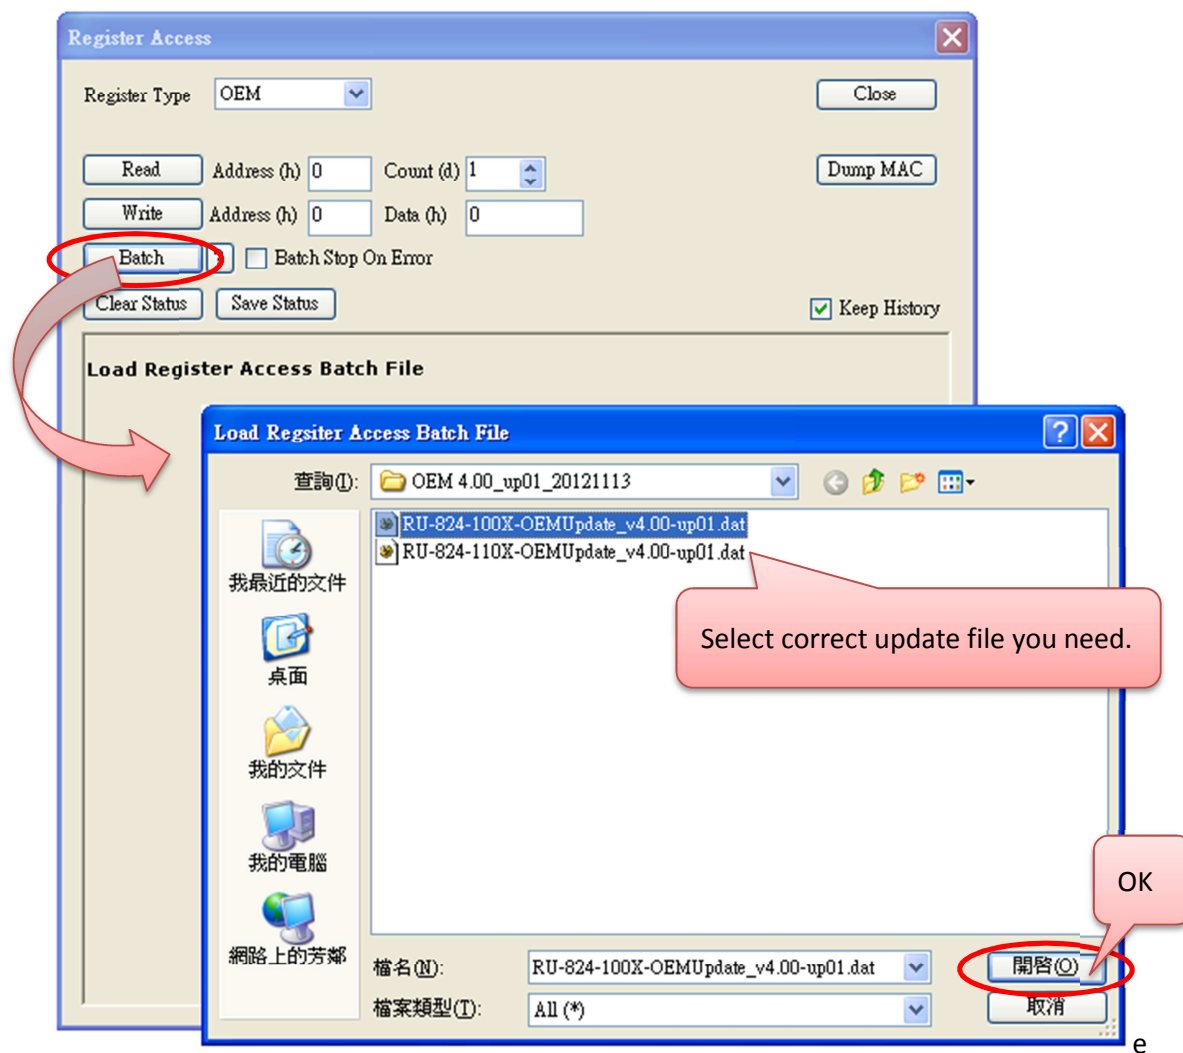


[Fig2]

Step4: Load register access batch success, refer to [Fig3].

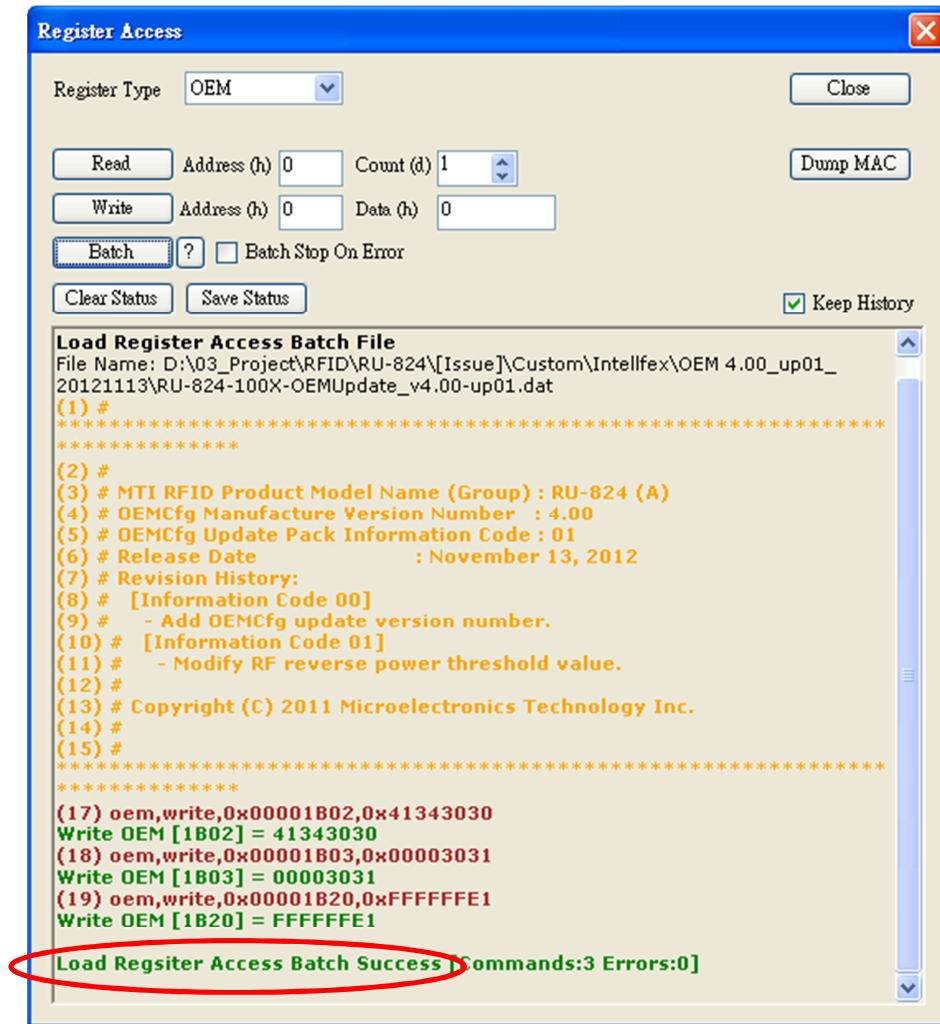

[Fig3]

Step5: Reset reader, refer to [Fig4].

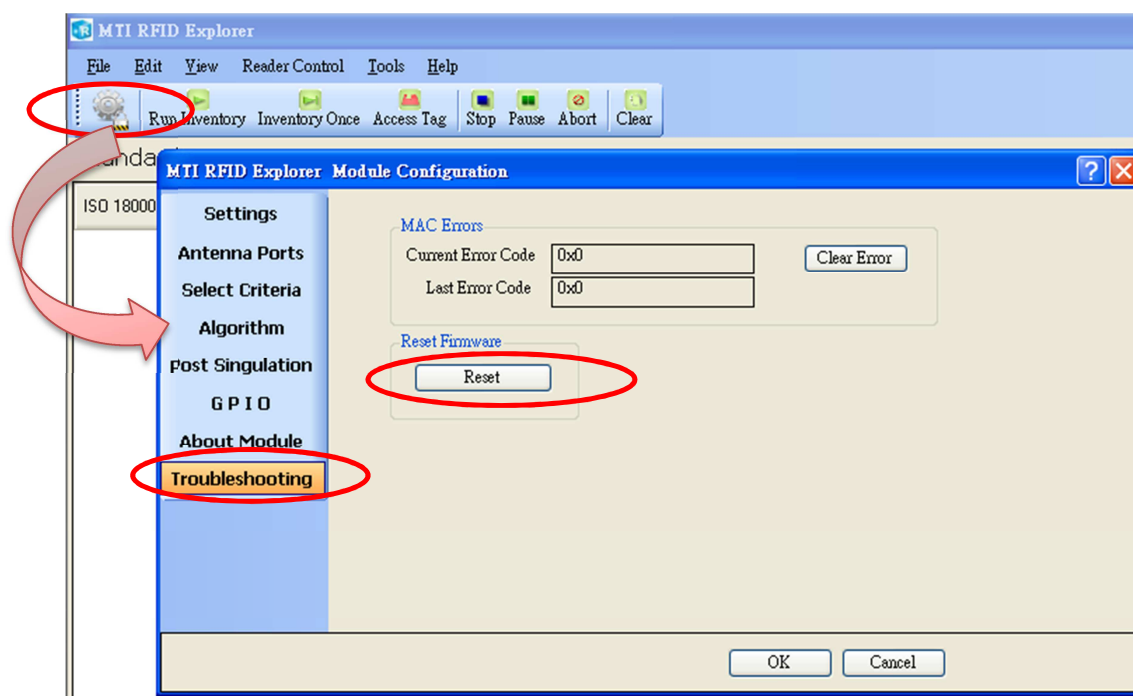

[Fig4]