

The board driver install

1. you should Open the Nandflash jumper JP2, Connect your PC and the board with USB cable,then reset the board



2. Click *Next*



3. Click *Next*




4. Waitting for installation



5. Click *Finish*




6. 驱动安装界面

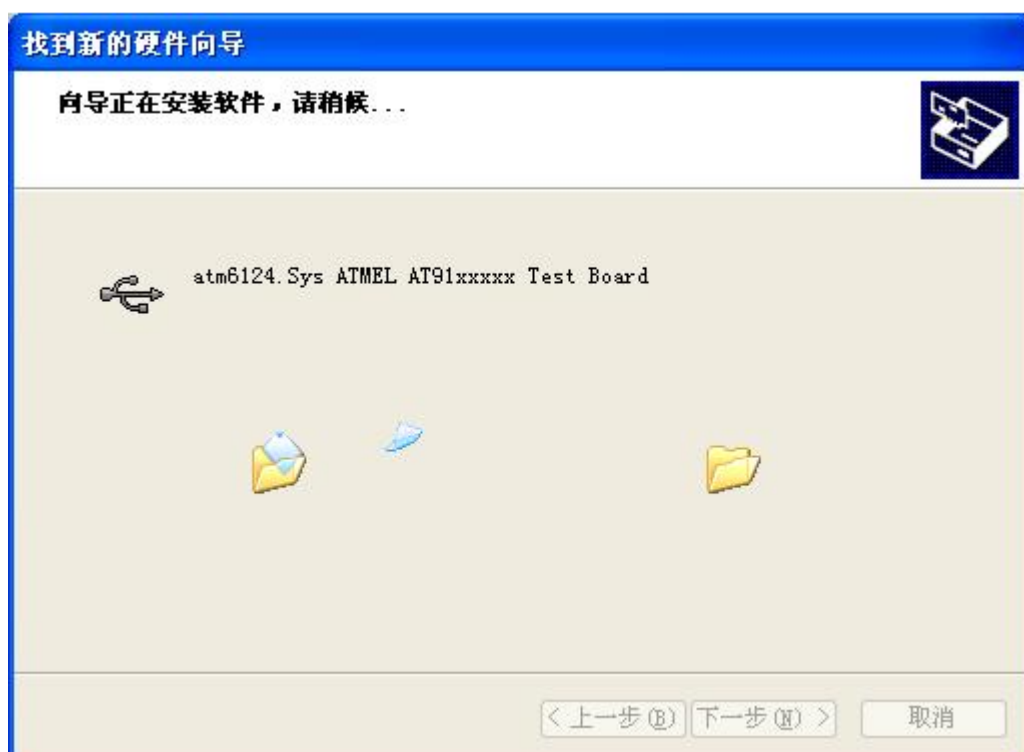

7. Click *Finish*



8. After you have installed the driver, you will find a USB icon on the P



This means you have installed the driver successfully.