



Shift Indicator Light

Check and Installation

1. Check for continuity between indicator light connector terminals as shown. If there is no continuity, check for a burned out bulb or open circuit.

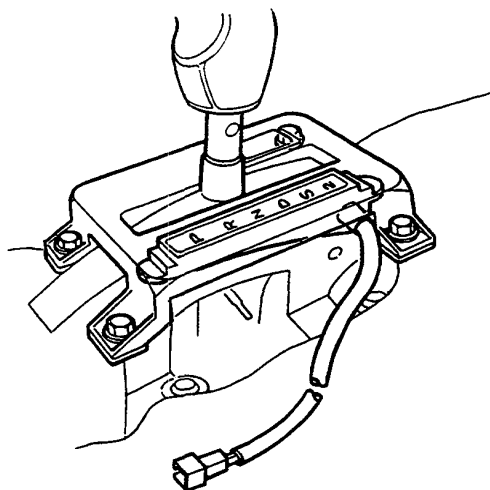

2. Install the indicator bulb in the bulb housing. Insert the bulb housing into the slot in the escutcheon, then turn 90° to bulb housing.

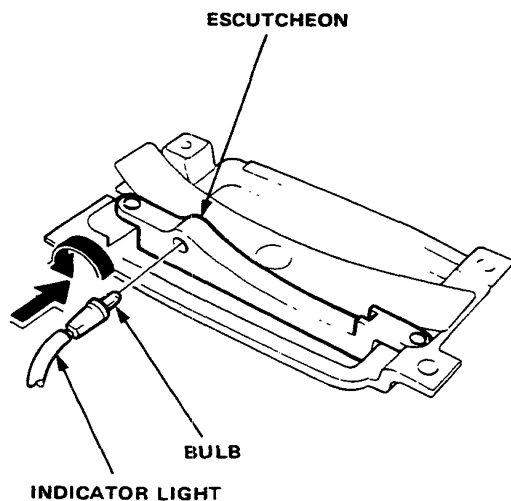

Shift Indicator Panel

Adjustment

1. Check that the index mark of the indicator aligns with the N mark of the shift indicator panel with the transmission in NEUTRAL.
2. If not aligned, remove the panel mounting screws and adjust by moving the panel.

NOTE: Whenever the escutcheon is removed for indicator bulb replacement etc., reinstall the panel as described above.

