


# Troubleshooting

## Flow Chart — Function Control

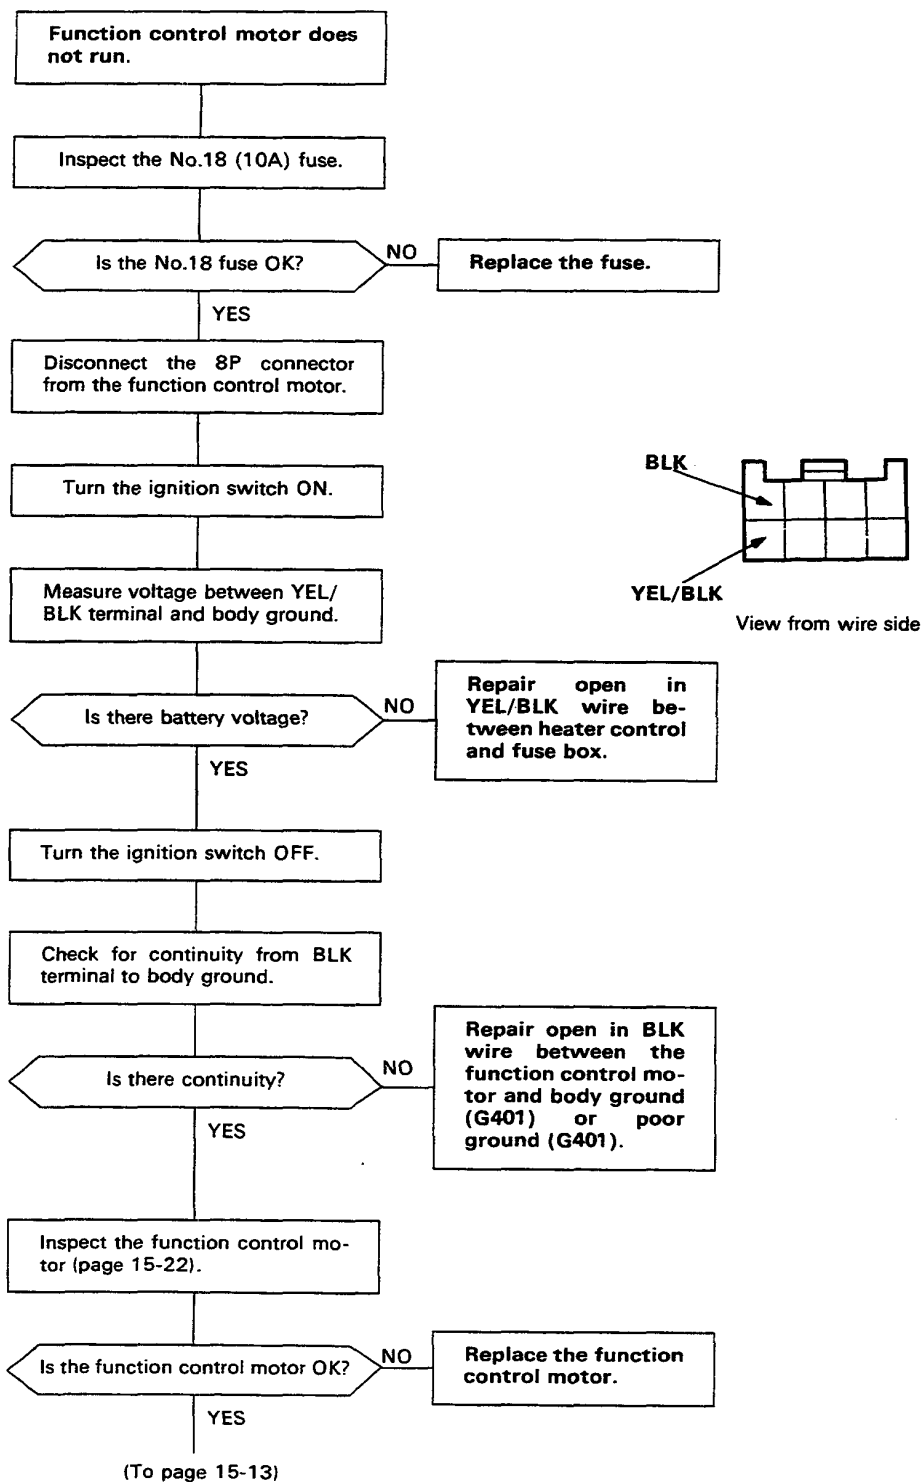



(From page 15-12)

Disconnect the 16P connector from the heater control panel.

Check for continuity at each wire (YEL, BLU/WHT, BRN, YEL/GRN, BLU/RED or BLU) between the 8P and 16P connectors.

Does continuity exist?

NO

Repair open wire.

YES

Check for continuity from each wire (YEL, BLU/WHT, BRN, YEL/GRN, BLU/RED or BLU) to body ground.

Is there continuity?

YES

Repair short to body ground in wire.

NO

Check for continuity between BLK terminal to body ground.


Is there continuity?

NO


Repair open in BLK wire or poor ground (G401).

YES

Replace the heater control panel.

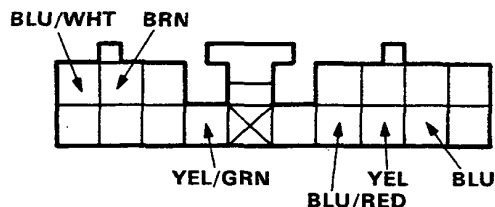

View from wire side

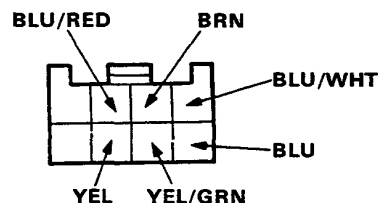

View from wire side

NOTE: If any of the wires are shorted to ground, the function control motor will not change positions.