


Release Bearing and Release Fork

Removal

NOTE: Remove the slave cylinder with the clutch pipe still connected.

1. Remove the boot from the clutch case, and remove the release fork and bearing.

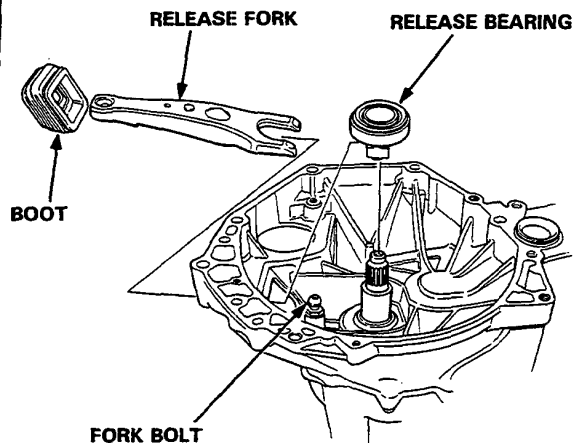


2. To remove the boot, first remove the damper from the release fork.

Inspection

1. Check the release bearing for play by spinning it by hand.

CAUTION: The bearing is packed with grease. Do not wash it in solvent.


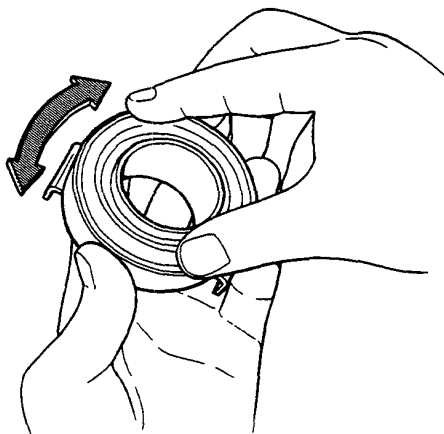


2. Replace the bearing with a new one if there is excessive play.

Installation

1. Slide the release fork between the release bearing pawls, and install the set clip on the fork bolt.

CAUTION: Use only molybdenum disulfide grease in this step (Molykote M77).

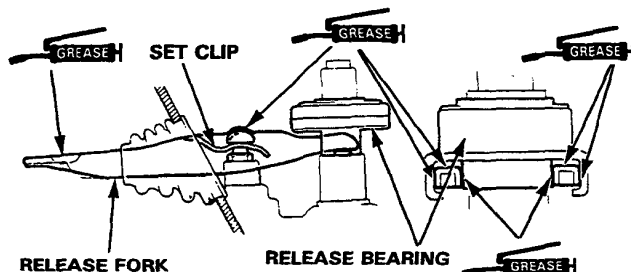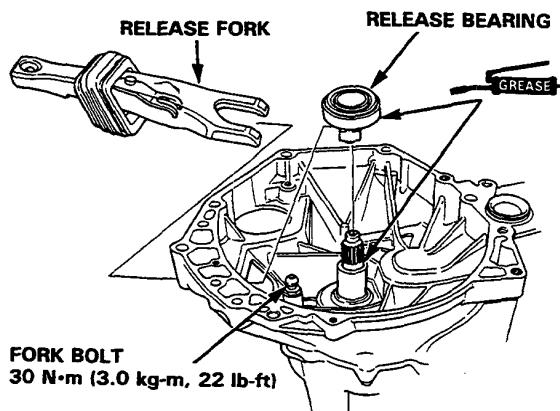

2. Install the boot, being sure that there is no clearance: release fork-to-boot, and boot-to-clutch case.
3. Move the release fork right and left to make sure that the fork fits properly against the bearing, and that the bearing slides smoothly.

