





4. Remove the intermediate shaft inner seal.


5. Remove the 68 mm internal circlip.

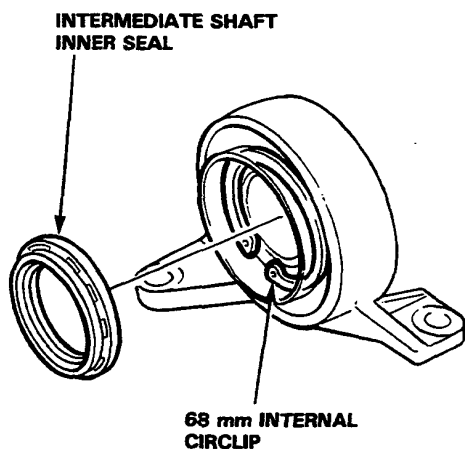

6. Press the intermediate shaft bearing out of the bearing support.

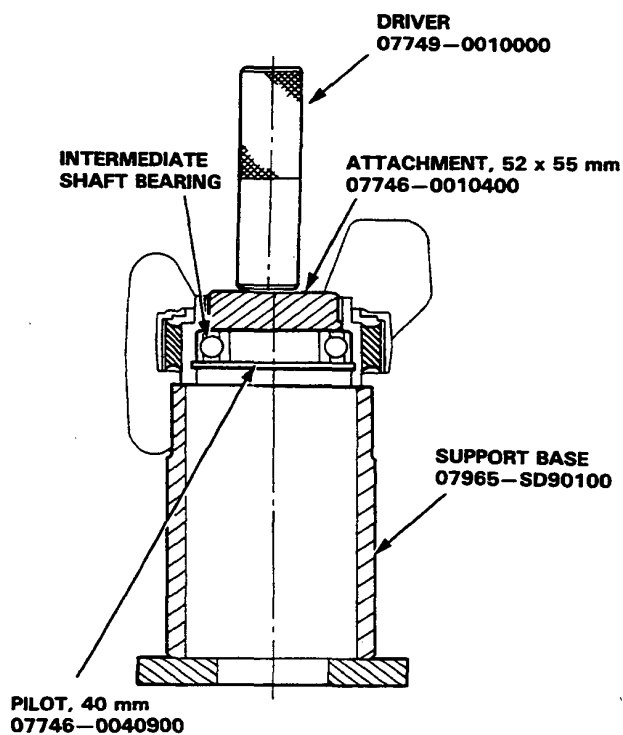

Inspection

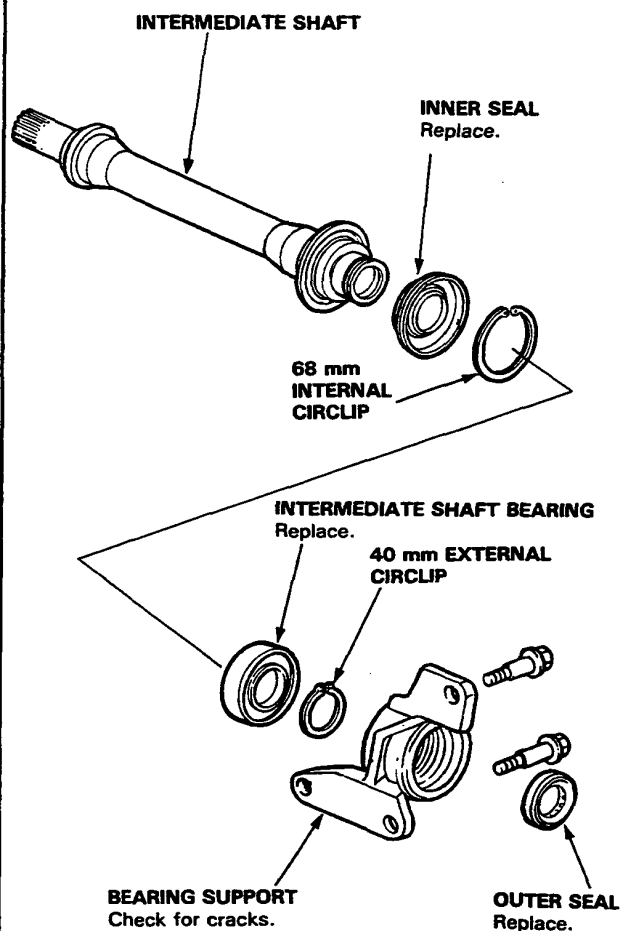

CAUTION: Be careful not to damage the rubber on the bearing support while installation.