


Front Suspension

Torque Specification

CAUTION:

- Replace the self-locking nuts after removal.
- Replace the self-locking bolts if you can easily thread a nut past their nylon locking inserts.

NOTE: Wipe off the grease before tightening the nut at the ball joint.

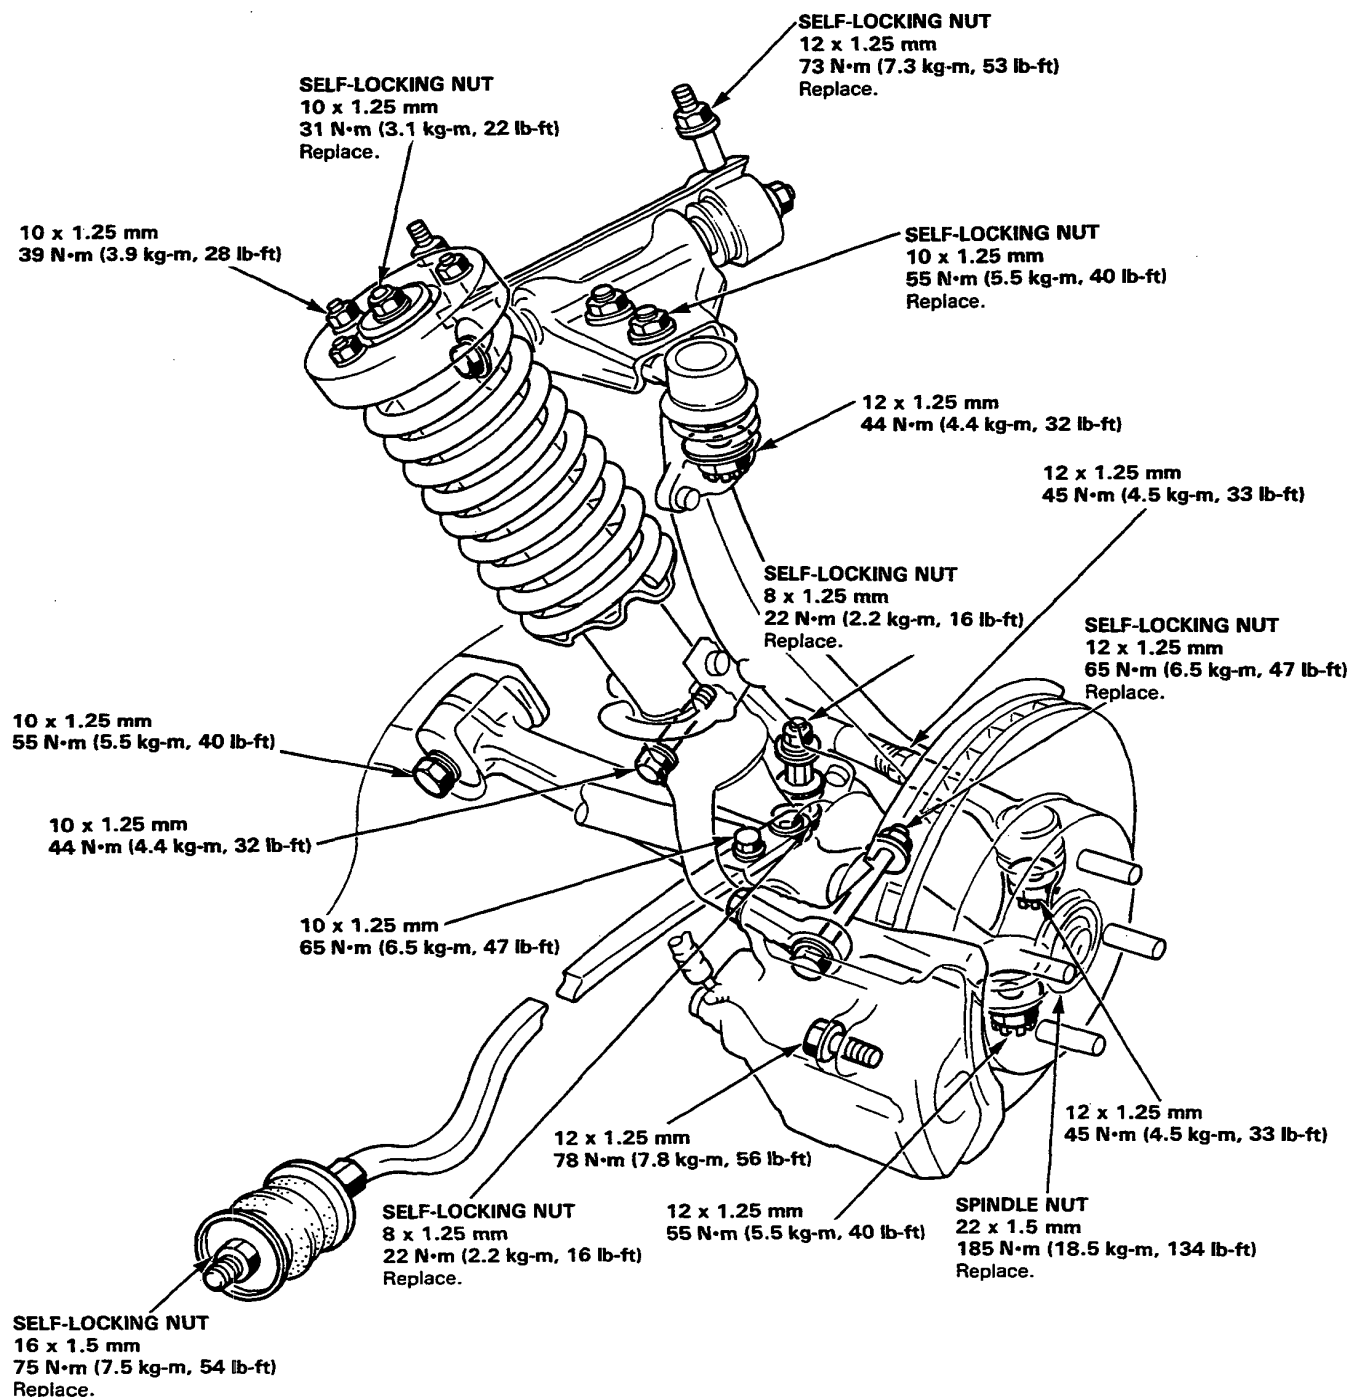

CAUTION: The vehicle should be on the ground before any bolts or nuts connected to rubber mounts or bushings are tightened.