


Test



Fan Switch

1. Disconnect the 6P connector from the fan switch.
2. Check for continuity between the terminals of the fan switch according to the table below.

Terminal Position	1	2	3	4	5	6
OFF						
1	○	○	○			
2	○	○		○		
3	○	○			○	
4	○	○				○

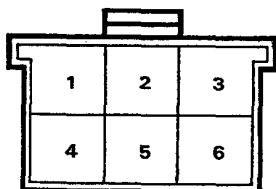

Function Control Switch

1. Disconnect the 16P connector from the heater control.
2. Check for continuity between the terminals according to the table.

Terminal Position	15	13	10	2	1	14
OFF					○	○
1				○		○
2			○			○
3		○				○
4	○					○
5						○

