


Stereo Sound System



Component Location Index

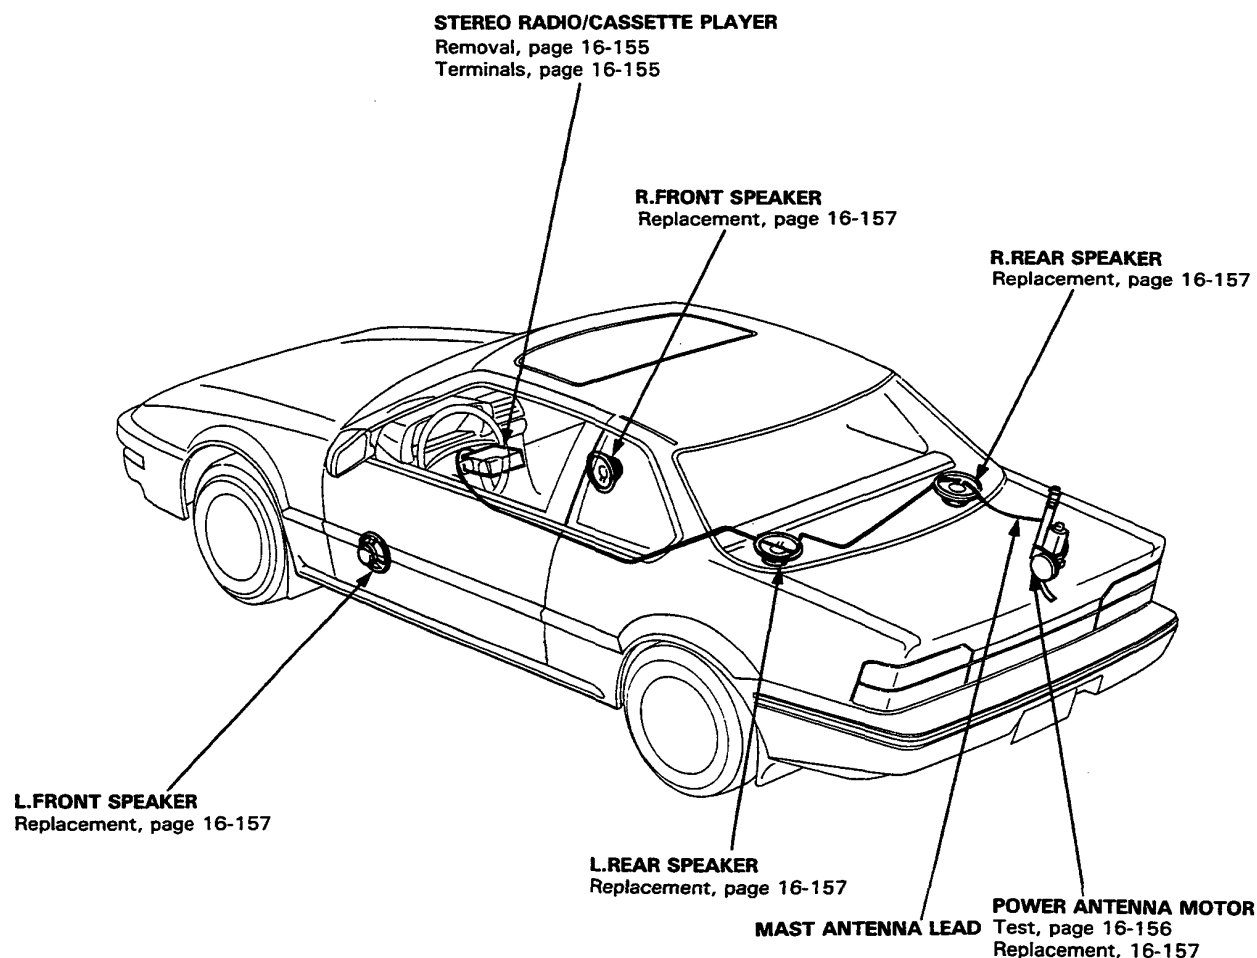


Description

For the stereo radio/cassette player description, please see the owner's manual.

The automatic antenna mast is controlled entirely by the radio ON/OFF switch. It will extend fully any time the radio switch is on and the ignition switch is on. When the radio is shut off, it retracts fully. The power antenna motor has a built-in relay together with a limit switch for this function.


Stereo Sound System

Circuit Diagram

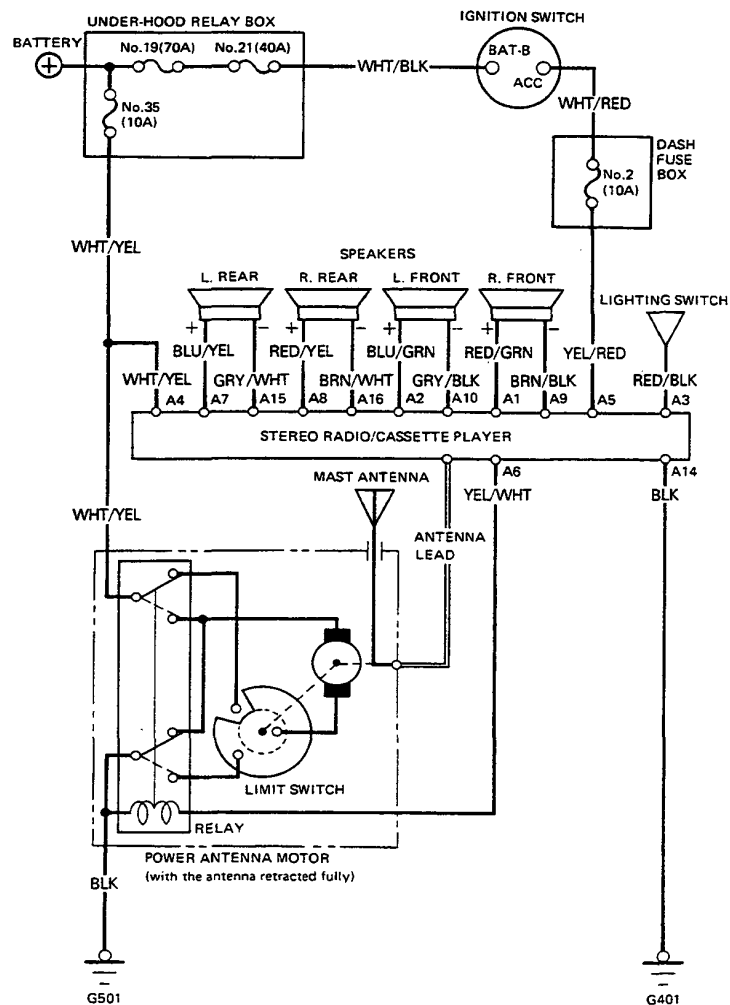




Unit Removal

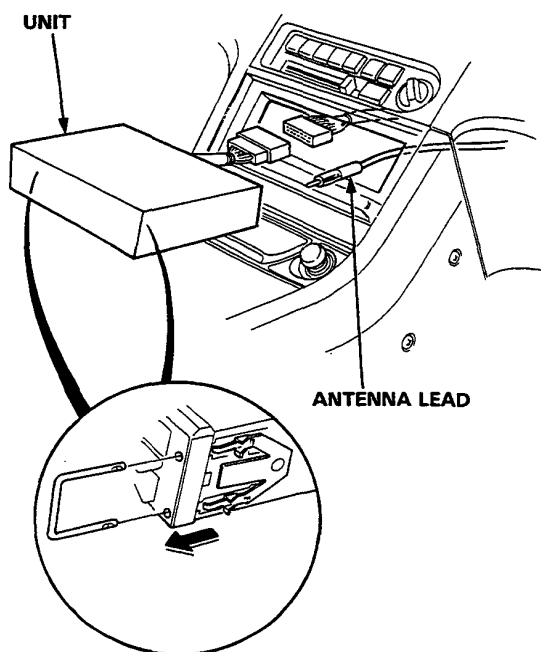

Unit Terminals

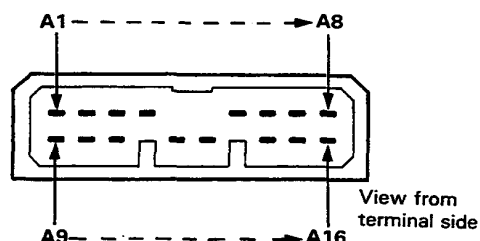

Terminal	Wire	Destination
A1	RED/GRN	Right front speaker ⊕
A2	BLU/GRN	Left front speaker ⊕
A3	RED/BLK	Light-on signal
A4	WHT/YEL	Constant power (Tuning memory)
A5	YEL/RED	ACC (Main stereo power supply)
A6	YEL/WHT	Radio switched power (To antenna)
A7	BLU/YEL	Left rear speaker ⊕
A8	RED/YEL	Right rear speaker ⊕
A9	BRN/BLK	Right front speaker ⊖
A10	GRY/BLK	Left front speaker ⊖
A11		(Not used)
A12		(Not used)
A13		(Not used)
A14	BLK	Ground
A15	GRY/WHT	Left rear speaker ⊖
A16	BRN/WHT	Right rear speaker ⊖