


Knuckle/Hub


Reassembly

1. Place the rear wheel bearing in special tool fixture, then set the knuckle in position and apply downward pressure with a hydraulic press.


CAUTION: Maximum press load: 4 tons

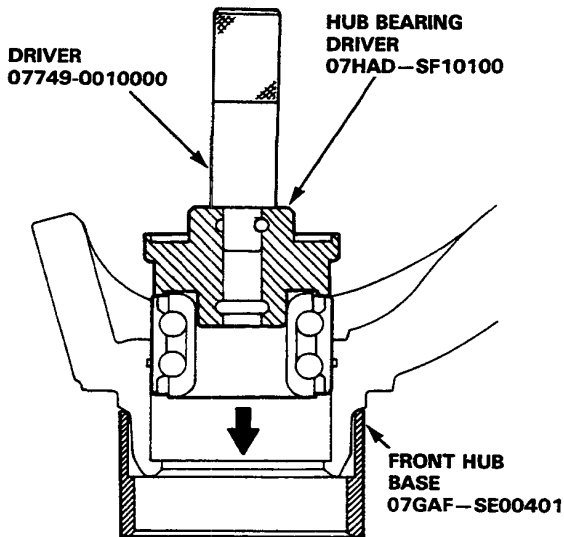


2. Fit the 68 mm circlip into the groove of the knuckle.

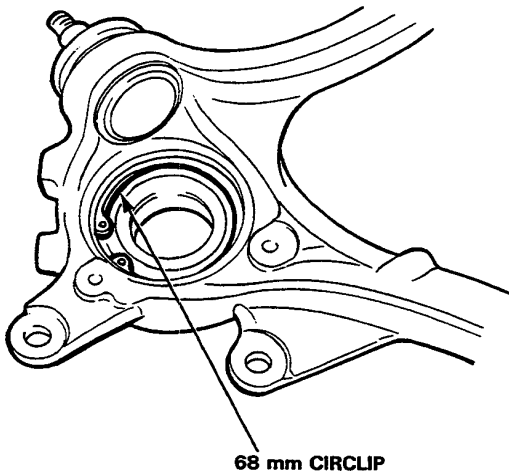

3. Install the splash guard.

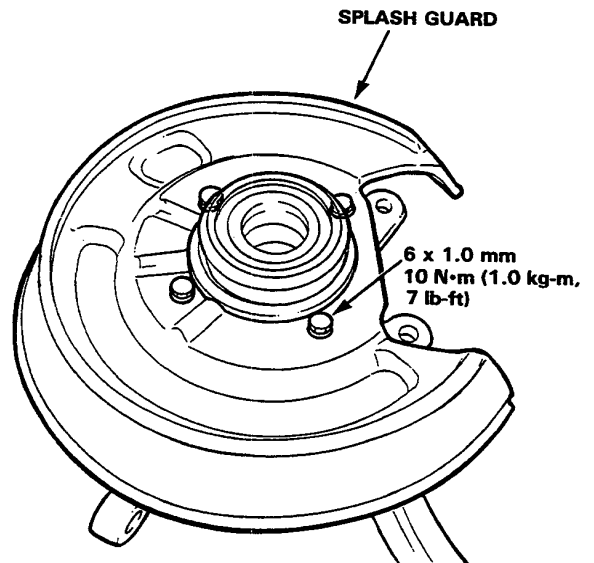

4. Place the rear hub in special tool fixture, then set the knuckle in position and apply downward pressure with a hydraulic press.

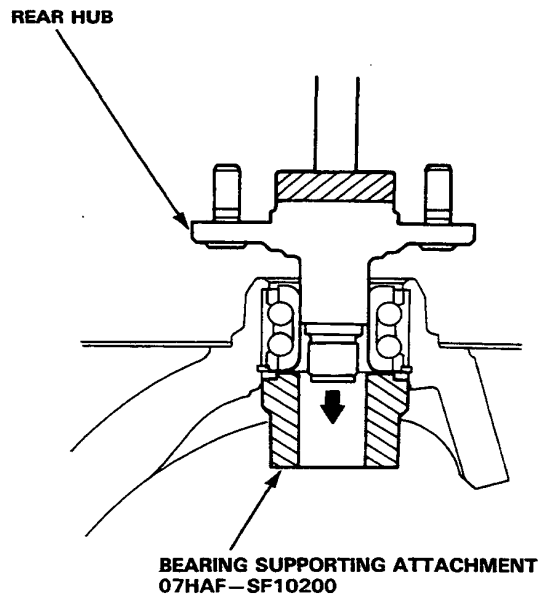

5. Place the rear hub nut and tighten it.