


# Column

## Removal/Installation

1. Remove the steering wheel.
2. Remove the cover panel under the steering column.
3. Remove the steering joint cover.
4. Remove the steering joint bolt, and move the joint toward the column.
5. Remove the column B holder.
6. Remove the bolts attaching the steering column.
7. Remove the column cover.
8. Remove the turn signal cancel sleeve.
9. Disconnect each wire connector, and remove the slip ring assembly and the combination switch assembly.
10. Installation is in the reverse order of removal.

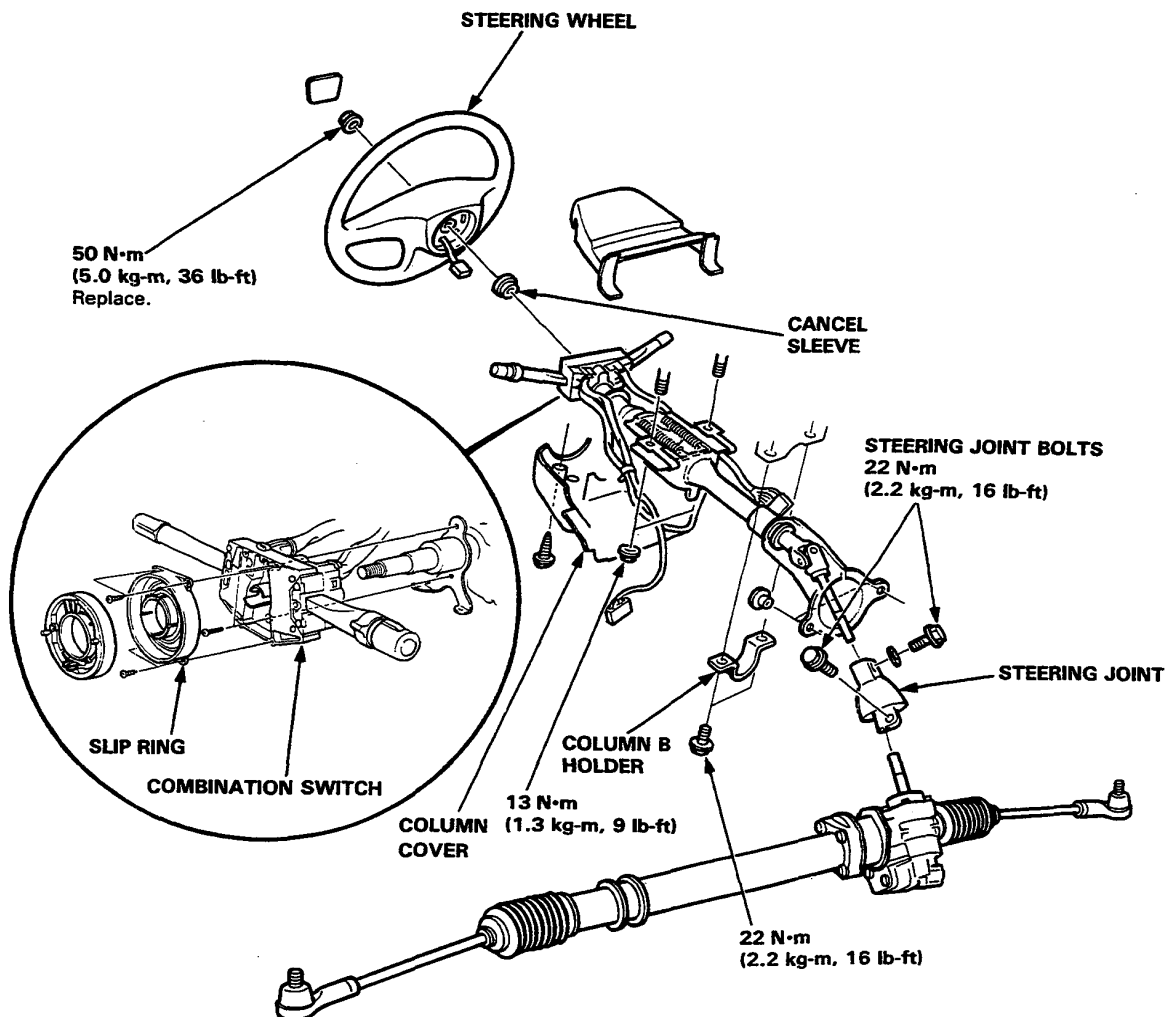

NOTE: LH Drive shown, RH Drive is similar

**CAUTION:** Before tightening the steering joint bolts, pull up the steering joint to make sure that all parts are properly seated.