


Roof Rack Hooks/Rear Panel

Roof Rack Hook Replacement


1. Remove the door weatherstrip.
2. Remove the screws, then remove the front and rear roof rack hooks.

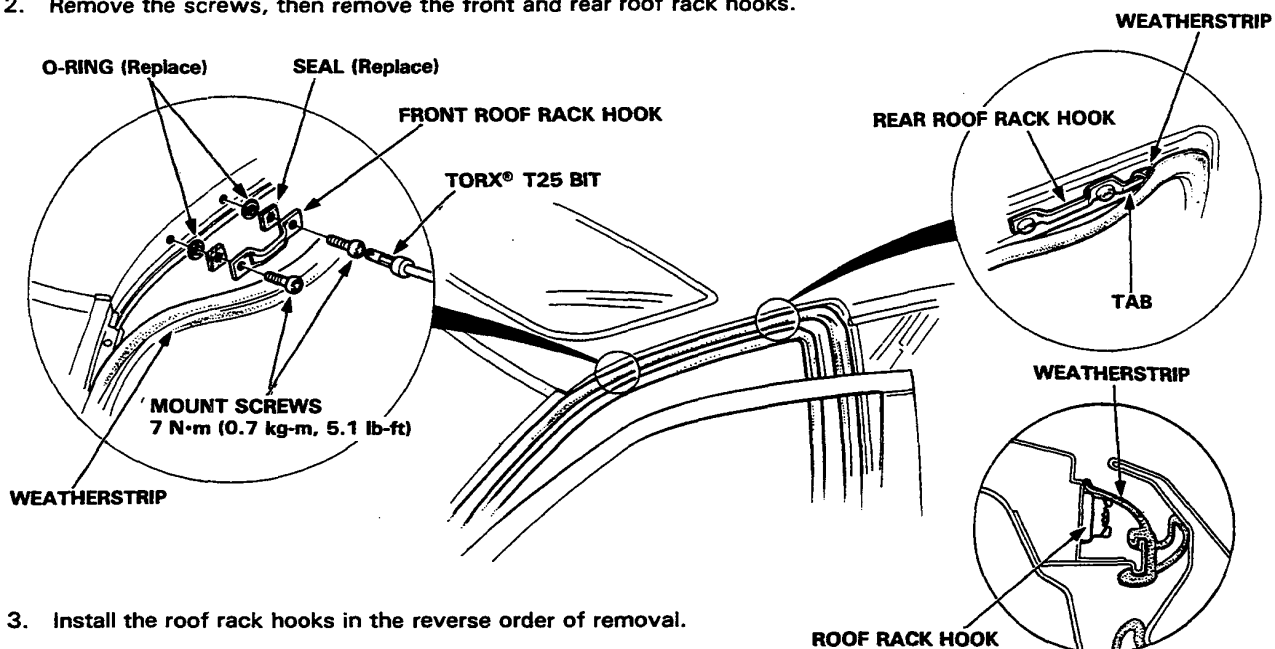

3. Install the roof rack hooks in the reverse order of removal.

Rear Panel Replacement

1. Open the trunk lid and remove the maintenance caps.
2. Disconnect the connector, then remove the panel by removing the 8 mount nuts.

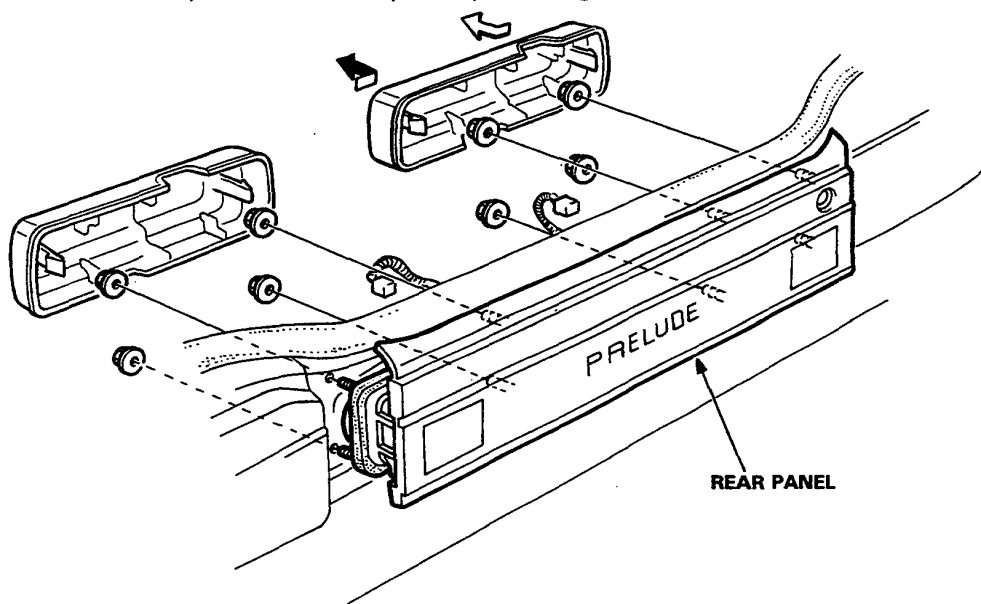

3. Install the rear panel in the reverse order of removal.