




Front Cover Replacement


Front Seat Back:

1. Separate the seat cushion and back. (page 14-38).
2. Remove the headrest and headrest guide (page 14-38).
3. Remove the lower clips, and fasteners.
4. Remove the inside clips and springs, then remove the trim cover.

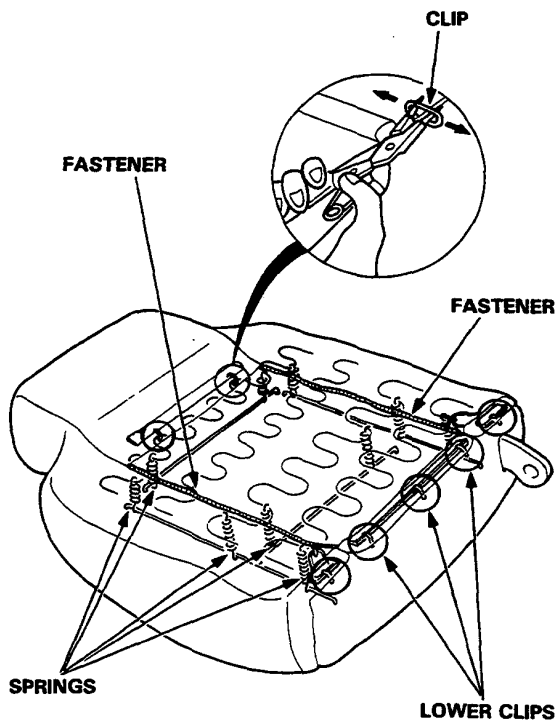

Front seat cushion:

5. Remove the 12 clips, and the hook.
6. Remove the spring, then remove the trim cover.

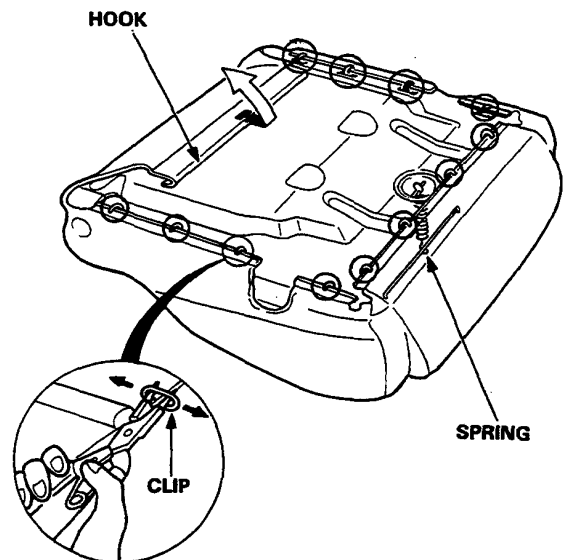

NOTE: To prevent wrinkles when installing a seat cover, make sure the material is stretched evenly over the frame before securing all the clips.