




## Removal (cont'd)

17. Separate the hub from the knuckle using a hydraulic press and the special tools shown below.

### CAUTION:


- Set the rear hub at the hub dis/assembly base firmly so that the knuckle will not tilt disassembly.
- Take care not to distort the splash guard.
- Hold onto the hub to keep it from falling when pressed clear.

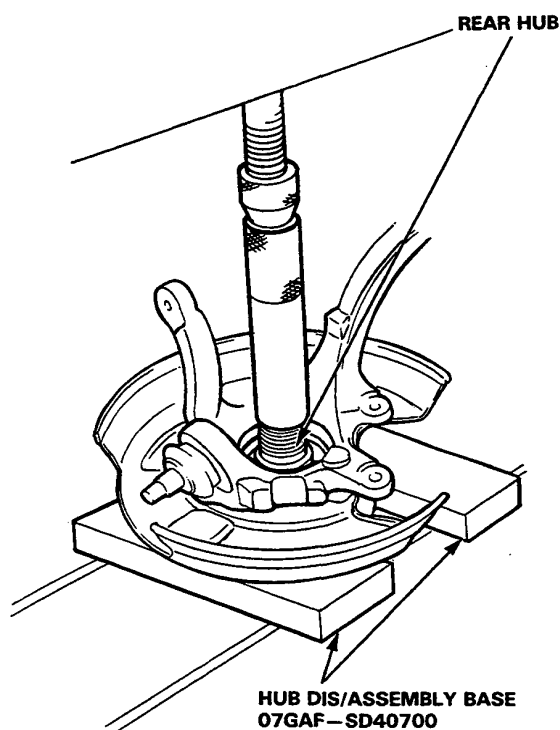

## Bearing Removal

NOTE: Replace the bearing with a new one after removal.

1. Remove the splash guard and 68 mm circlip from the knuckle.
2. Press the wheel bearing out of the knuckle using a hydraulic press and the special tools shown below.

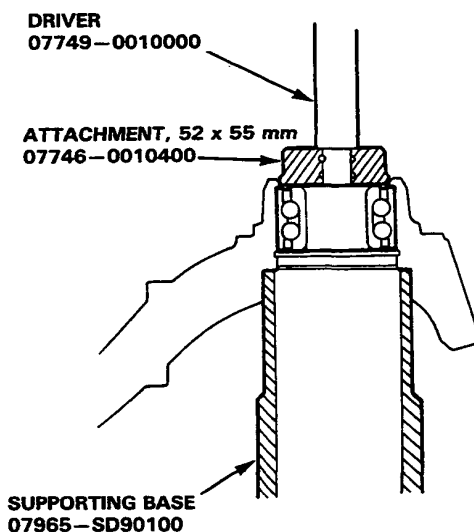

3. Remove the bearing inner race using a commercially available bearing remover.

