




## Shift Arm Lever


### Reassembly

3. Insert the select lever into the select arm then, press the spring pin into the select arm and lever with pliers.

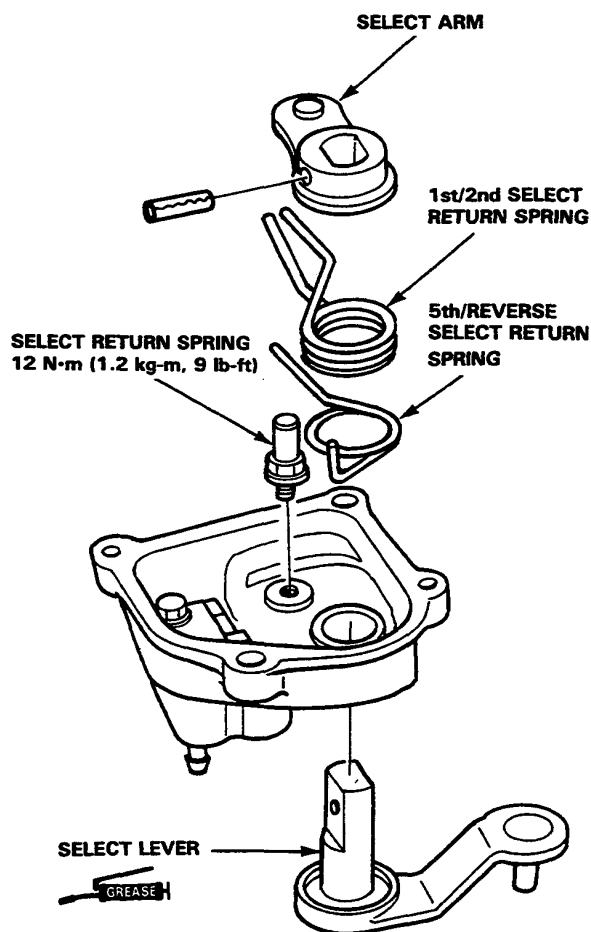

NOTE: During reassembly, grease all sliding parts.

1. Insert the shift arm into the interlock.
2. Place the boot onto the shift arm lever.
3. Insert the shift lever through the shift arm and interlock.

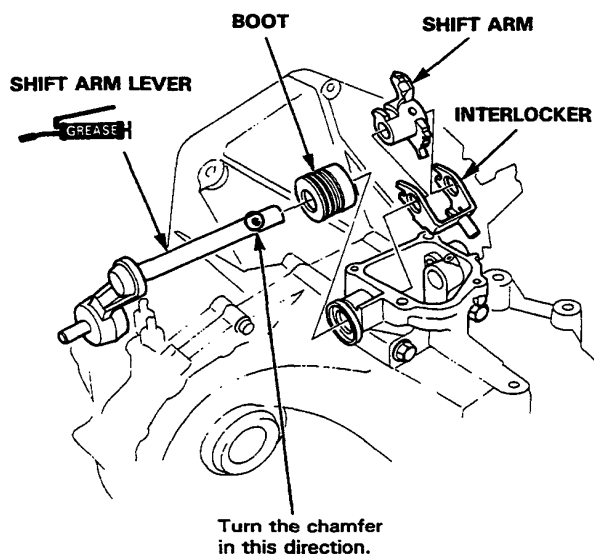

4. Insert the stopper pin into the interlock, then tighten the flange bolt.
5. Align shift arm and shift arm lever holes, then insert and tighten the 8 mm bolt.

