


# Fuses



## Fuse/Relay Box

**Relay Box (Located in engine compartment, right side):**

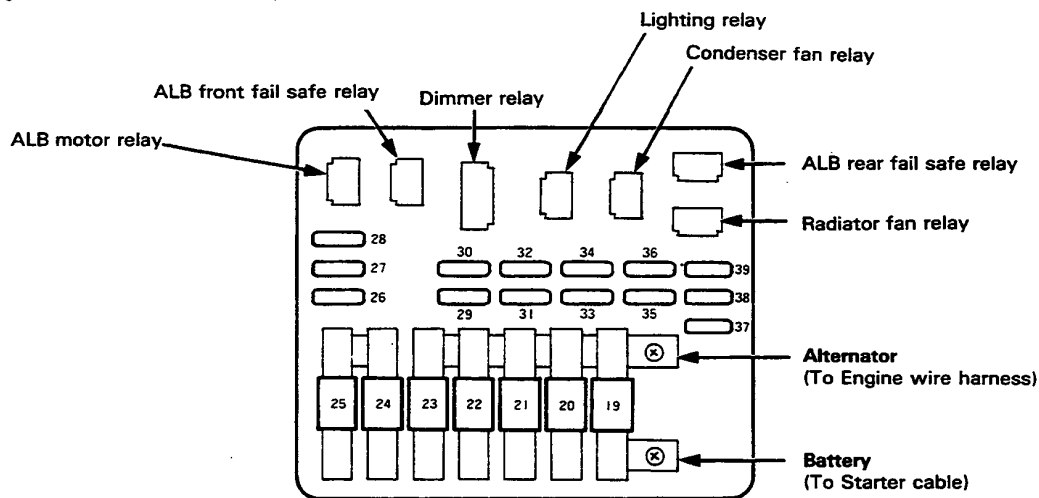

**Fuse Box (Located under dash, left side): L.H. Drive**  
**(Located under dash, right side): R.H. Drive**

