


Seat Belts

Rear Replacement

CAUTION: Check the seat belts for damage (page 14-43), and replace them if necessary. Be careful not to damage them during removal and installation.

1. Remove the rear seat (page 14-40).
2. Remove the quarter trim panel.
3. Remove the upper anchor bolt, the lower anchor bolt and retractor bolt with a 17 mm socket or box-end wrench.

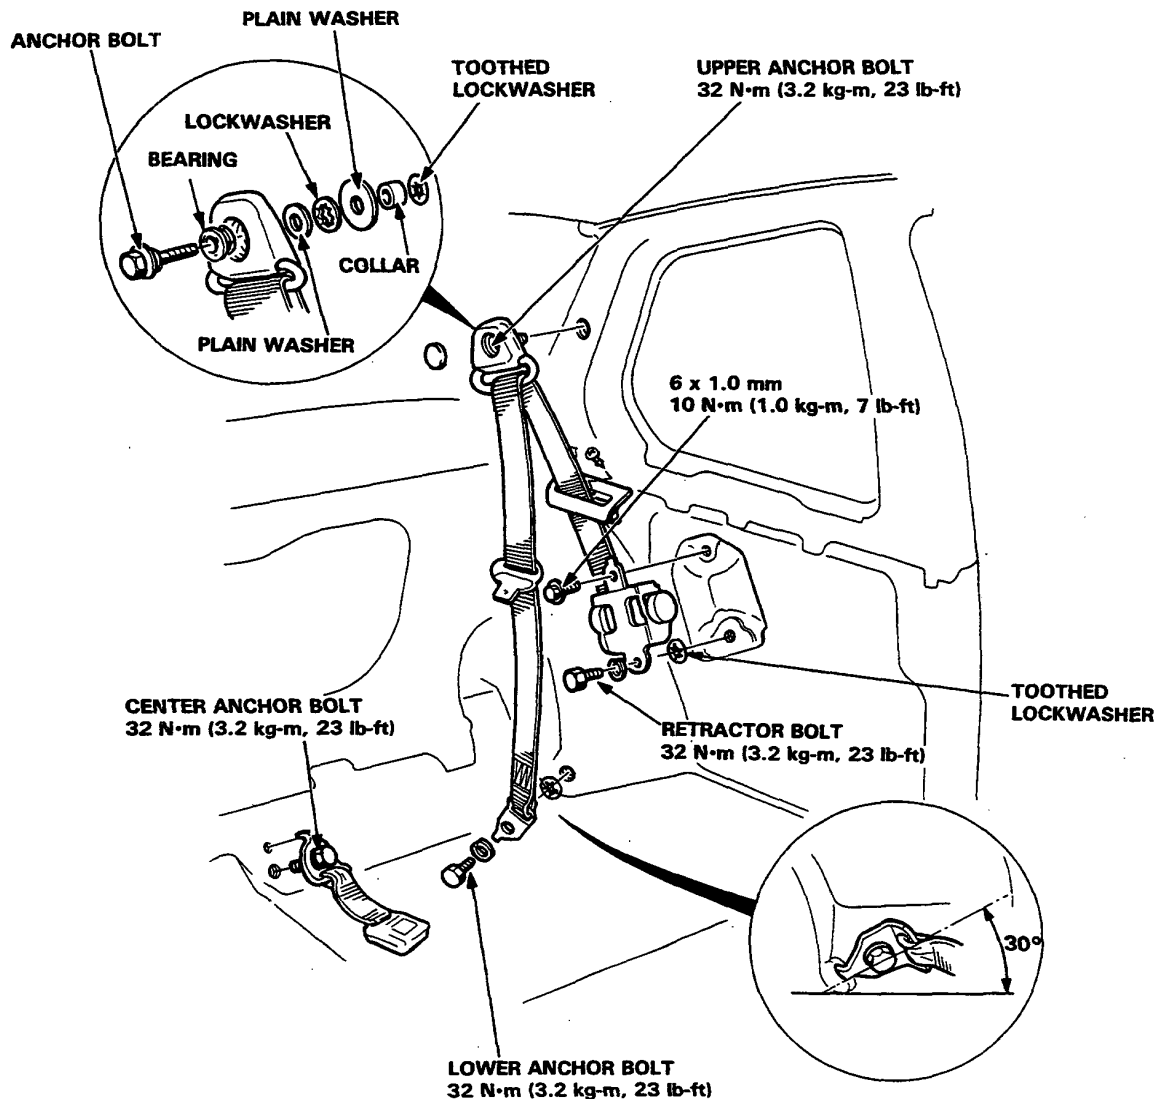

4. Install the seat belt in the reverse order of removal.

NOTE: Before attaching the quarter trim panel and rear seat, make sure there are no twists in the belt.