


# Intermediate Shaft


## Replacement

1. Drain oil from the transmission.
2. Remove the three 10 mm bolts.

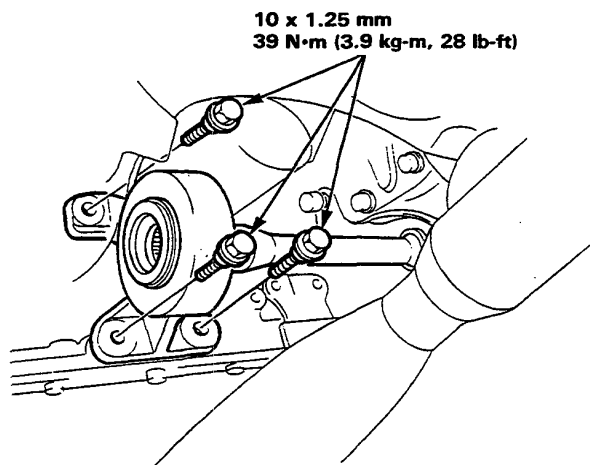


3. Remove the intermediate shaft from the differential.

**CAUTION:** To prevent damage to the differential oil seal, hold the intermediate shaft horizontal until it is clear of the differential.

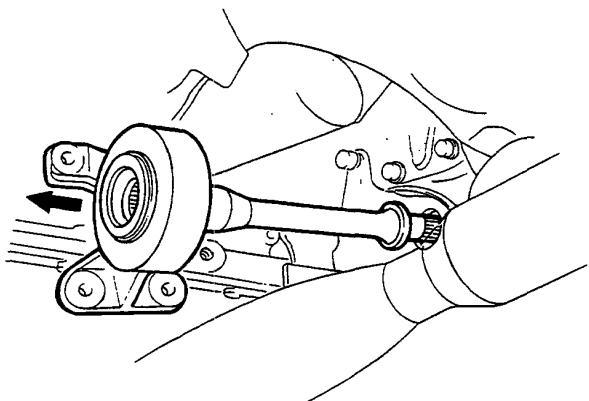


## Disassembly

1. Remove the intermediate shaft outer seal.
2. Remove the 40 mm external circlip.

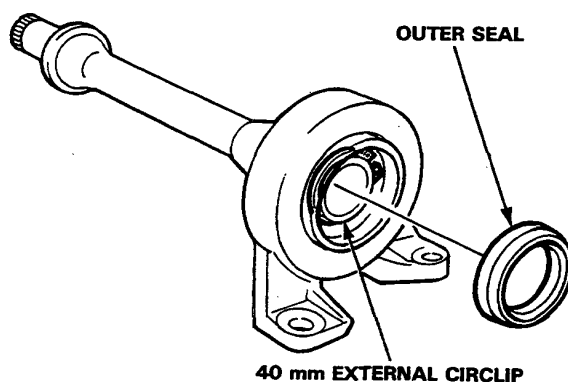


3. Press the intermediate shaft out of the shaft bearing.

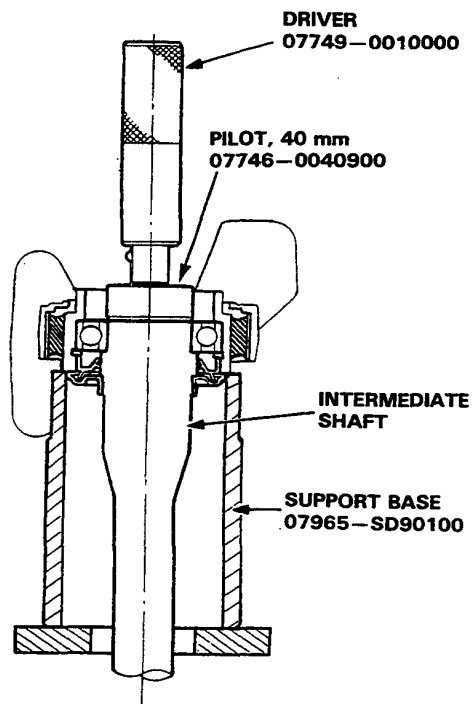




4. Remove the intermediate shaft inner seal.


5. Remove the 68 mm internal circlip.

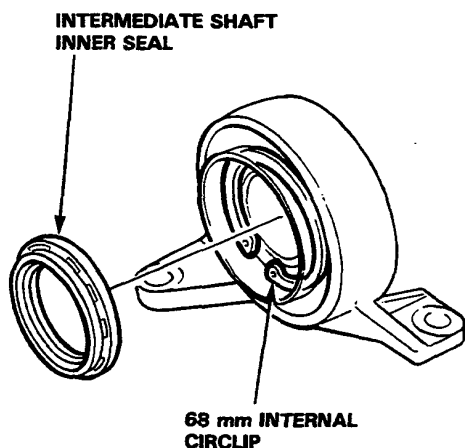

6. Press the intermediate shaft bearing out of the bearing support.

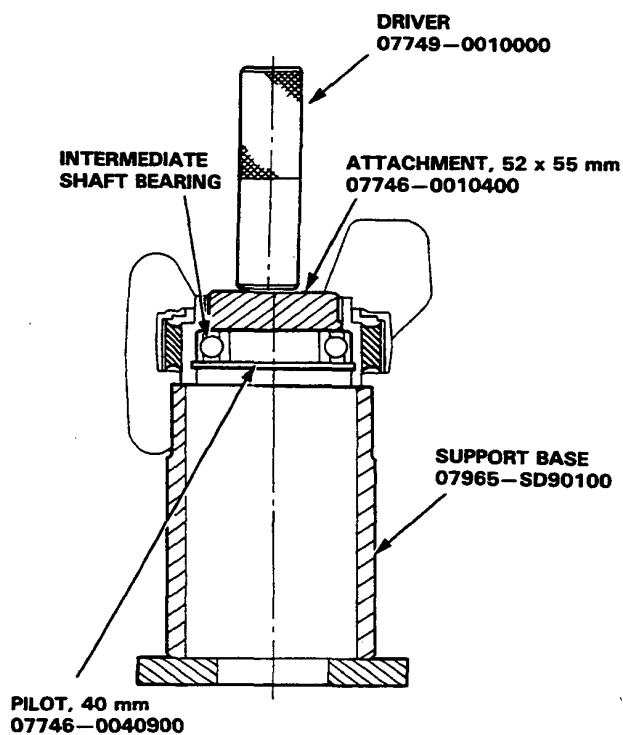

## Inspection

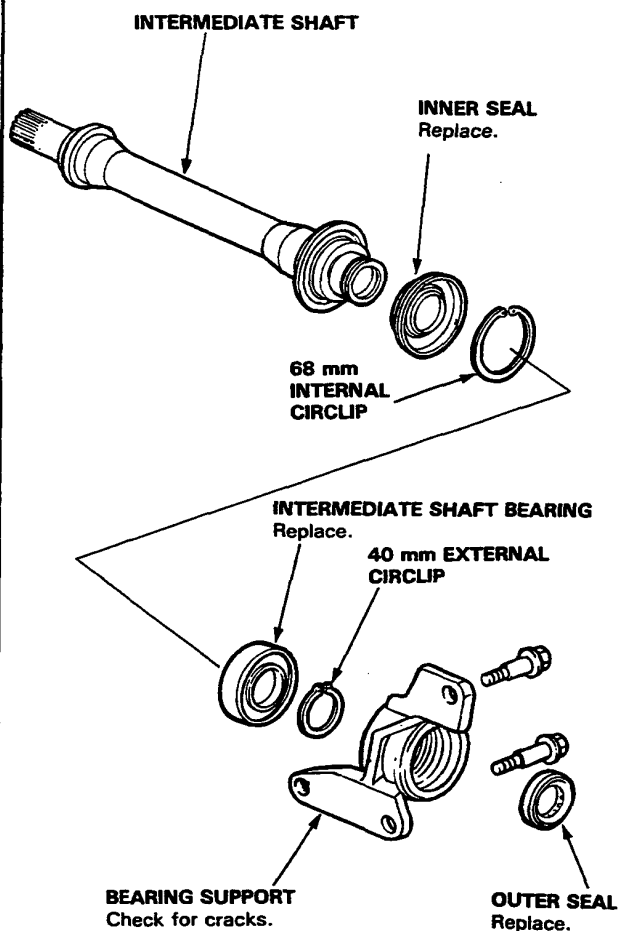

**CAUTION:** Be careful not to damage the rubber on the bearing support while installation.