



Rear Steering Gearbox

Replacement

1. Raise the rear of car and support of safety stands in the proper locations.
2. Remove the rear wheels.
3. Disconnect the tie-rods from the steering knuckles using the special tool.

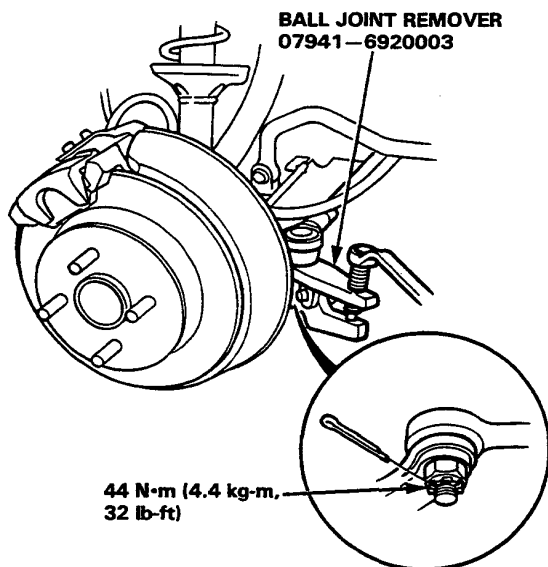


4. Slide the rear steering joint guard toward the front.

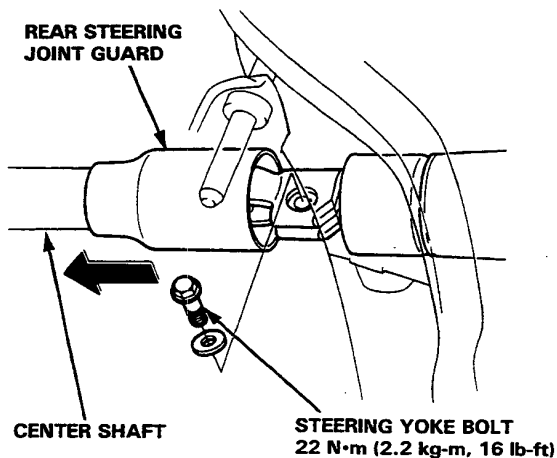


5. Remove the steering yoke bolt.

6. Remove the four rear steering gearbox bolts.

NOTE: Install the Rear Steering Center Lock Pin (see, page 17-85) before removing the gear box bolts.

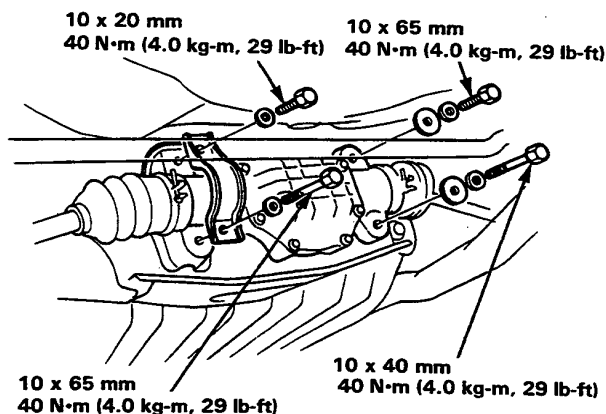

7. Remove the rear steering gearbox assembly.

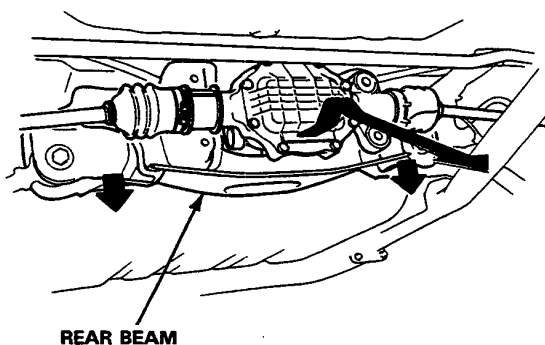

8. Reinstall the rear steering gearbox in the reverse order of removal.
9. Align the wheels (see section 18).