





Ground Distribution

Circuit Identification


NOTE: See pages 16-8 and 9 for illustrated ground locations.

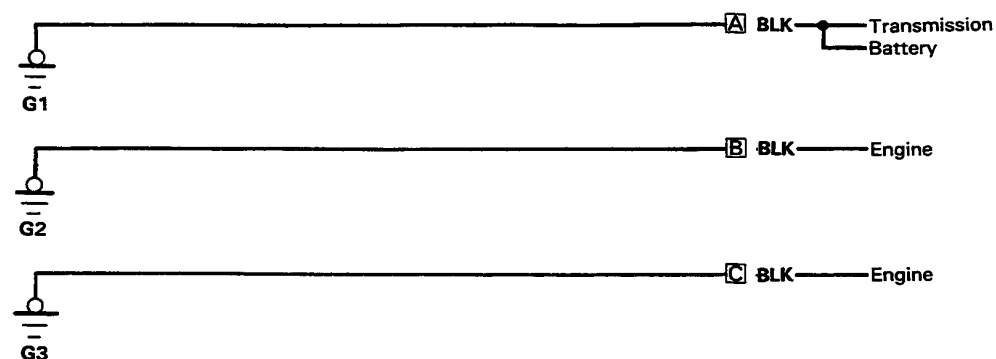

L.H. Drive:

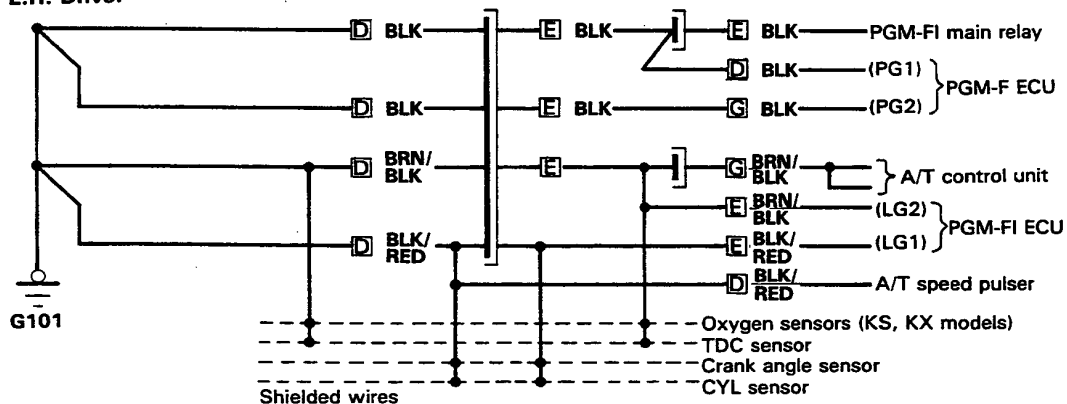

R.H. Drive:

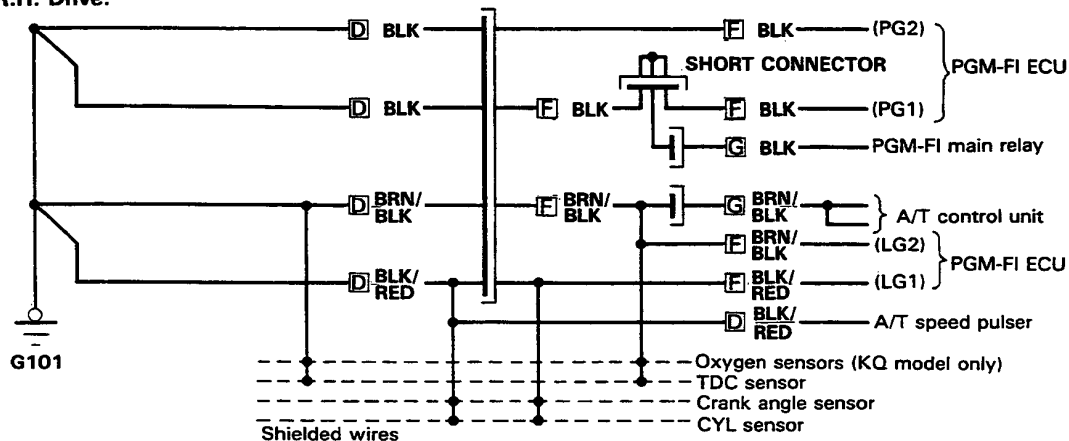

A: Battery ground wire
B: Engine ground wire A
C: Engine ground wire B

D: Engine wire harness
E: Right engine compartment wire harness
F: Left engine compartment wire harness

G: Main wire harness


(cont'd)

Ground Distribution


Circuit Identification

NOTE: See pages 16-8 and 10 for illustrated ground locations.

Except KX, KS, KY models:

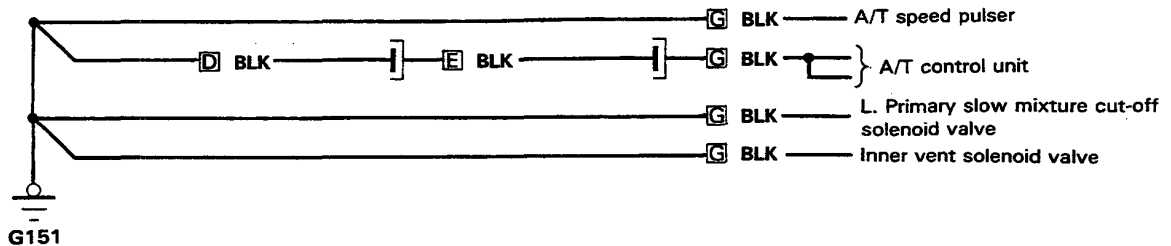

KX, KS, KY models:

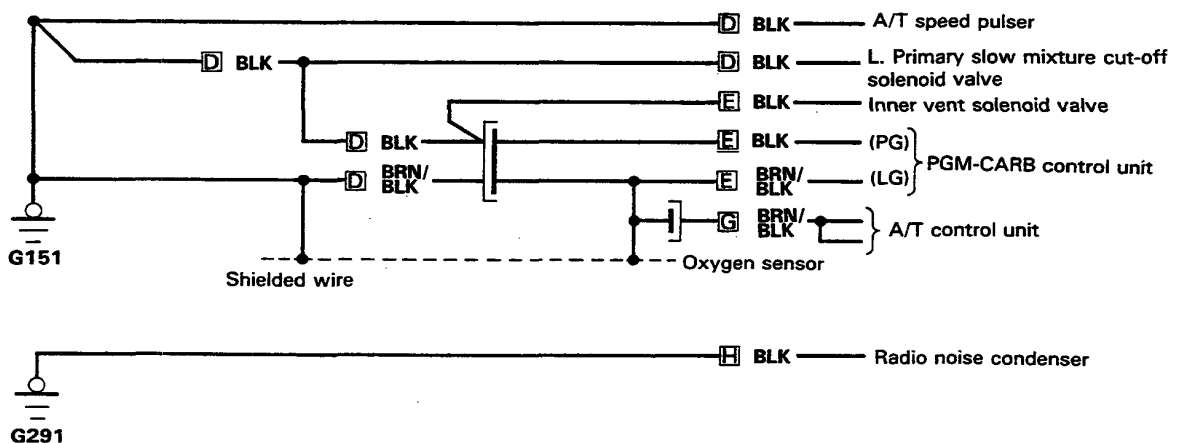


- D: Engine wire harness
- E: Right engine compartment wire harness
- G: Main wire harness
- H: Radio condenser ground wire (On Carbureted engine, this wire is included in the distributor primary lead)



L.H. Drive:

NOTE: See page 16-11 for illustrated ground locations.

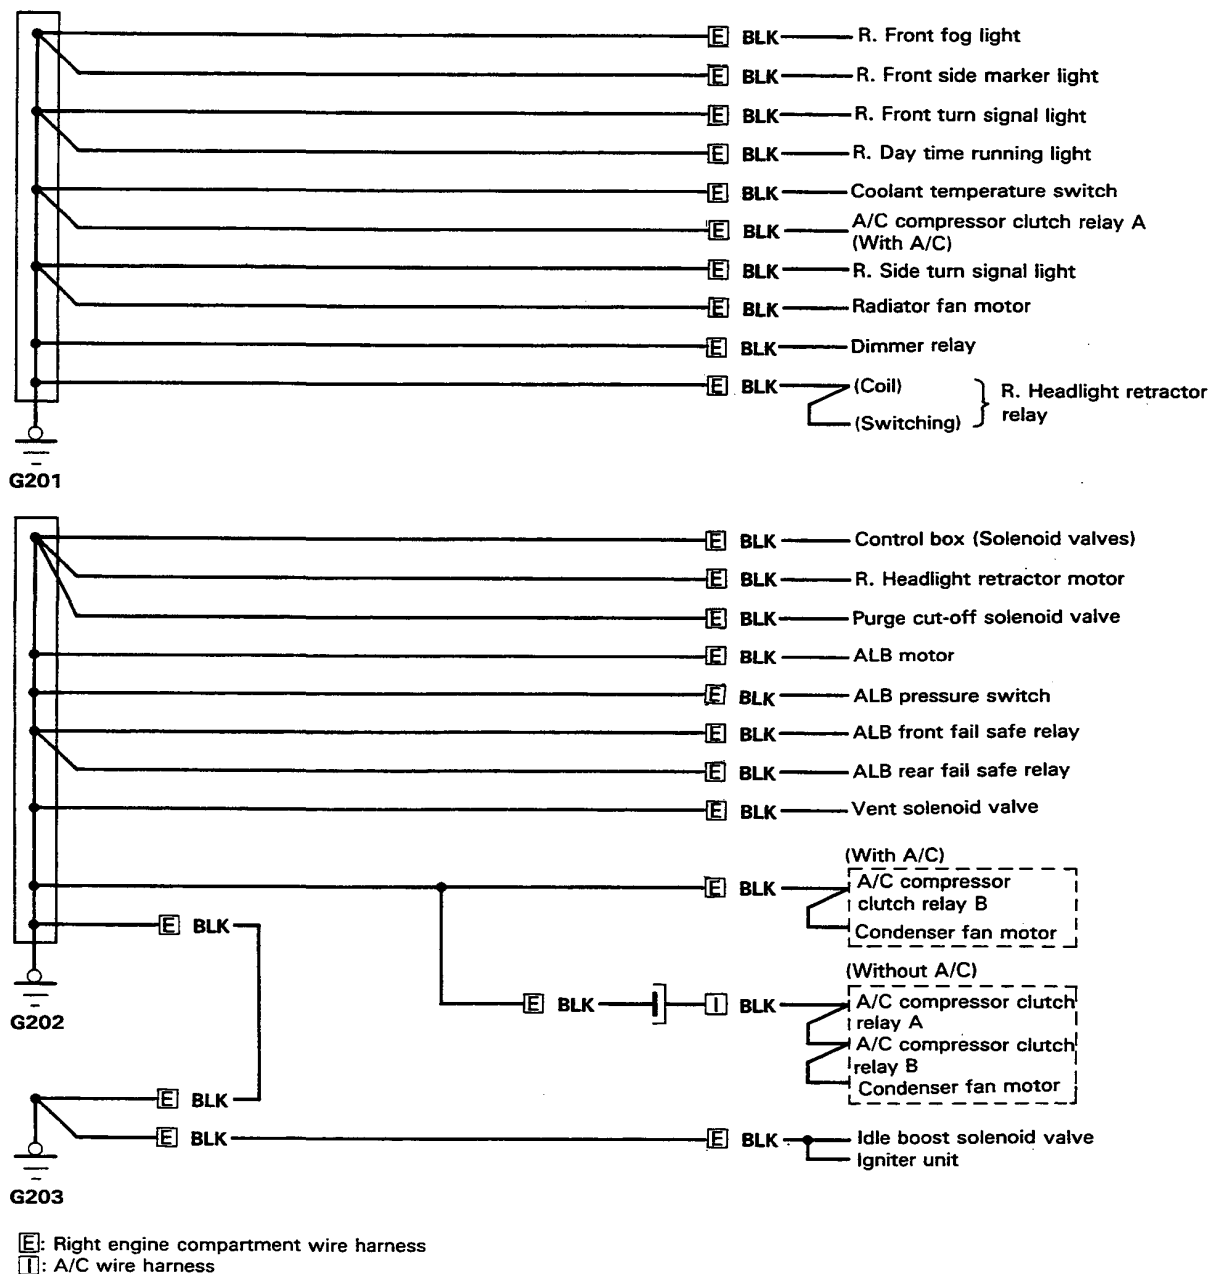


(cont'd)

Ground Distribution

Circuit Identification (cont'd)

R.H. Drive:


NOTE: See page 16-11 for illustrated ground locations.

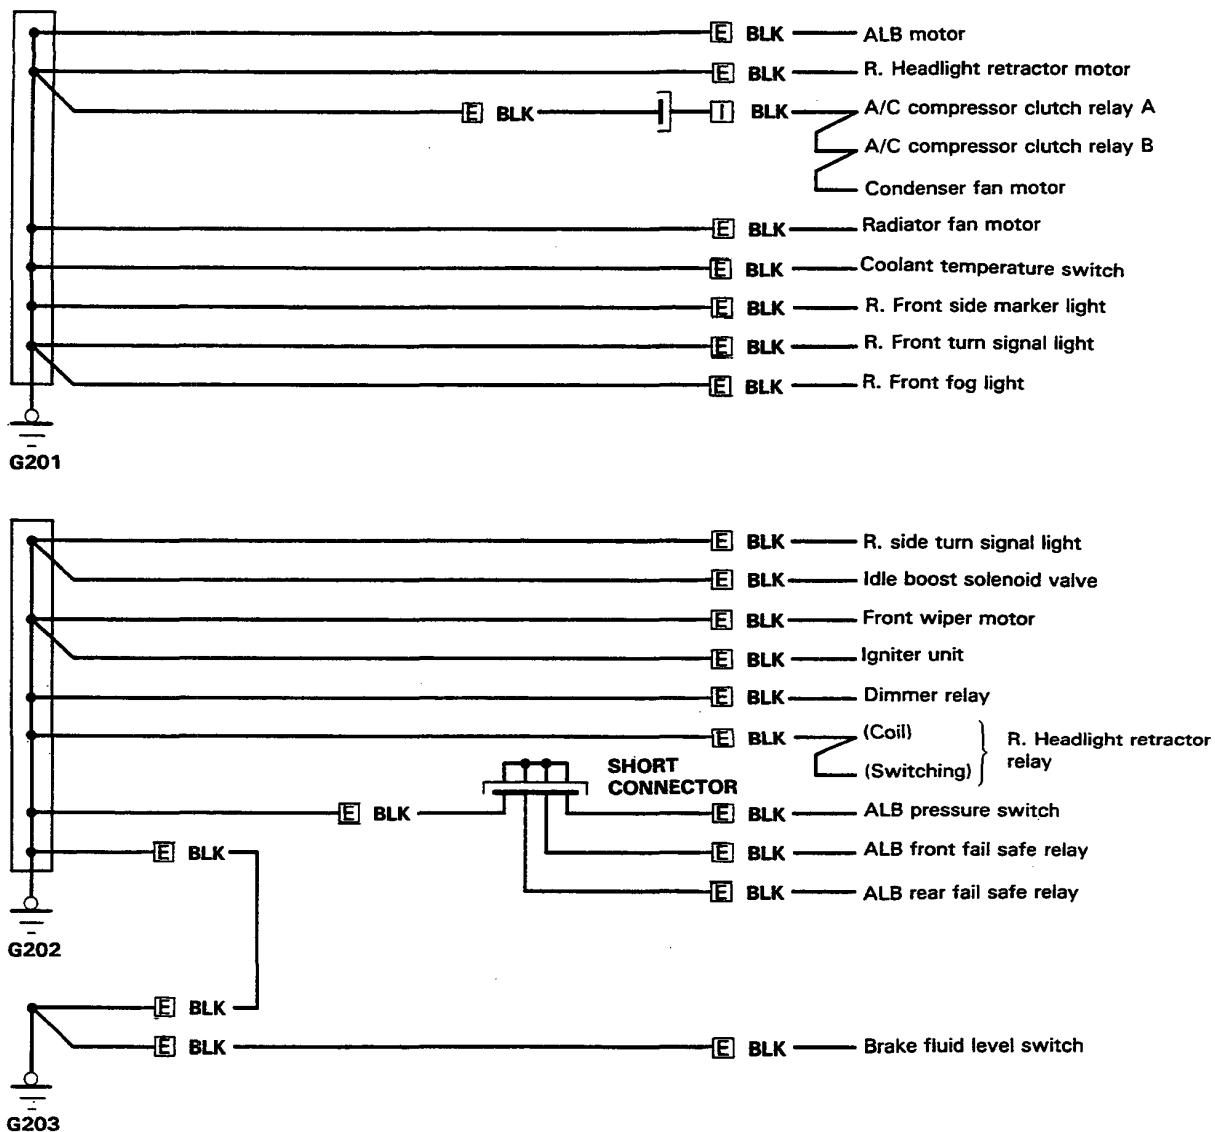




NOTE: See page 16-12 for illustrated ground locations.


L.H. Drive:

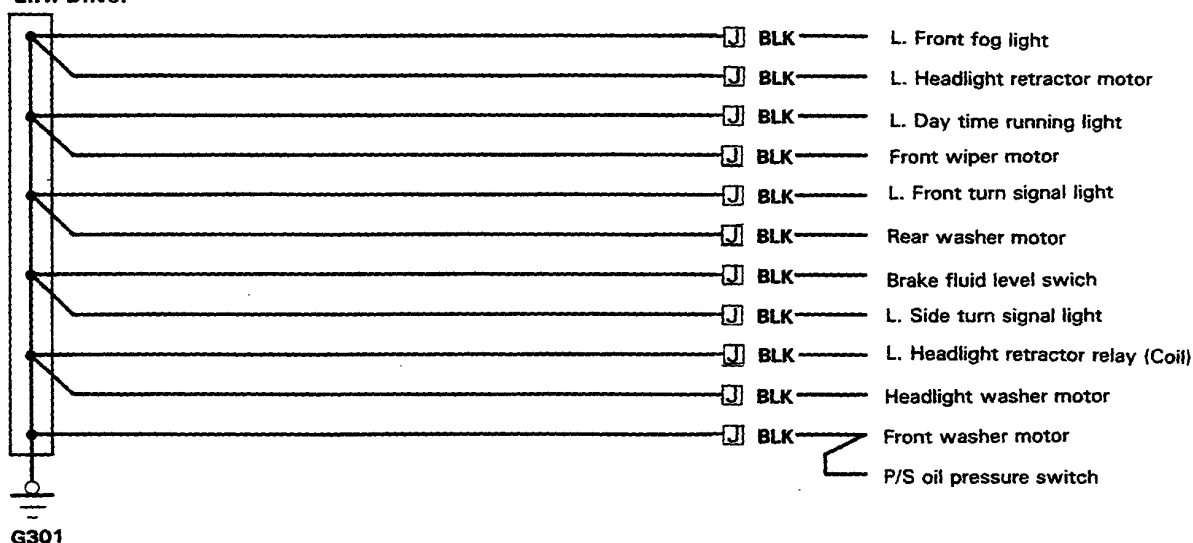

L.H. Drive:

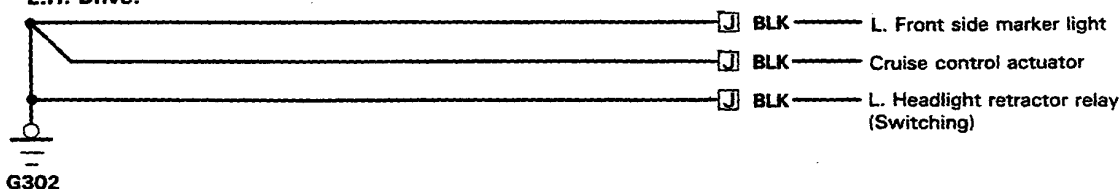

R.H. Drive:

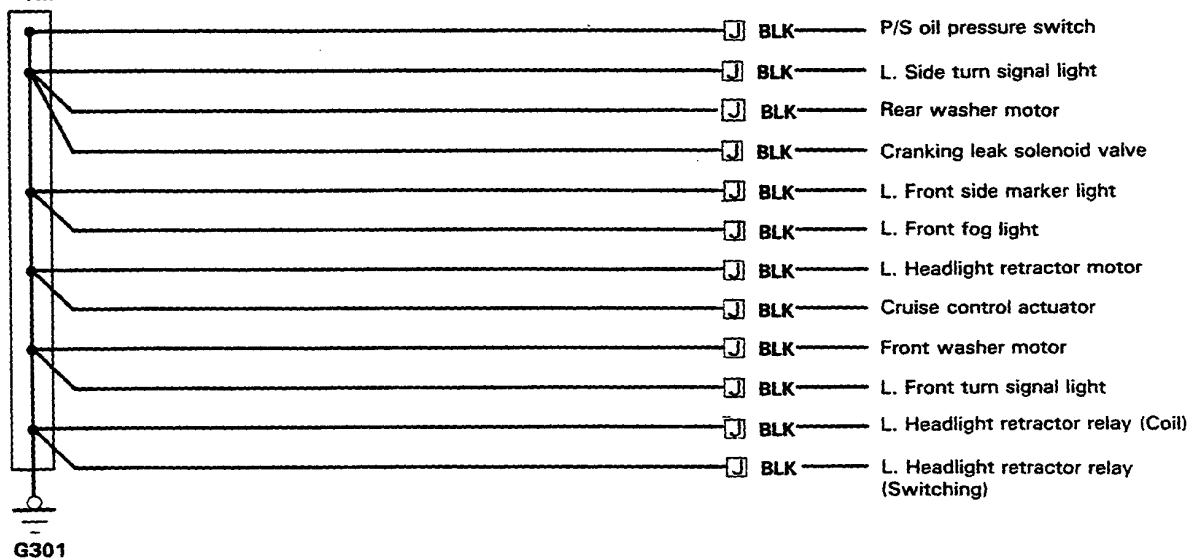

Left engine compartment wire harness


(cont'd)

Ground Distribution

Circuit Identification (cont'd)

L.H. Drive:

NOTE: See pages 16-13 and 14 for illustrated ground locations.

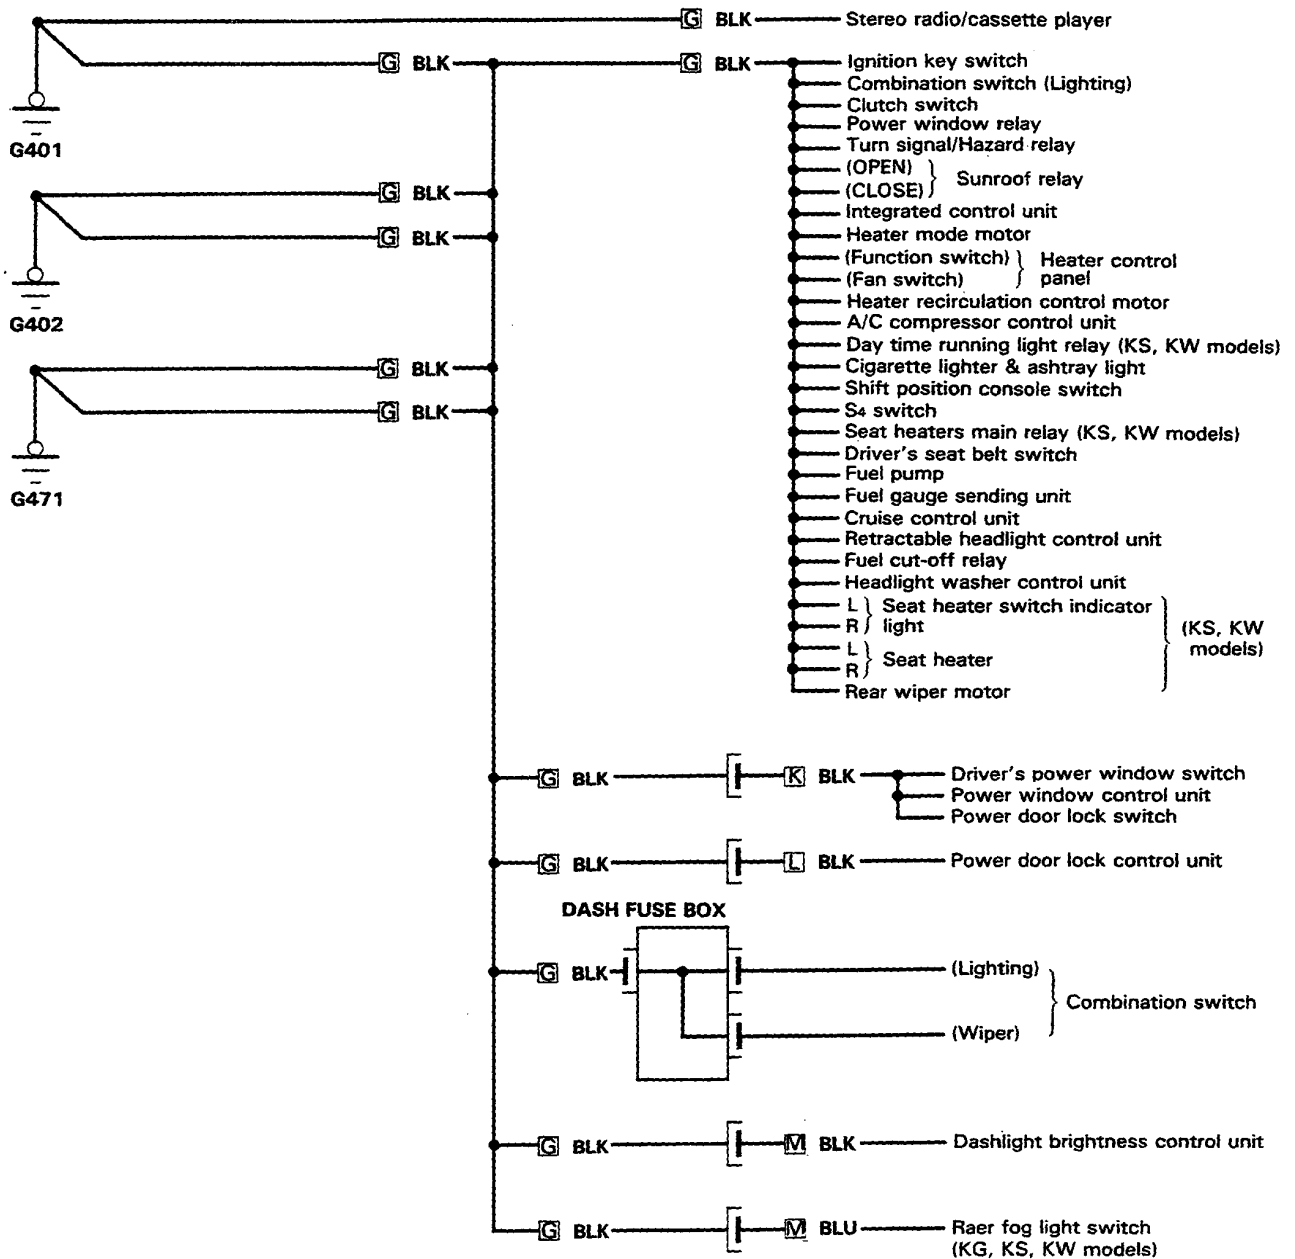


- G: Main wire harness
- K: Driver's door wire harness
- L: Passenger's door wire harness
- M: Dashboard wire harness



R.H. Drive:

NOTE: See pages 16-13 and 14 for illustrated ground locations.

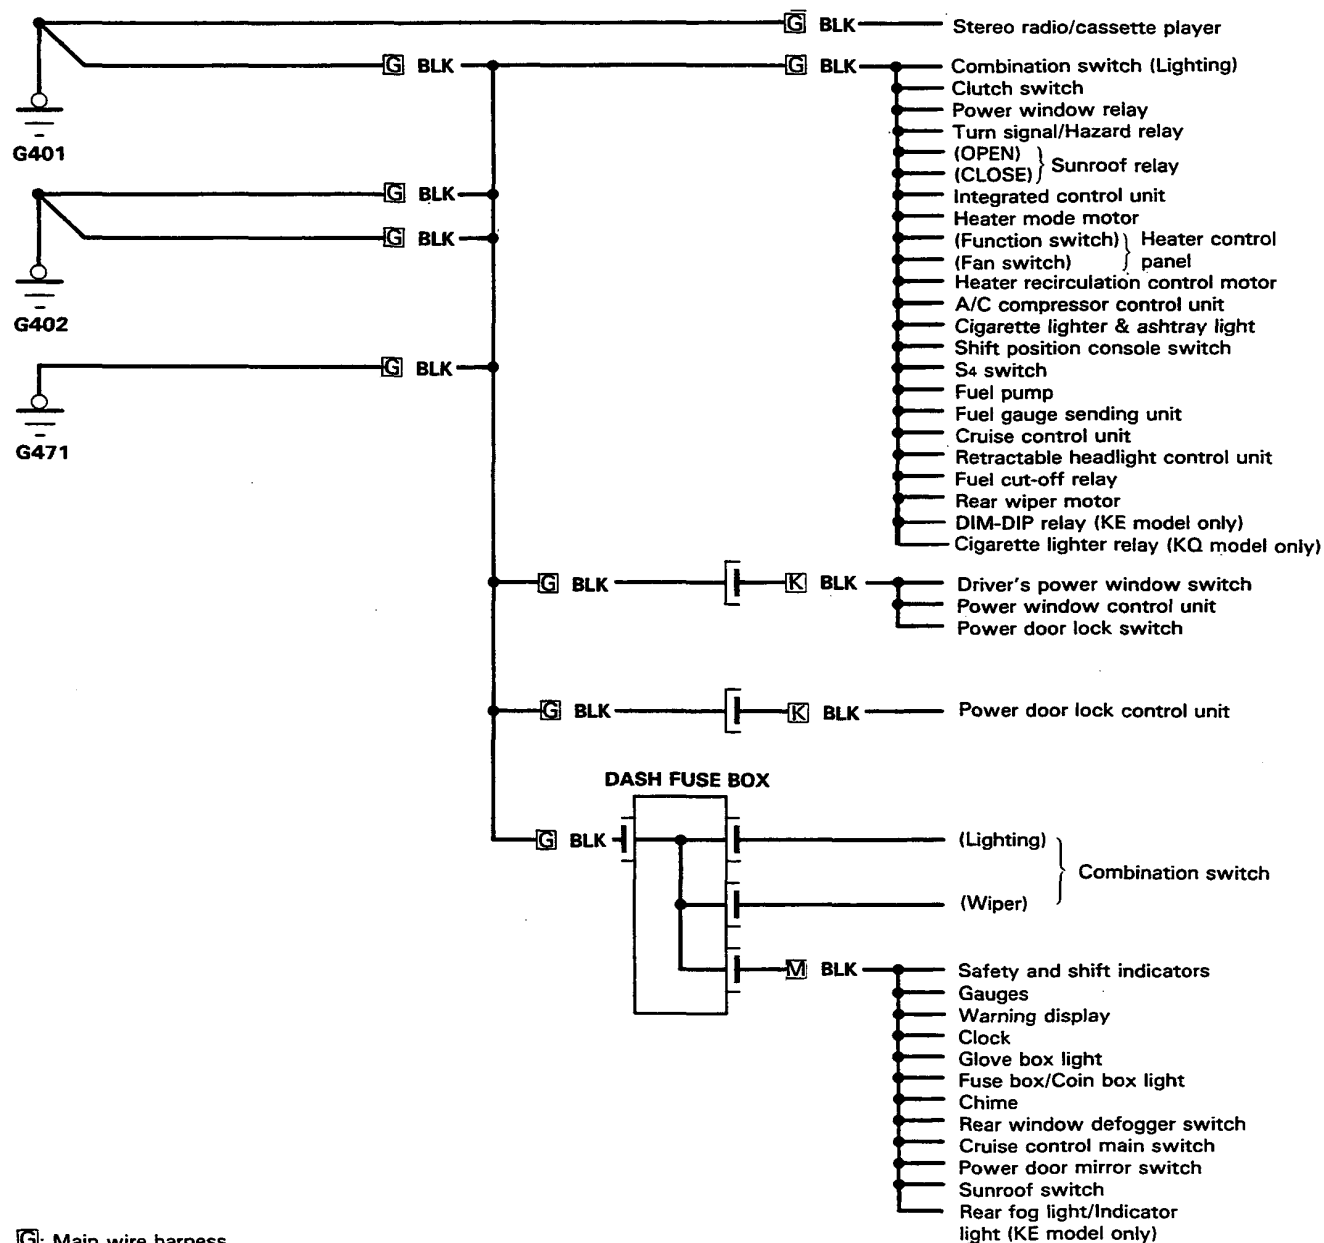

- G:** Main wire harness
- K:** Driver's door wire harness
- L:** Passenger's door wire harness
- M:** Dashboard wire harness

(cont'd)

Ground Distribution

Circuit Identification (cont'd)

NOTE: See pages 16-14 and 16 for illustrated ground locations.

