


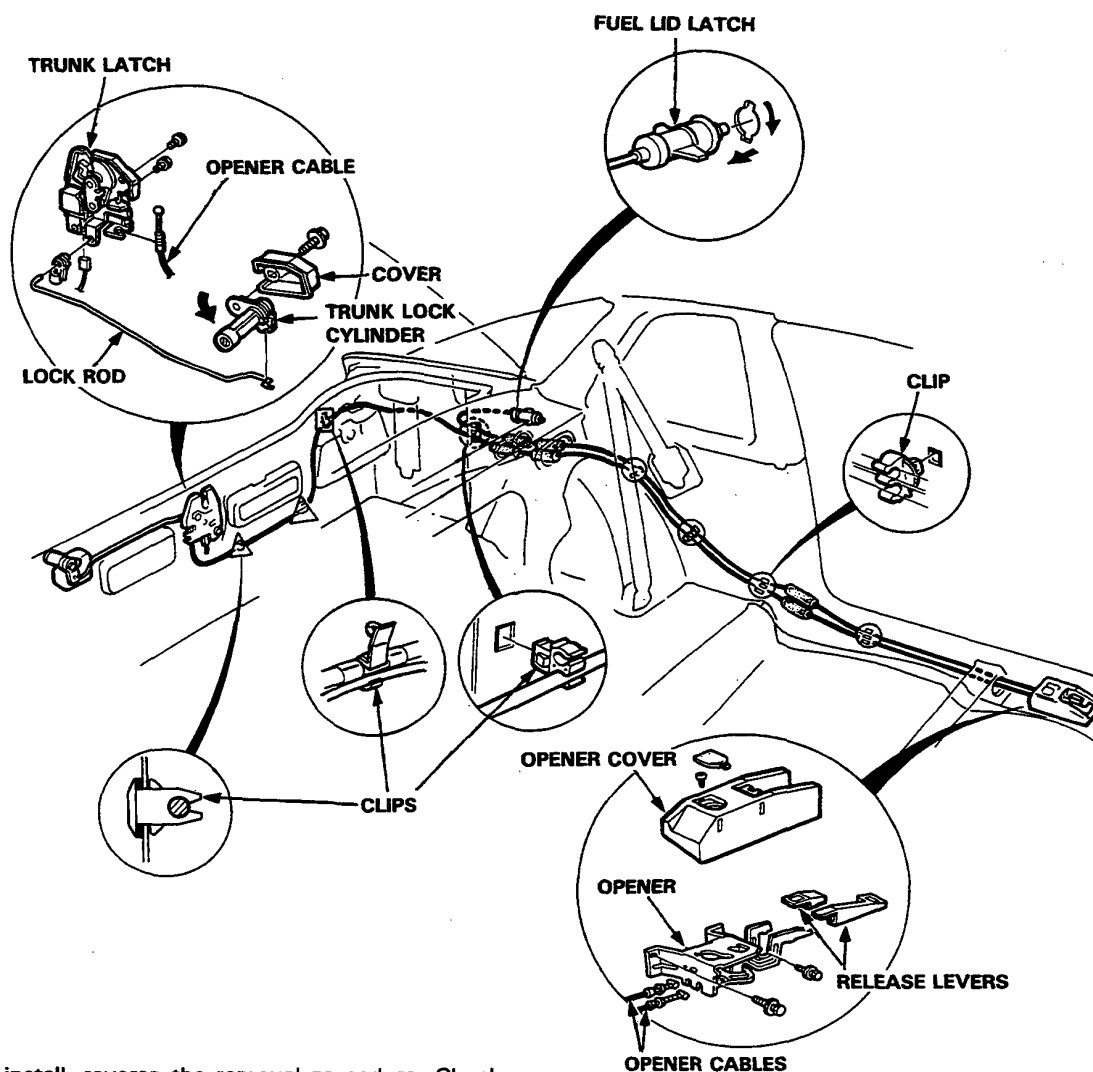

Fuel Filler/Trunk Opener

Replacement

1. To remove the opener cables, remove the following parts:
 - Left side door sill molding, left half of floor mat.
 - Left quarter trim panel, and left trunk side panel.
2. Remove the screw and the release levers, then remove the opener cover. Remove the opener by removing the 2 bolts.
3. Remove the fuel lid latch by turning it 90°.
4. Remove the bolts, then remove the cover and trunk lock cylinder.
5. Remove the 2 bolts, then remove the trunk latch.
6. Disconnect the opener cable, connector and lock rod.



7. To install, reverse the removal procedure. Check that the trunk lid and fuel lid opener cables are routed and connected properly.