


# Knuckle/Hub


## Bearing Removal

NOTE: Replace the bearing with a new one after removal.

1. Remove the splash guard and 78 mm circlip from the knuckle.
2. Press the wheel bearing out of the knuckle using a hydraulic press and the special tools shown below.

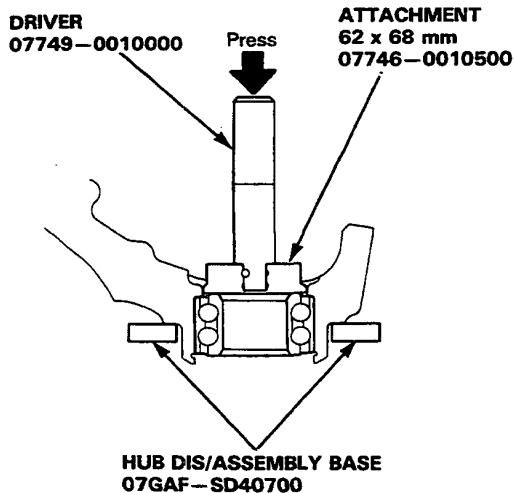


3. Remove the outboard bearing inner race from the hub using a bearing puller and the special tools shown below.

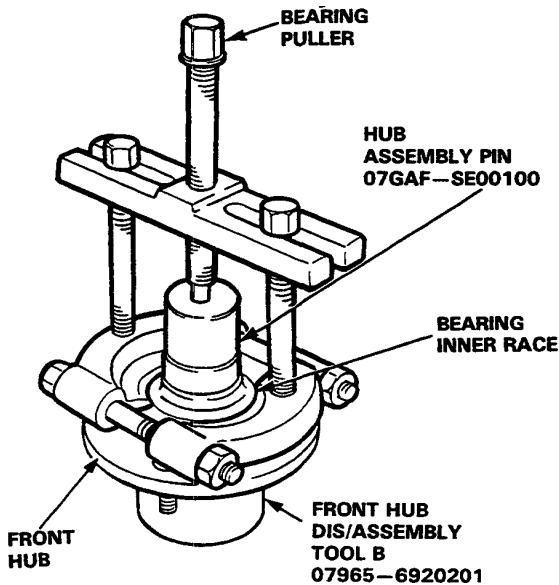

NOTE: Wash the knuckle and hub thoroughly before reassembly.

## Reassembly

1. Press a new wheel bearing into the hub using a hydraulic press and the special tools shown below.

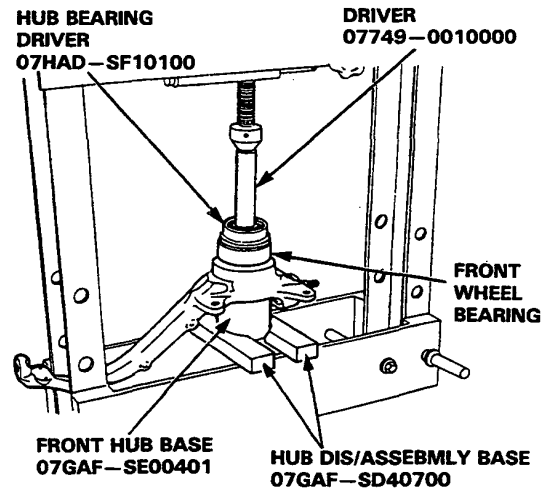

2. Install the 78 mm circlip securely in the knuckle groove.

