




Noise and Vibration

NOTE: Pump noise in first 2—3 minutes after starting in cold weather (– 20°C, – 4°F or colder) is normal.

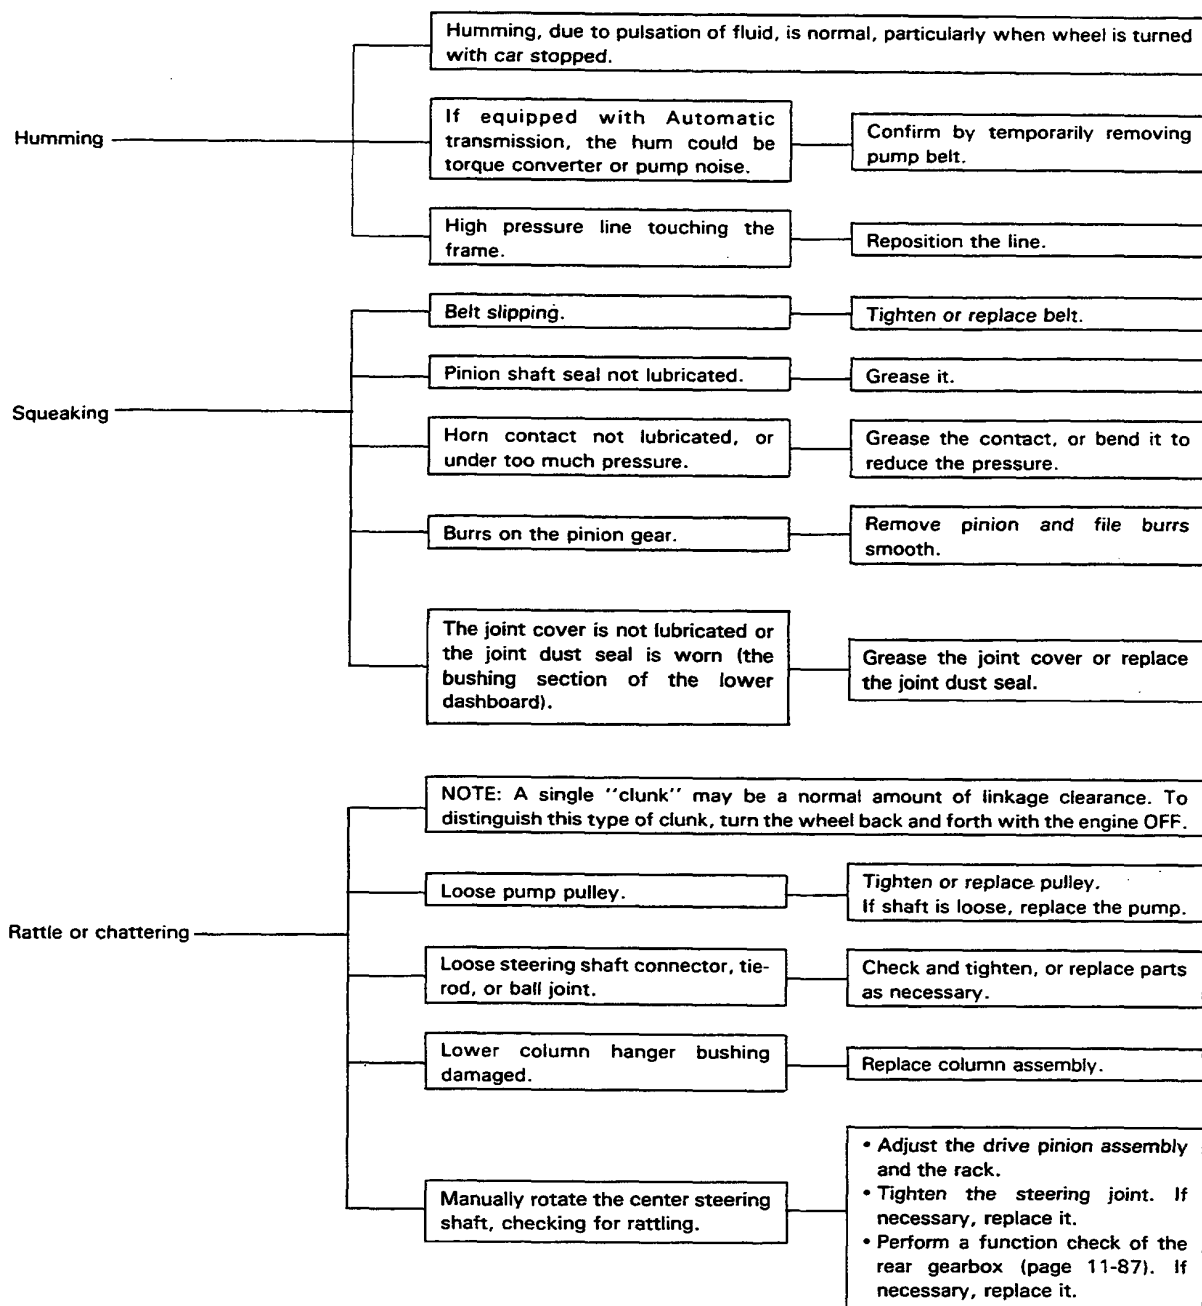

(cont'd)

Troubleshooting (4WS)

Noise and Vibration (cont'd)

