


# Dome Light

## Removal


1. Turn the light switch OFF.
2. Pry off the lens.
3. Remove the 2 nuts and the housing.
4. Disconnect the 3-P connector from the housing.

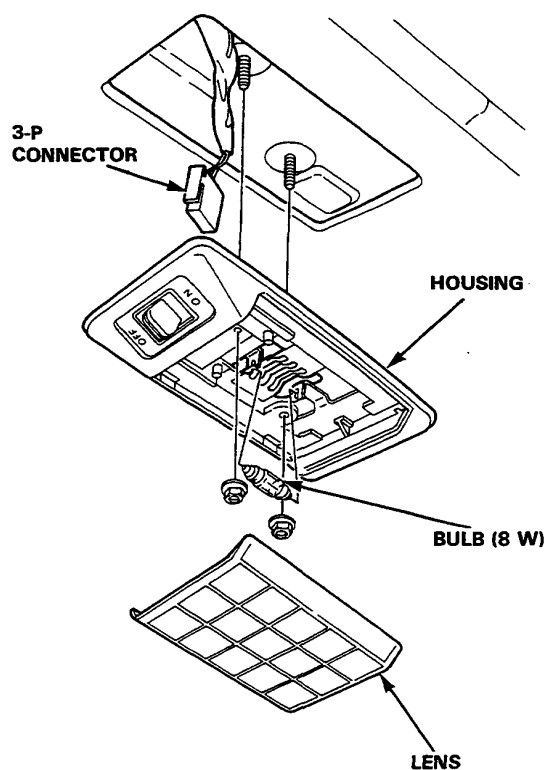


## Test

1. Remove the dome light.
2. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	A	B or B'	C		D
OFF			○	○	○
MIDDLE		○	○	○	○
ON	○		○	○	○

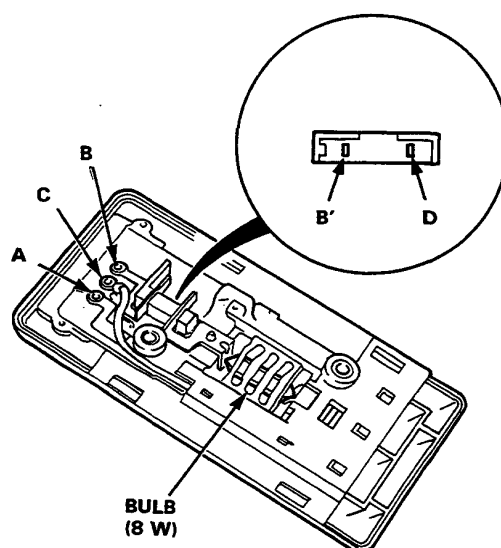

From No. 8 (15 A) FUSE  
D

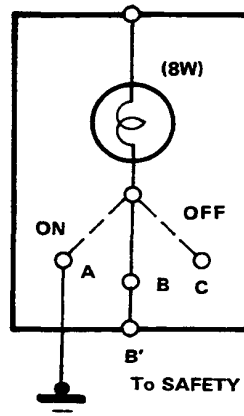

To SAFETY INDICATOR

At MOUNTING NUT