


# PGM-FI Control System


## TDC/CRANK Sensor Replacement

1. Remove the distributor (section 16).
2. Remove the distributor cap from the distributor housing (TDC/CRANK sensor).

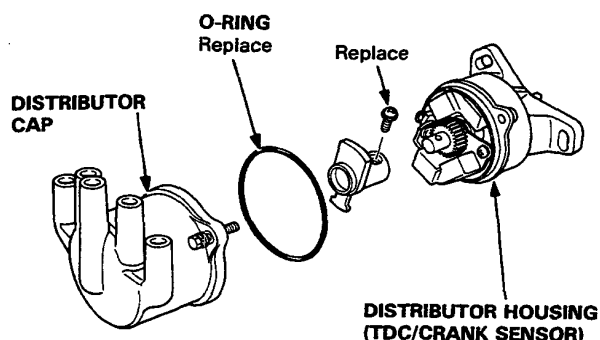


3. Carefully pry up the TDC and CRANK rotors by using two screwdrivers as shown. Do not damage the rotors.


### <CRANK ROTOR>

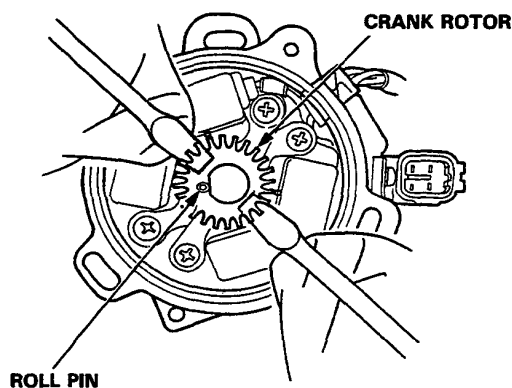

### <TDC ROTOR>

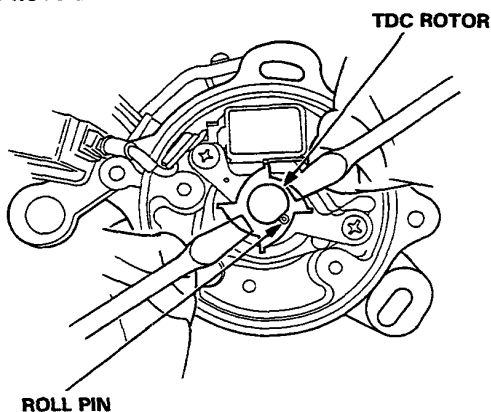


4. Remove the TDC/CRANK coil assembly.

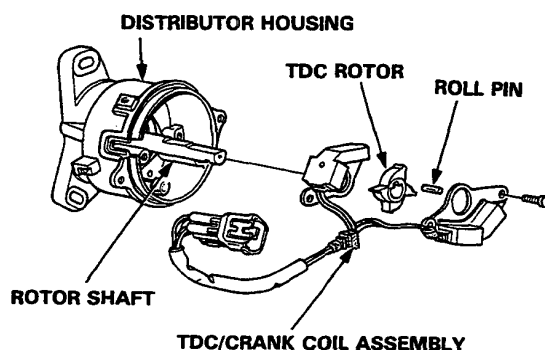


5. Install a new TDC/CRANK coil assembly on the distributor housing.
6. Install the TDC and CRANK rotors as shown.

### <TDC ROTOR>

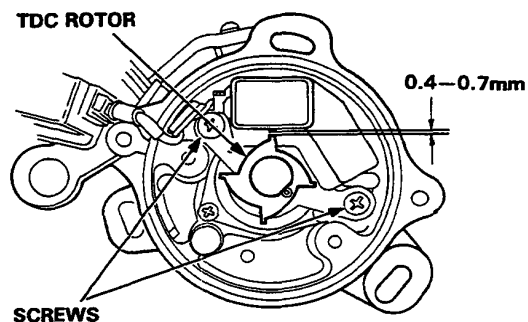

### <CRANK ROTOR>

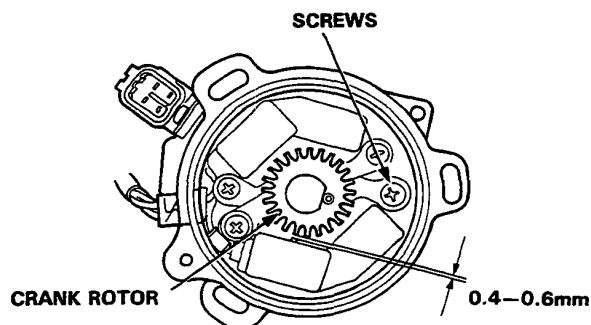

NOTE: Install the rotors with their part numbers facing up.

7. Install the distributor cap to the distributor housing.
8. Install the distributor (section 16).