


# Electronic Components

## Control Unit Replacement

1. Remove the cover that is mounted in front of the console.
2. Remove the control unit mounting bolts, then remove the control unit.

### CAUTION:

- When the control unit mounting bolts are removed, the control unit's memory is cleared.
- Handle the control unit with care. Do not drop it.

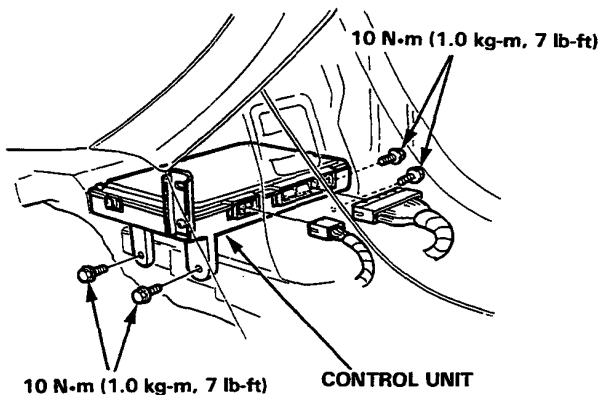


Installation is the reverse order of removal.

NOTE: Turn the ignition switch on and check the **ALB** warning light for operation.

## Relay Inspection

1. Check for continuity between the terminals A and B.  
There should be no continuity.
2. Connect a 12 V battery across the terminals C and D.  
There should be continuity between the terminals A and B.

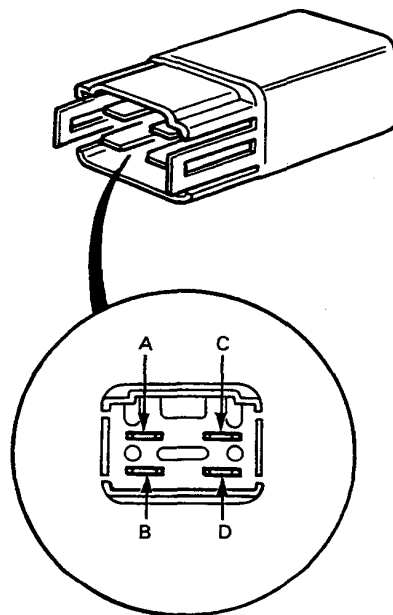

### RELAY CIRCUIT

